
 
 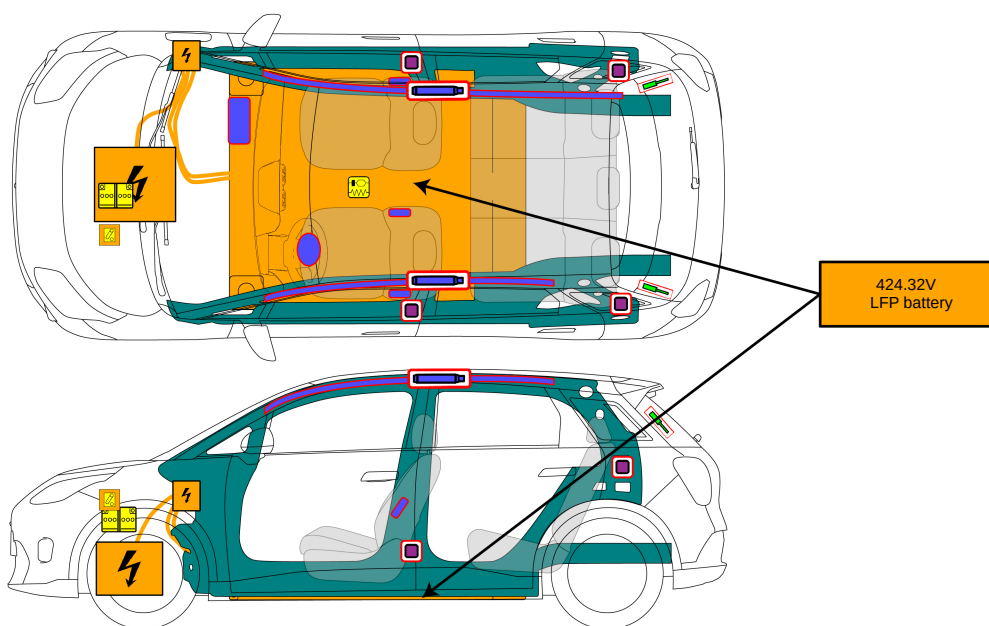




NOTE: Pictures in this document apply to Left-Hand cars. Unless special notes, Right-Hand cars are mirror symmetry.

	Airbag		Stored gas inflator		Seat belt pretensioner
	Gas strut / Preloaded spring		High strength zone		SRS control unit
	Battery low voltage		High-voltage power cable		High-voltage component
	Battery pack, high-voltage		Low voltage device that disconnects high voltage		

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.



2. Immobilisation / stabilisation / lifting


A: Immobilise the vehicle



1. Apply the parking brake.
Select "P" gear.
Remove the electronic key, and ensure it is 4 meters distance from the vehicle.

2. Block the wheels.

B: Lifting Points

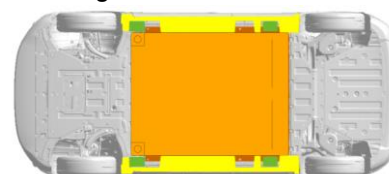

- Appropriate stabilisation-lifting points
- Appropriate stabilisation points vehicle on side
- High voltage battery



After parking, leave the vehicle and take all the keys with you. Close all the doors and lock the vehicle. To prevent accidental restart, make sure the smart key is kept at least 4 meters away.




3. Disable direct hazards / safety regulations

When the airbag deploys, the vehicle will automatically cut off the high voltage power, and the instrument panel SRS warning lamp and the electric power system fault indicator lamp will illuminate.





Wear appropriate personal protective equipment (rubber insulating gloves/insulating shoes/tools with protective insulating covers/goggles). Do not attempt to open the power battery!

MAIN DISABLING METHOD

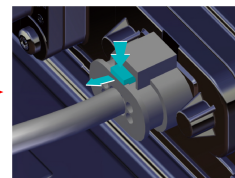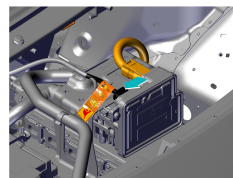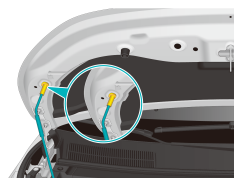

ACCESS to low voltage battery

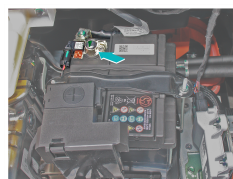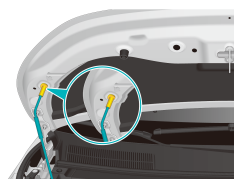


4. Access to the occupants



Front seat adjustment




Door outer handle

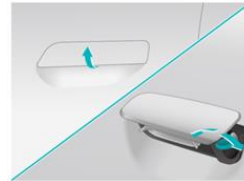

Unlock the door with a mechanical key



Open the liftgate

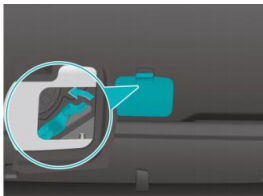

Emergency unlocking device for the liftgate



Steering wheel adjustment



Handle inside the door


Glass type

- ① Laminated glass
- ② Tempered glass



High-strength area of the body

High-strength areas as shown as follows.

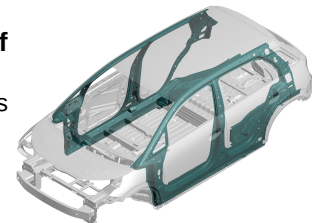

5. Stored energy / liquids / gases / solids

							12V
							424.32V
							850-950g



Wear appropriate personal protective equipment (rubber insulating gloves/insulating shoes/tools with protective insulating covers/goggles). Do not attempt to open the power battery!



6. In case of fire




If the vehicle catches fire, the instrument panel will display the message "Safely park, evacuate immediately" along with a beeping alert. Please safely park and move away from the vehicle immediately.



Use large amount of water



BATTERY RE-IGNITION!

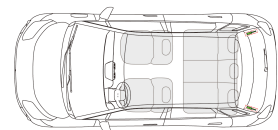

Gas struts/pre-tensioning springs pose an explosion risk!

7. In case of submersion

Wear appropriate personal protective equipment. Remove the vehicle from the water and safely disconnect the high-voltage power supply as described in Chapter 3. Vehicles submerged in saltwater present a greater potential risk of power battery fire.


Tilt the vehicle to one side to let water drain from the vehicle and the power battery.

8. Towing / transportation / storage

Maintain a safe distance from other vehicles!



BATTERY RE-IGNITION!

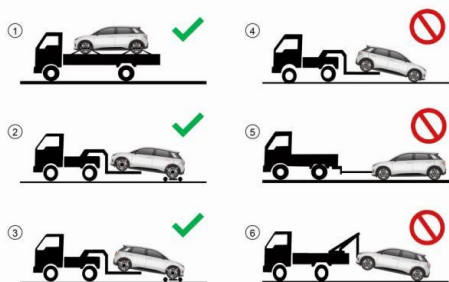

Vehicle transportation



Hook installation position

9. Important additional information

Manufacturer: GAC Aion New Energy Automobile Co., Ltd.

For more information, refer to the Emergency Response Guide

10. Explanation of pictograms used

	Electric Vehicle		Hazardous to the human health
	General warning sign		Acute toxicity
	Remove smart key		Warning, Electricity
	Bonnet		Air-conditioning component
	Flammable		Use thermal Infrared camera
	Explosive		Use wet foam to extinguish the fire
	Corrosives		