


 
 


 


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention
	Battery pack, high-voltage		High voltage power cable		High voltage component		

1. Identification / recognition



2. Immobilization / stabilization / lifting


Immobilization



Engine stop

 


No lift zone

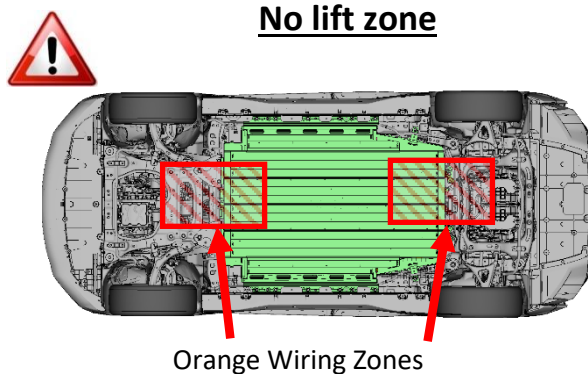

3. Disable direct hazards / safety regulations

12 Volt battery



Engine stop

Disconnect the (-) 12V batteries



Bonnet opening



400 Volt battery




Any activation of the airbag in frontal impact or the rear belt pre-tensioner in rear impact guarantees an automatic disconnection of the 400V battery:


No disconnection system => no manual action required



4. Access to the occupants

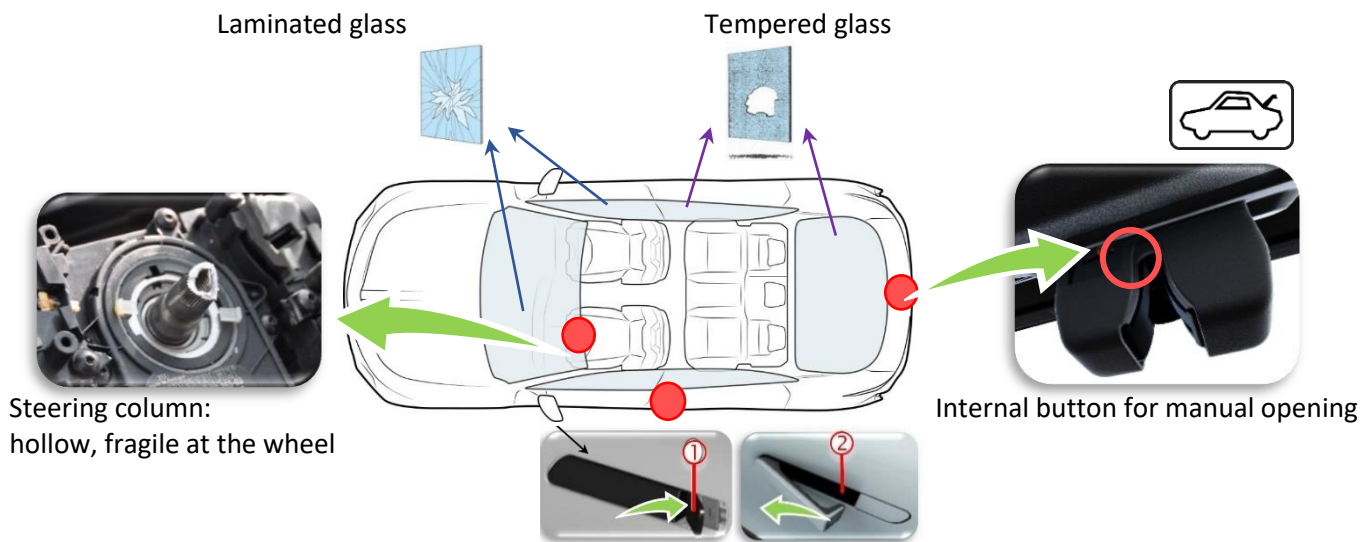


POSSIBLE SEAT MOVEMENTS

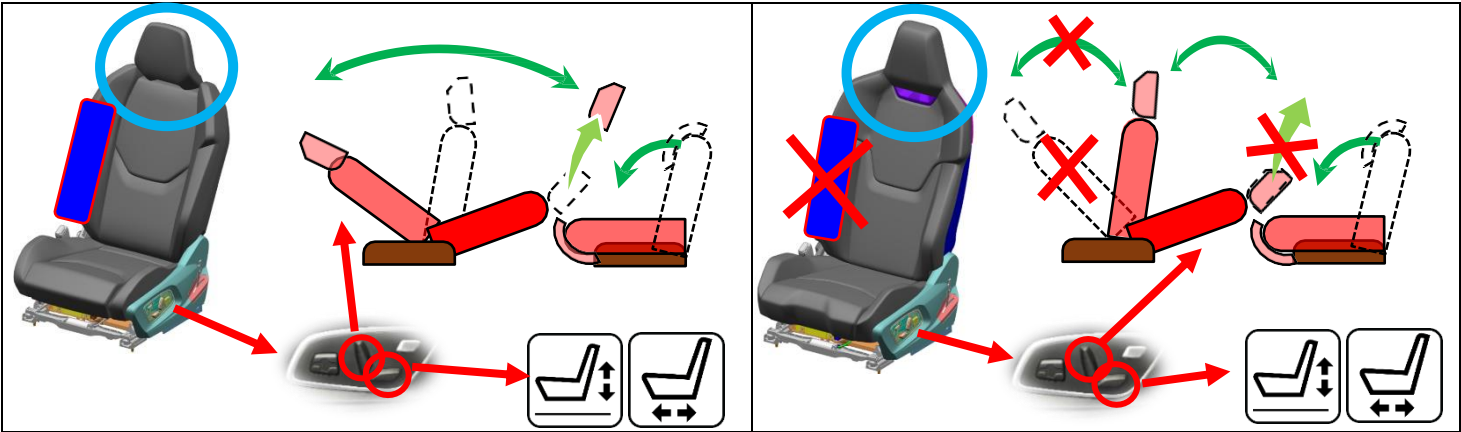


Possibility of connecting an external 12V power supply under the seat to operate the seat motors

REINFORCED STEELS

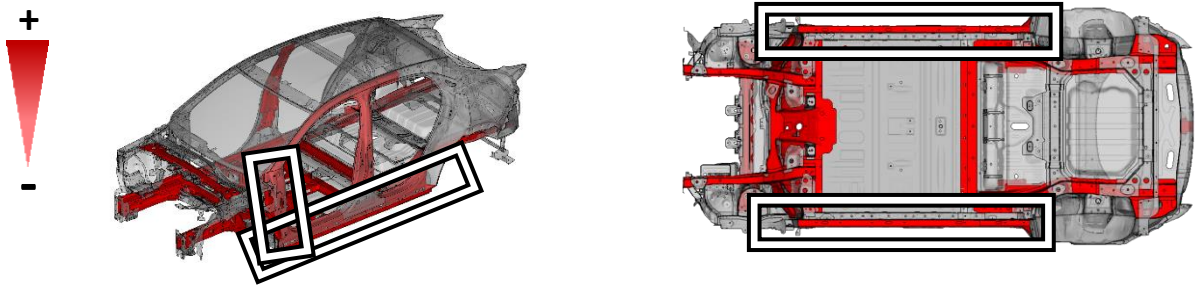




5. Stored energy / liquids / gases / solids

	Lithium-Ion	89 kW.h	400 V	Aluminum housing
---	-------------	---------	-------	------------------

6. In case of fire

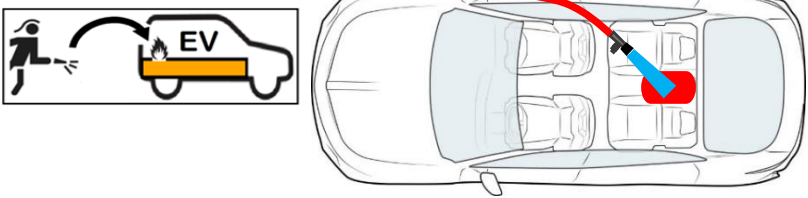


Vehicle fire without thermal runaway of the high-voltage battery	Vehicle fire with thermal runaway of the high-voltage battery
<ul style="list-style-type: none">Extinguish the vehicle fire.Monitor the temperature of the high-voltage battery. 	<ul style="list-style-type: none">Extinguish the vehicle fire.Extinguish the high-voltage battery fire with water through the dedicated "Fireman Access" port.Continue to cool the high-voltage battery through the "Fireman Access" port for at least 10 minutes.Monitor the temperature of the high-voltage battery.  

GAS SPRINGS



Risk of missile effect of cylinders

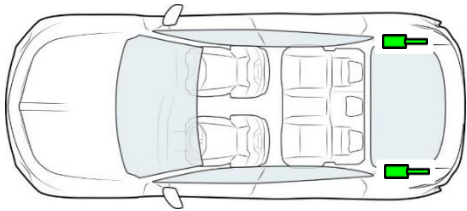

7. In case of submersion











No electrical risk
After removing the vehicle from the water: disconnecting the 12 Volt battery

8. Towing / transportation / storage



10. Explanation of pictograms used

 Electric Vehicle	 Bonnet	 Boot
 Use thermal Infrared camera	 Special battery access	
 Respiratory system	 Use water to extinguish the fire	 Do not break or open