

Airbag	Ò	Stored gas inflator	Belt tensioner	SRS control unit	Gas strut / Preloaded spring
High strength zones	000 000	Low-voltage battery	Fuel tank, petrol or diesel		



1. Identification / recognition

Model designation on







Model designation at rear

2. Immobilisation / stabilisation / lifting


Immobilising the vehicle

- Press the P button on the right-hand steering column switch
- 2 Apply parking brake

Secure the vehicle to prevent it from rolling away



Lifting points

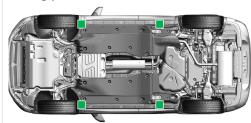

Appropriate lifting points

3. Disable direct hazards / safety regulations

Switching off the ignition



• Press the "Start-Engine-Stop" button in the centre console without operating the foot brake.




Remove vehicle key, key card and/ or smartphone app so that they are more than 5 m away from the vehicle if possible.

Disconnecting the 12-volt vehicle battery in the engine compartment





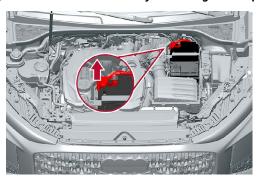

Locate the 12-volt vehicle battery
Disconnect the negative terminal (-)

 Additional information
 Document number
 Version
 Page

 rds_au_336_021_en
 01 (06/2025)
 2 of 4



Disconnecting the 48-volt battery in the passenger compartment (48-volt optional, depending on drive variant)


In the event of an accident in which the airbag is triggered, the 48-volt vehicle electrical system is automatically deactivated as soon as airbag triggering is detected.



In all other cases, the 48-volt vehicle electrical system is deactivated after approx. 10 seconds if the following procedure is followed:


- Ignition off
- 2 Disconnect 12-volt vehicle battery

Procedure for completely disconnecting the 48-volt battery:

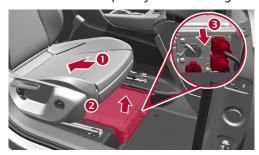

- Move the right seat all the way back
- Remove the battery cover in the footwell on the right side of the vehicle
- Obsconnect the connector

4. Access to the occupants

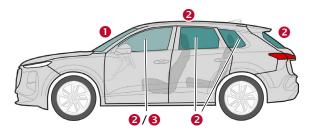

Glass types:

- Laminated glass
- 2 Tempered glass
- 3 Laminated glass (optional)

5. Stored energy / liquids / gases / solids









max. 63 l











12 V











48 V

Lithium-ion (optional)

6. In case of fire













Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures! Wear appropriate personal protective equipment!



7. In case of submersion

After recovery, allow the water to drain and disconnect the battery/batteries (see section 3). Wear appropriate personal protective equipment!

Additional information Document number Version Page rds_au_336_021_en 01 (06/2025) 3 of 4



8. Towing / transportation / storage



Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!



9. Important additional information

Further information can be found in the Audi guideline for rescue services at www.audi.com/rescue

10. Explanation of pictograms used

