

2. Immobilisation / stabilisation / lifting

Immobilisation

1. Press the "Start / Stop" button to switch off the vehicle





2. Automatic transmission:


2. Manual transmission: Shift to first gear

3. Pull up parking brake





Stabilisation / lifting points

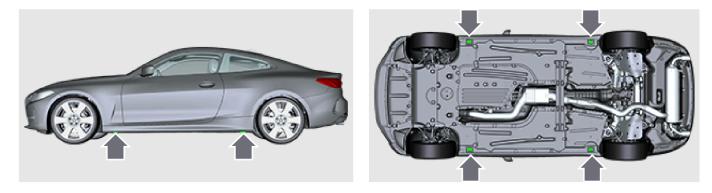


3. Disable direct hazards / safety regulations

4. Access to the occupants

Interfaces

- 1 Interfaces in order to remove the roof 2 Door lock
- 3 Door hinge

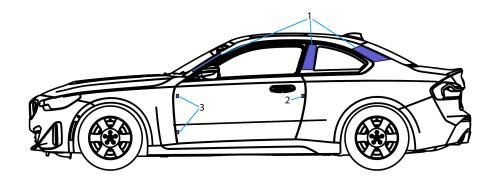

5. Stored energy / liquids / gases / solids

Fuel

Diesel engine: Diesel DIN EN 590 Petrol engine: Petrol 91 – 100 RON

6. In case of fire



There is still a danger of injury even after a fire!

Use personal protective equipment identical to that for conventional vehicle fires.

7. In case of submersion

Vehicle in and under water

After the vehicle has been recovered from the water, disconnect the low-voltage battery (negative terminal).

8. Towing / transportation / storage

Use only the towing eye provided in the vehicle and screw in firmly to the limit position.

Only use the towing eye for towing on a surfaced road. Avoid transverse loads on the towing eye. For example, do not raise the vehicle by the towing eye.





9. Important additional information

This document shows the maximum possible vehicle equipment.