


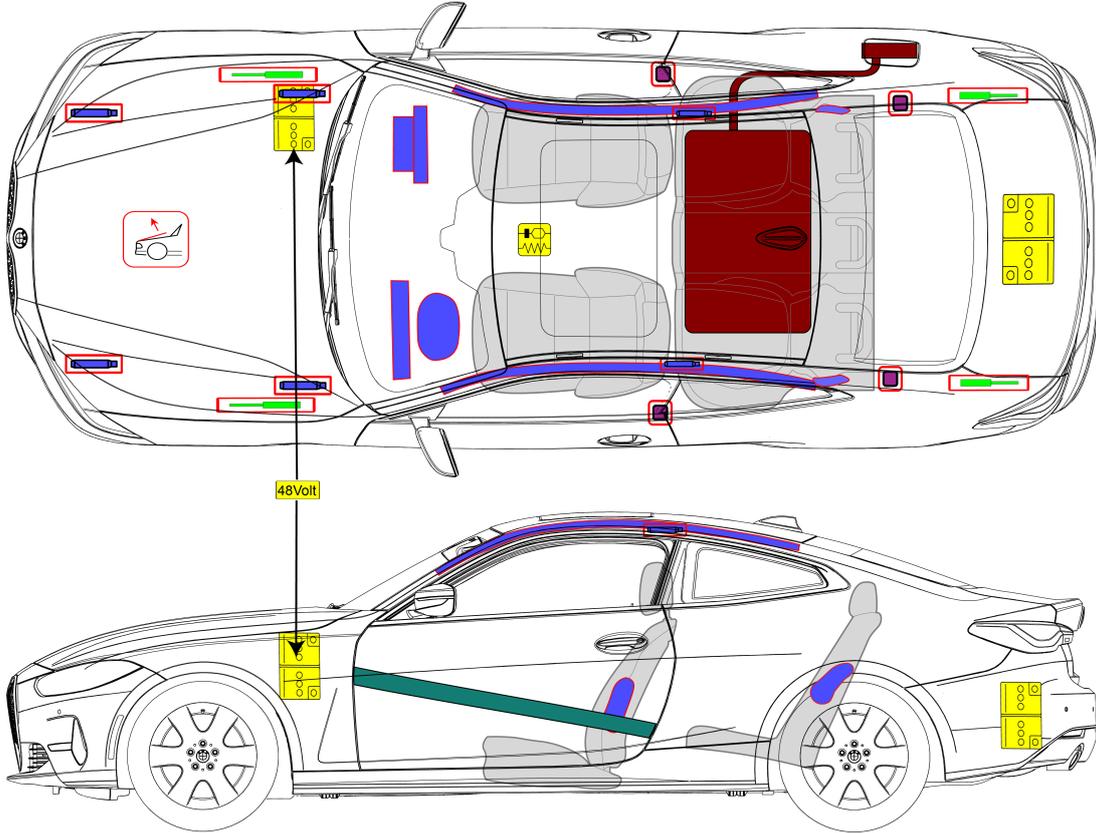

BMW 4er-Reihe G22
 Coupé
 07/2020



	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Gas strut / Preloaded spring		High strength zone		Battery low voltage 12V/48V ¹		Fuel tank content gasoline/ethanol		

¹Switch off the ignition to avoid the risk of an electric arc when disconnecting.

1. Identification / recognition

2. Immobilisation / stabilisation / lifting

Immobilisation

1. Press the "Start / Stop" button to switch off the vehicle



2. Automatic transmission: Press the "P" button





2. Manual transmission: Shift to first gear



3. Pull up parking brake



Stabilisation / lifting points

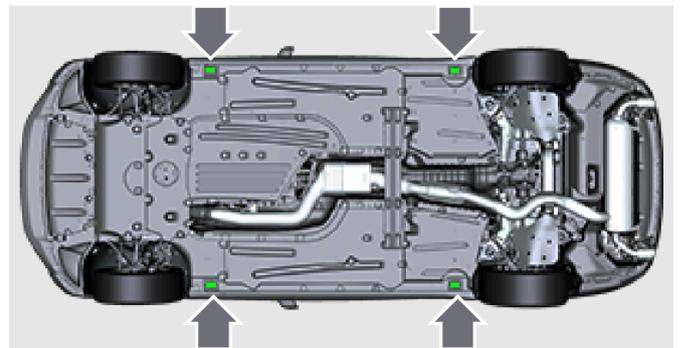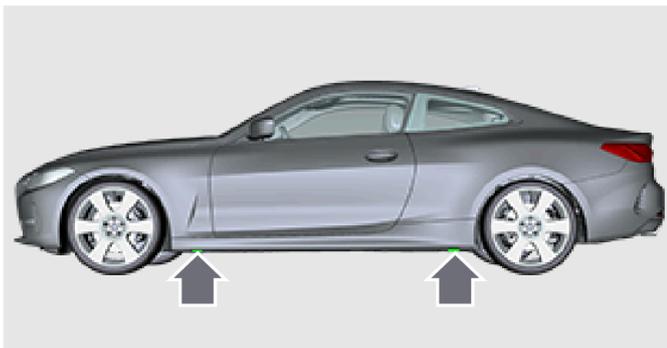


3. Disable direct hazards / safety regulations

4. Access to the occupants

Interfaces

- 1 Interfaces in order to remove the roof
- 2 Door lock
- 3 Door hinge

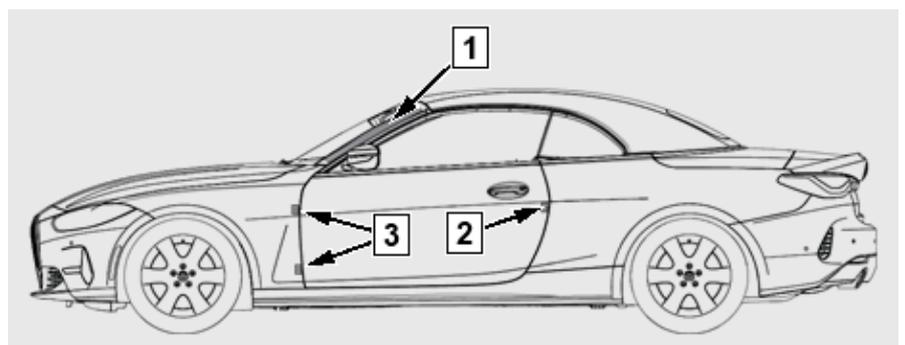

5. Stored energy / liquids / gases / solids

Identification of the high-voltage battery



Identification of the remaining high-voltage components



Fuel

Diesel engine: Diesel DIN EN 590
Petrol engine: Petrol 91 – 100 RON

6. In case of fire



Even after a fire there is an electrical risk. Danger of injury!
Use personal protective equipment identical to that for conventional vehicle fires.

7. In case of submersion

Vehicle in and under water

After the vehicle has been recovered from the water, disconnect the low-voltage battery (negative terminal).

8. Towing / transportation / storage



9. Important additional information

This document shows the maximum possible vehicle equipment.