




BYD SHARK

(4-door Pick-up, 2026-)

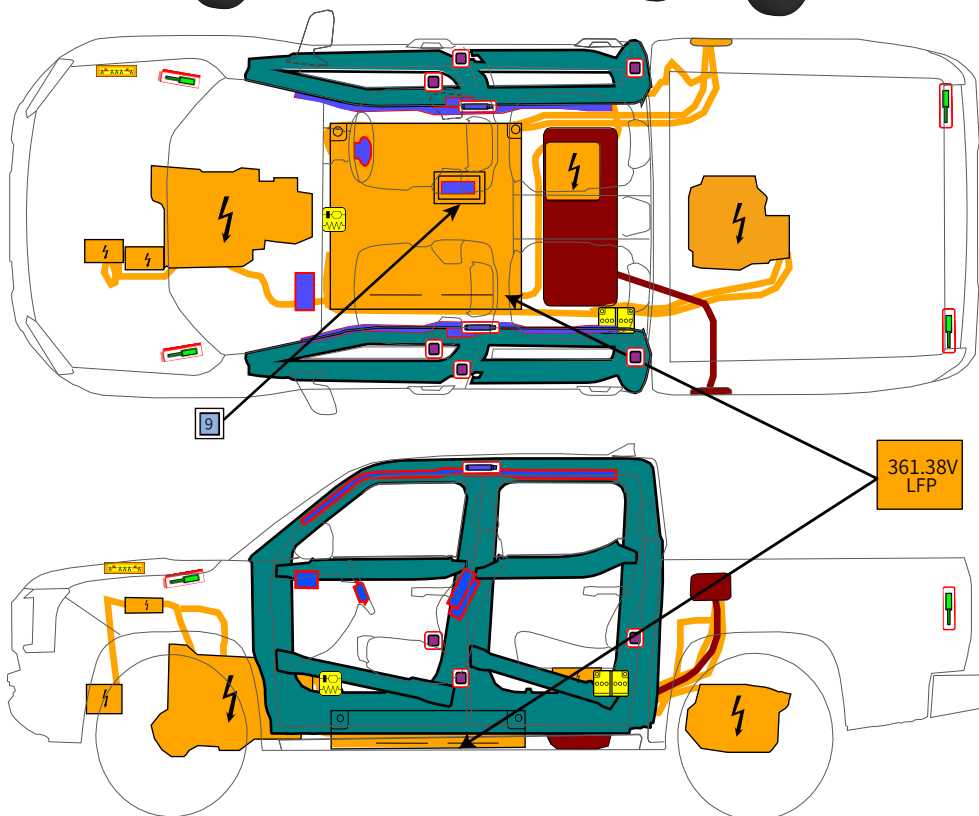


(RHD vehicle shown. The steering wheel and airbags are mirrored on LHD vehicles.)

	Airbag		Battery low voltage		Battery pack, high-voltage		Cable cut
	Fuel tank content gasoline/ethanol		Gas strut/Preloaded spring		High strength zone		High voltage component
	High voltage power cable		Seat belt pretensioner		SRS control unit		Stored gas inflator
	Zone requiring special attention						

1. Identification / recognition




The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.

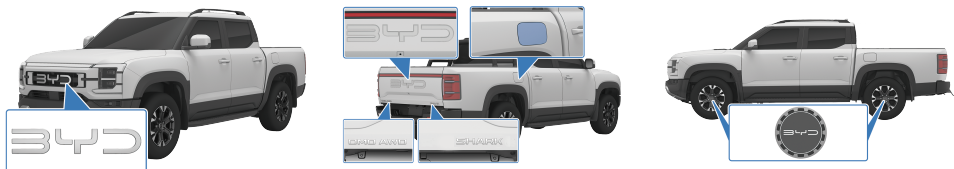


2. Immobilisation / stabilisation / lifting

Immobilise the vehicle

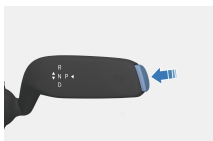


Shift into Park

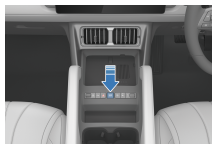

Turn off the ignition

 
Stabilisation-lifting points



■ Stabilisation-lifting points
■ High-voltage battery

3. Disable direct hazards / safety regulations


Main disabling method

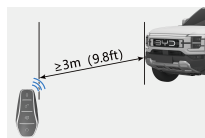

Alternative disabling method



Access to 12V battery

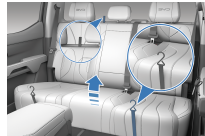

Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.




BYD SHARK

(4-door Pick-up, 2026-)



4. Access to the occupants


High strength zone

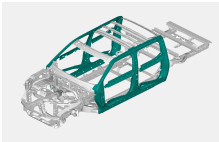

Seat adjustment




Steering column adjustment

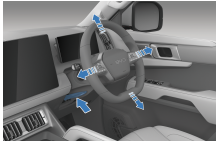

(Mirrored in LHD models)

Glass types

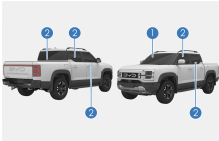

- ① Laminated glass
- ② Tempered glass

5. Stored energy / liquids / gases / solids

		12.8 V
		361.38 V
		Fluorinated greenhouse gases R1234yf: 950±20g CO eq 0.00048597t GWP 0.501



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!

7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.




8. Towing / transportation / storage

Front hook location



(Mirrored in LHD models)

Rear hook locations

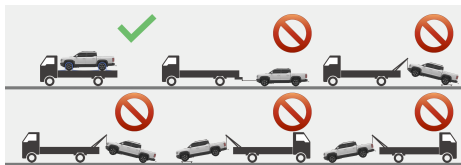

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Additional important information



Driver's seat has a far side airbag in addition to the side airbag.
Location of the far side airbag is shown in the mark  on page 1.

10. Explanation of pictograms used

	Acute toxicity		Air-conditioning component
	Bonnet		Corrosives
	Explosive		Flammable
	General warning sign		Hazardous to the human health
	Remove smart key		Use thermal Infrared camera
	Use water to extinguish the fire		Warning; Electricity
	Warning; low temperature		