


(5-door multi-purpose vehicle, 2023-)



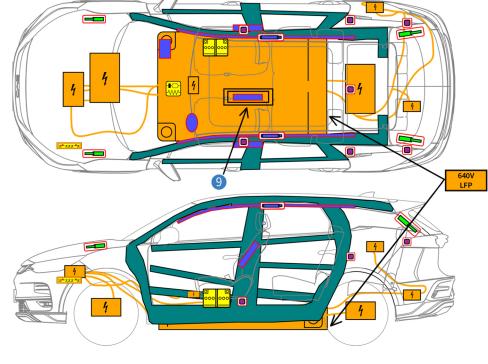

	Airbag		Stored gas inflator		Seat belt pretensioner
	Gas strut / Preloaded spring		High strength zone		SRS control unit
000	Battery low voltage	U	High voltage power cable	4	High voltage component
0 0	Battery pack, high-voltage	X X X X X	Cable cut		



(5-door multi-purpose vehicle, 2023-)



1. Identification / recognition



The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.



2. Immobilisation / stabilisation / lifting

Immobilise the vehicle



Engage EPB

(power meter "OFF")

Turn off the ignition

Stabilisation-lifting points



Stabilisation-lifting points High-voltage battery

3. Disable direct hazards / safety regulations

Main disabling method

 






Alternative disabling method







Access to 12V battery





Document number Rescue sheet BYD TANG 001 en Version No.

Version Date 05/2023

Page No. 2/4

01



(5-door multi-purpose vehicle, 2023-)





Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.

4. Access to the occupants

High-strength zone



Seat adjustment



Steering column adjustment




Glass types



- (1) Laminated glass
- 2 Tempered glass

5. Stored energy / liquids / gases / solids

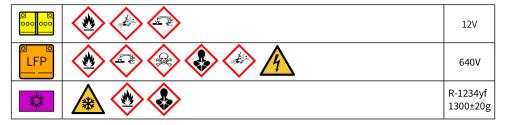



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.















BATTERY RE-IGNITION!

7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

 
Document number

Version No.

Version Date

Page No.







8. Towing / transportation / storage

Front hook location







Store at a safe distance from other vehicles!





BATTERY RE-IGNITION!

9. Additional important information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark 9 on page 1.

10. Explanation of pictograms used

<u>^</u>	General warning sign		Hazardous to the human health
	Remove smart key	4	Warning, Electricity
	Bonnet	*	Air-conditioning component
	Flammable	*	Warning; low temperature
	Explosive	6	Use water to extinguish the fire
	Corrosives	☐ IR ∭	Use thermal Infrared camera
	Acute toxicity		