




TIGGO4 HEV 5-door SUV, From 2025

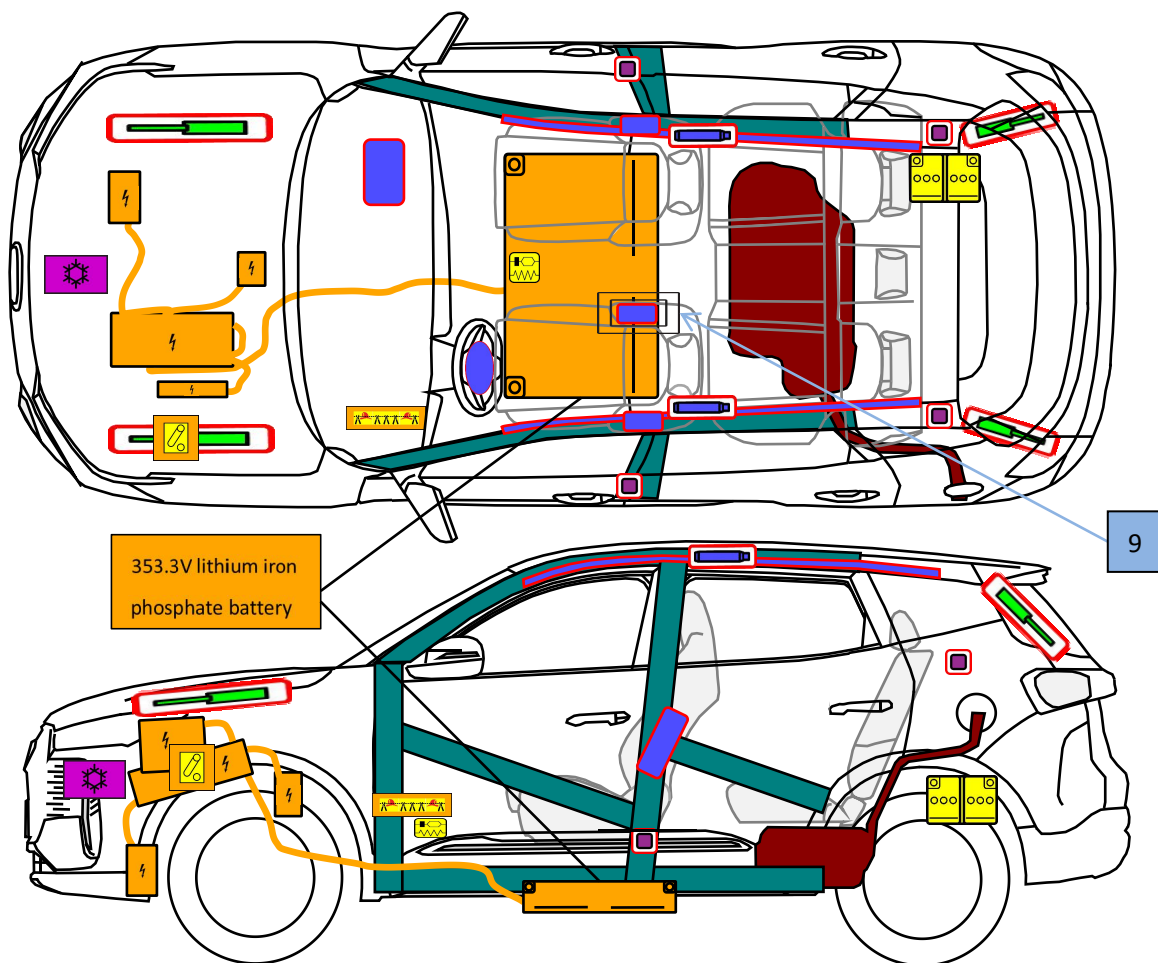

9

	Airbag		Stored gas inflator		Seat belt pretensioner		Gas strut/preloaded spring
	High strength zone		Battery low voltage		SRS control unit		Battery pack, high-voltage
	Low voltage device that disconnects high voltage		High voltage power cable		High voltage component		Cable cut
	Fuel tank content gasoline/ethanol		Air-conditioning component		Zone requiring special attention		
			ID No.		Version date	Page	
			HL4BL50EA001		07/2025	1 of 4	



TIGGO4 HEV


5-door SUV, From 2025



1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

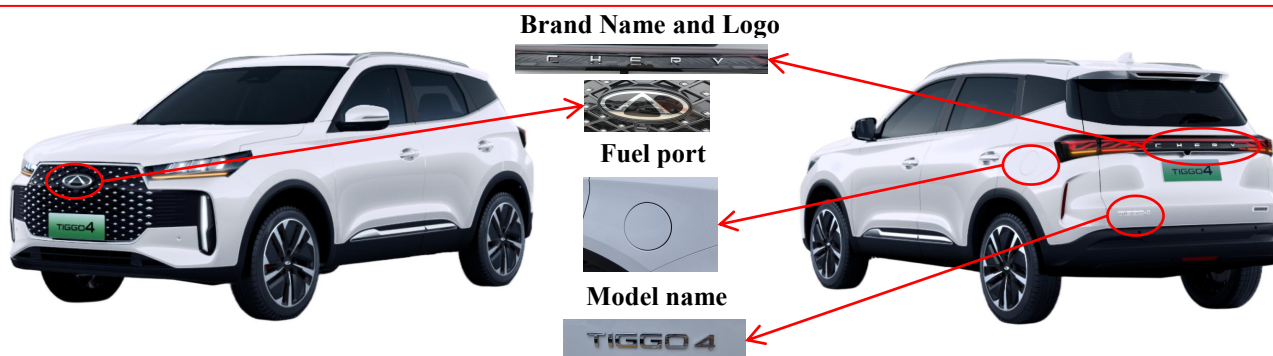


2. Immobilisation/stabilization/ lifting

Immobilise vehicle



Depress brake pedal and press button “P”, the car will automatically apply the parking brake.

Stabilisation-lifting point

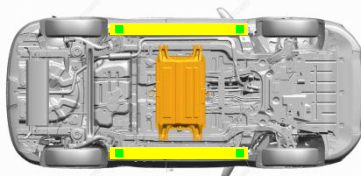

- Appropriate lifting points
- Suitable stabilisation points on the side
- High-voltage battery

3. Disable direct hazards / safety regulations



In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected.

In all other cases, the high voltage system can be deactivated as follows:

Main method: For deactivation in the motor compartment, disconnect the high voltage battery.




1. Pull the release lever twice to open the hood.



2. Disconnect the high voltage.

①Push the button; ②Pull out the button

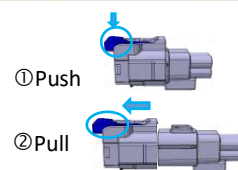


Alternative method: Cut the wire harness in the vehicle cab, disconnect the high voltage battery.



1. Remove the carpet as above showed area.



 2. Cut the wire harness; follow the instructions on the label.



ID No.






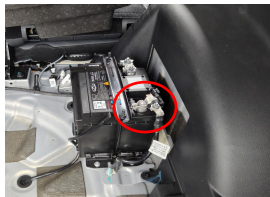
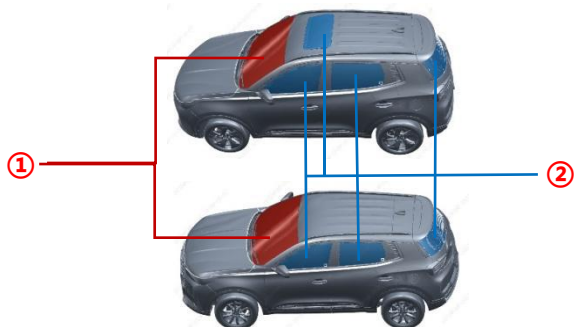
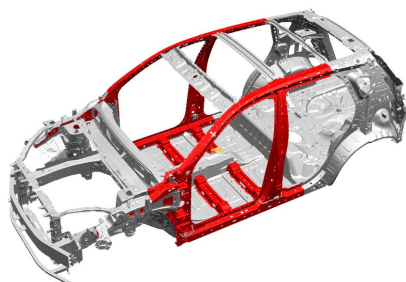

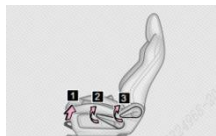
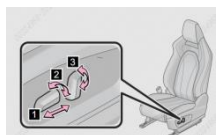



 




 




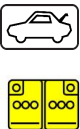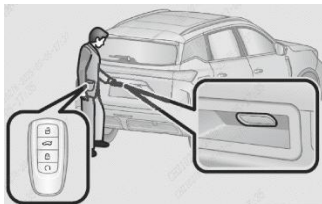

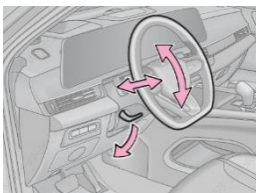







HL4BL50EA001












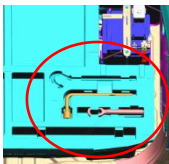
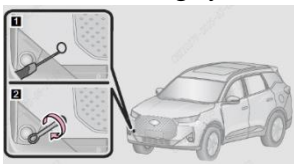
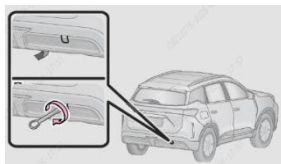



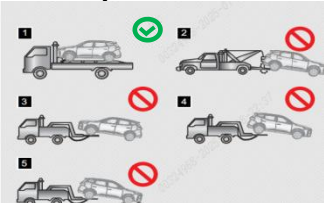

















Version date

07/2025

Page

2 of 4

	TIGGO4 HEV 5-door SUV, From 2025		
ACCESS TO 12V BATTERY			
 			
1. Open the boot.		2. Remove the trunk carpet.	
3. Disconnect the negative terminal.			
4. Access to the occupants			
Window Glass ①- Laminated glass ②- Tempered glass 		High strength body areas 	
Seat adjustment   MANUAL  POWER		Door latches/command  MANUAL	
		Steering column adjustment   Steering column has manual tilt and telescopic adjustment.	
5. Stored energy / liquids / gases / solids			
	   		12 V
	    		353.3 V lithium iron phosphate battery
	  		51L
	 		R1234yf: 0.620kg
<div> In the event of mechanical deformation of the battery system, there is a risk of a thermal reaction in the high voltage battery. Monitor the temperature of the high voltage battery!</div> <div></div>			
	ID No. HL4BL50EA001	Version date 07/2025	Page 3 of 4

	TIGGO4 HEV 5-door SUV, From 2025						
6. In case of fire							
	USE LARGE AMOUNTS OF WATER						
	POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED						
7. In case of submersion							
After recovering the vehicle from the water, deactivate the high voltage system (see chapter 3) and drain the water. Wear appropriate personal protective equipment!							
8. Towing / transportation / storage							
	Towing	tow hook 	Front towing eyelet 	Rear towing eyelet 			
STORE AT SAFE DISTANCE FROM OTHER VEHICLES!				BATTERY RE-IGNITION!			
	Transportation	 Please use ① flatbed rescue vehicle to load the vehicle.					
9. Important additional information							
		Center airbag					
10. Explanation of pictograms used							
	Hybrid Electric Vehicle on fuel of liquid group 2		Boot		General warning sign		Warning, Electricity
	Seat adjustment, longitudinal		Seat height adjustment		Seat adjustment, seat back recline		Steering wheel, tilt control
	Use thermal Infrared camera		Use water to extinguish the fire		Flammable		Acute toxicity
	Hazardous to the human health		Environmental hazard		Corrosives		Bonnet
			ID No.	Version date	Page		
			HL4BL50EA001	07/2025	4 of 4		