


# DUSTER 3 Hybrid 140

(2024 - )

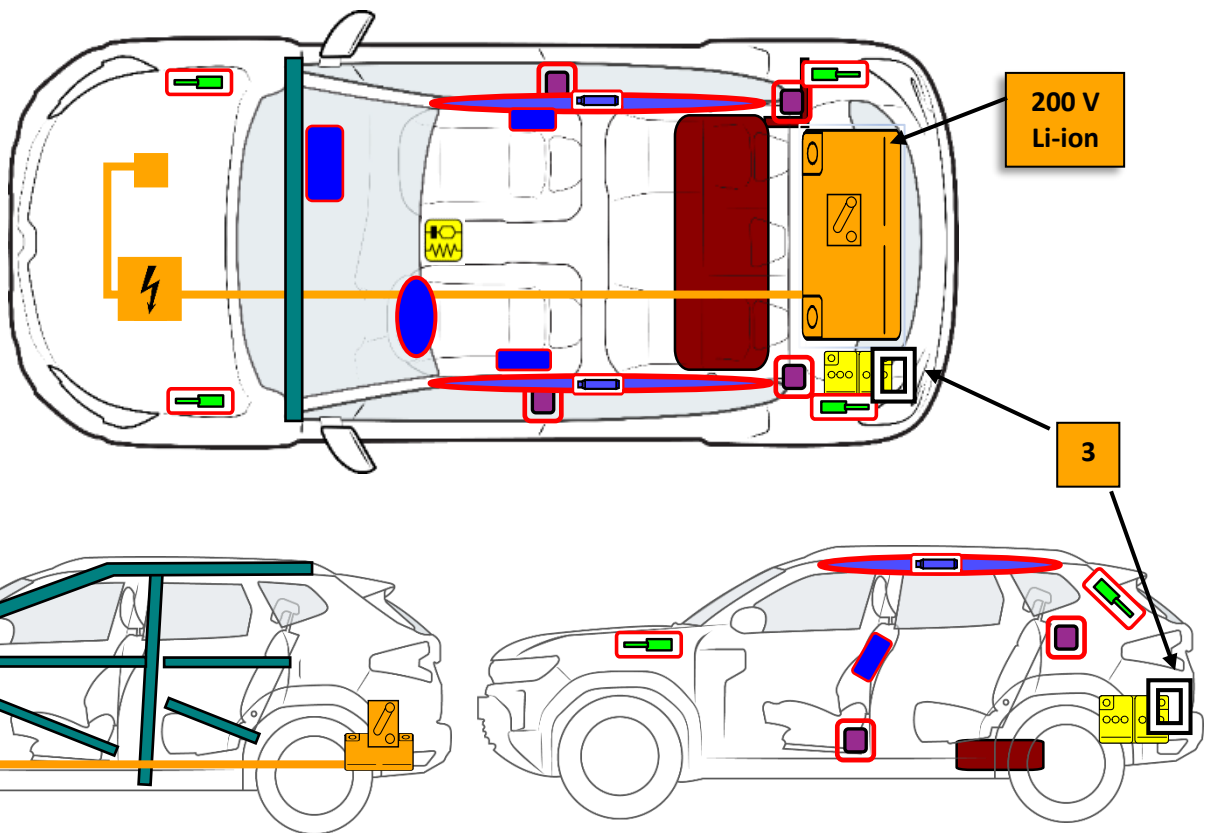

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		Fuel tank content gasoline/ethanol
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		High voltage component		

In consultation with



MINISTÈRE DE L'INTÉRIEUR

Internal reference	Date	Version	Page
RS-P1310 HEV-2024	06/06/2024	1	1 / 4

# 1. Identification / recognition

**DUSTER**




# 2. Immobilisation / stabilisation / lifting


## Immobilisation



## Engine shutdown

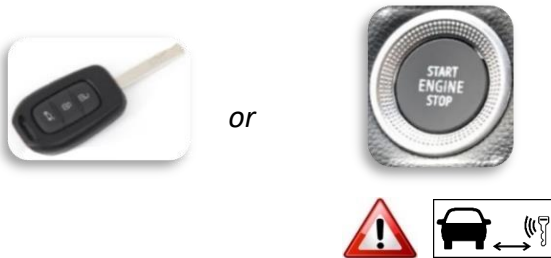

## Forbidden wedge area

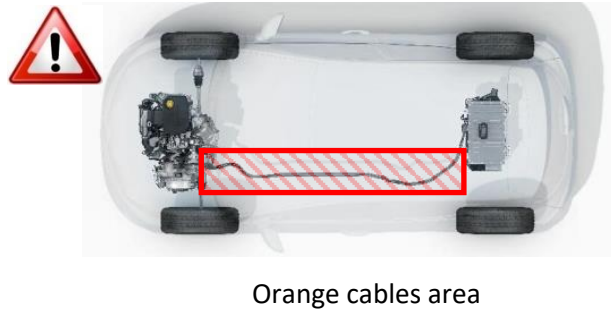


# 3. Disable direct hazards / safety regulations

## 12 Volts Battery



In case of airbag release, the 12V battery automatically turns off

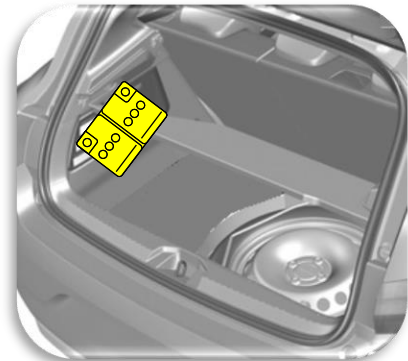

In consultation with



MINISTÈRE DE L'INTÉRIEUR

Internal reference	Date	Version	Page
RS-P1310 HEV-2024	06/06/2024	1	2 / 4

## 200 Volts battery



### Only if cutting operation is necessary :

Disconnection of the 200 Volts battery by removing the service plug.



## 4. Access to the occupants




Laminated glass

Tempered glass




Steering column :  
Hollow and breakable with tools



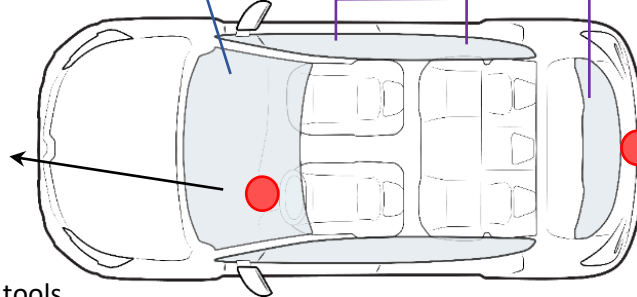


Internal manual opening button

### POSSIBLE MOVEMENT OF SEATS

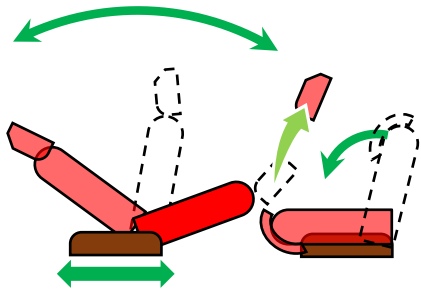

### HARDENED STEEL

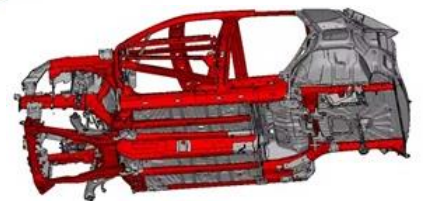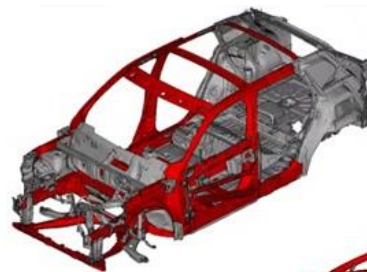 

In consultation with



MINISTÈRE DE L'INTÉRIEUR

Internal reference

Date

Version

Page


RS-P1310 HEV-2024


06/06/2024

1

3 / 4

## 5. Stored energy / liquids / gases / solids

	Lithium-Ion	1,75 kW.h	200 V
---	-------------	-----------	-------

	E5 E10	50 l
--	--------	------

## 6. In case of fire


### Extinguishing a traction battery fire propagation



### GAS STRUTS



Risk of missile effect of gas struts

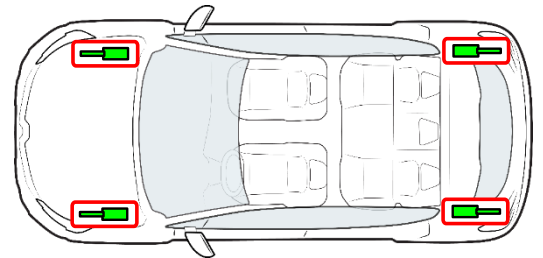

## 7. In case of submersion









No electrical hazard

After taking the vehicle out of the water :  
Disconnection of the 200 Volts battery by removing the service plug.

## 8. Towing / transportation / storage



## 10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group 2				
	Remove smart key		Bonnet		Boot
	Flammable		Don't break, nor open		