


EBRO

EBRO S800

5-door SUV, From 2025

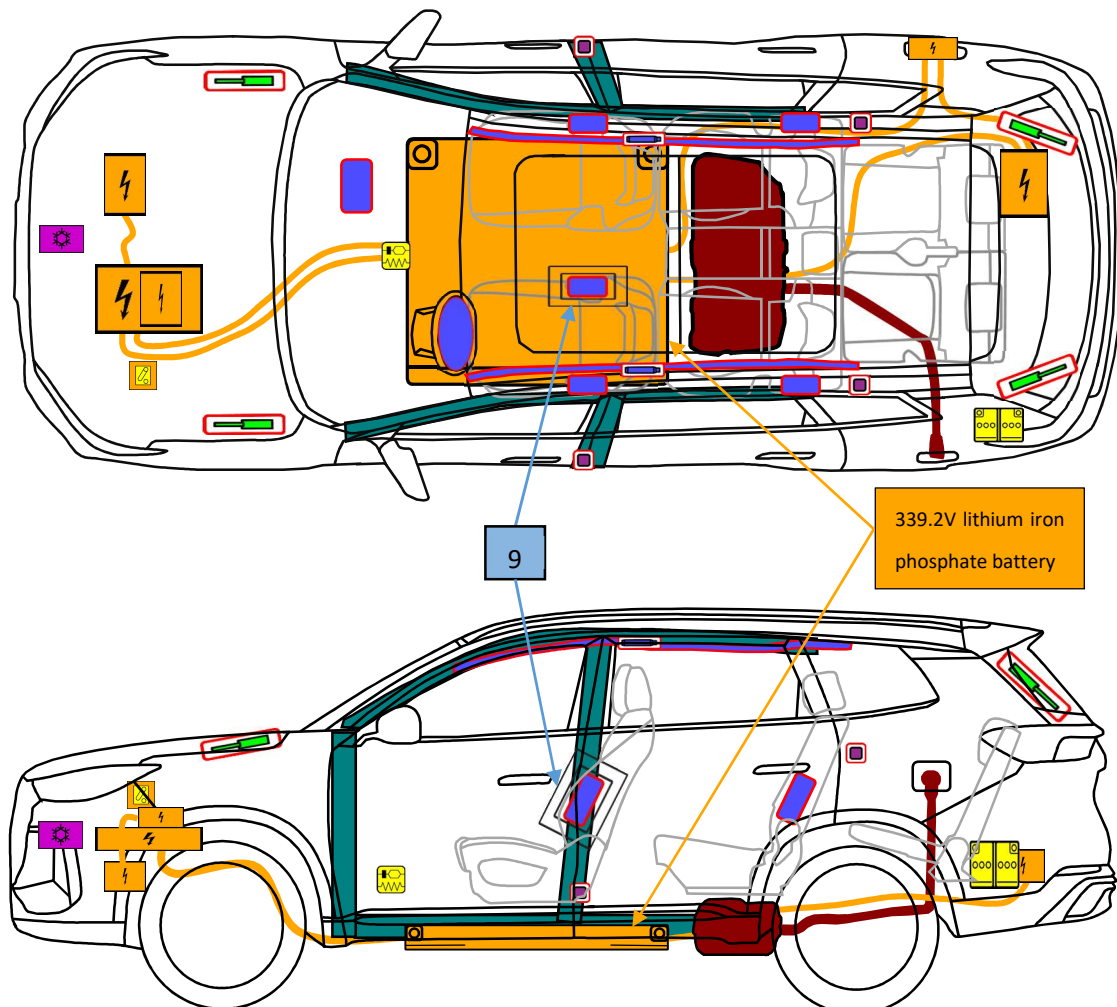

	Airbag		Stored gas inflator		Seat belt pretensioner		Gas strut/preloaded spring
	High strength zone		Battery low voltage		SRS control unit		Battery pack, high-voltage
	Low voltage device that disconnects high voltage		High voltage power cable		High voltage component		Cable cut
	Fuel tank content gasoline/ethanol		Air-conditioning component		Zone requiring special attention		
			ID No. HL4BL5EA001		Version date 4/2025	Page 1 of 4	

EBRO

EBRO S800

5-door SUV, From 2025



1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.



Brand name



Model name



Fuel port



Charge port




2. Immobilisation/stabilization/ lifting

Immobilise vehicle



Depress brake pedal and press button “P”, the car will automatically apply the parking brake.

Stabilisation-lifting point

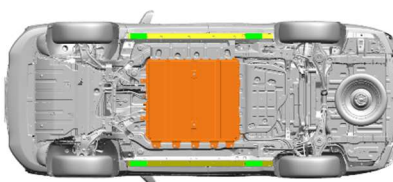

- Appropriate lifting points
- Suitable stabilisation points on the side
- High-voltage battery


3. Disable direct hazards / safety regulations



In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected.

In all other cases, the high voltage system can be deactivated as follows:

Main method: For deactivation in the motor compartment, disconnect the high voltage battery.

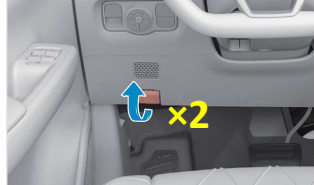

1. Pull the release lever twice to open the hood.




2. Disconnect the high voltage.

①Push the button; ②Pull out the button



①Push

②Pull

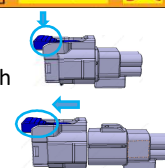

Alternative method: Cut the wire harness in the vehicle cab, disconnect the high voltage battery.



1. Remove the carpet.



2. Cut the wire harness; follow the instructions on the label.



ID No.

HL4BL5EA001

Version date

4/2025

Page

2 of 4


EBRO

EBRO S800

5-door SUV, From 2025



ACCESS TO 12V BATTERY

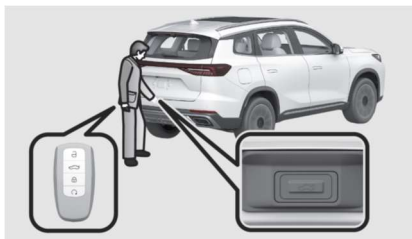


1. Open the boot.



2. Disconnect the negative terminal.


4. Access to the occupants

■ Window Glass

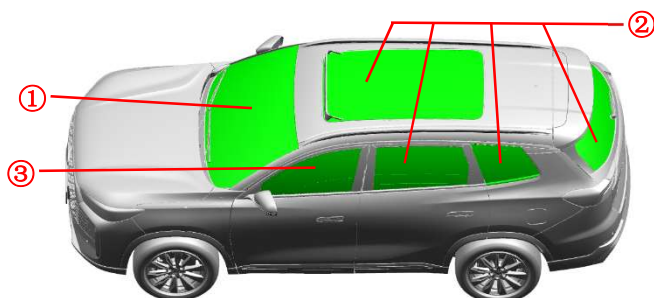


Glass types: ① Laminated ② Tempered ③ Laminated, Tempered (OPT)

■ High strength body areas

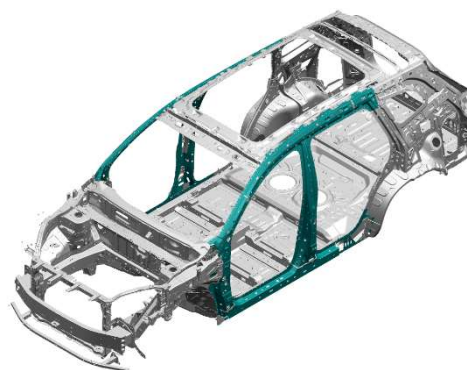

■ Seat adjustment

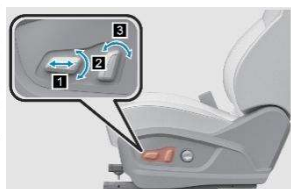


POWER

■ Door latches/command



MANUAL

■ Steering column adjustment

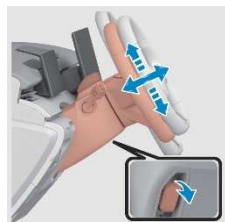

Steering column has manual tilt and telescopic adjustment.

5. Stored energy / liquids / gases / solids



12 V



339.2 V lithium iron phosphate battery



60L



R1234yf: 0.575kg



In the event of mechanical deformation of the battery system, there is a risk of a thermal reaction in the high voltage battery. Monitor the temperature of the high voltage battery!



ID No.

HL4BL5EA001

Version date

4/2025

Page

3 of 4

EBRO

EBRO S800

5-door SUV, From 2025



6. In case of fire



USE LARGE AMOUNTS OF WATER



POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED



7. In case of submersion

After recovering the vehicle from the water, deactivate the high voltage system (see chapter 3) and drain the water. Wear appropriate personal protective equipment!

8. Towing / transportation / storage

Towing

Front towing eyelet



Rear towing eyelet



STORE AT SAFE DISTANCE FROM OTHER VEHICLES!




BATTERY RE-IGNITION!




Transportation

①

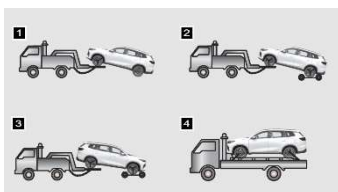


②

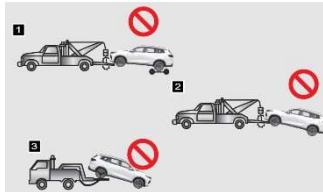


Please use ① flatbed rescue vehicle to load the vehicle.

9. Important additional information

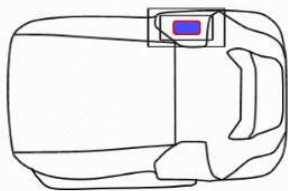

Center airbag

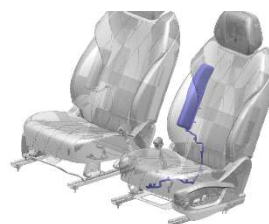

10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group 2		General warning sign		Warning, Electricity		Seat adjustment, longitudinal
	Seat height adjustment		Seat adjustment, seat back recline		Steering wheel, tilt control		Use thermal Infrared camera
	Use water to extinguish the fire		Flammable		Acute toxicity		Hazardous to the human health
	Environmental hazard		Corrosives		Bonnet		Boot
			ID No.	Version date		Page	
			HL4BL5EA001	4/2025		4 of 4	