


5-door SUV, From 2025

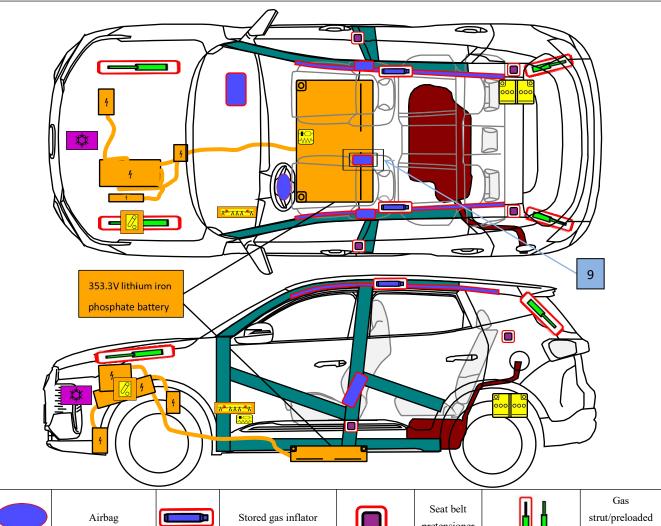







	Airbag		Stored gas inflator		Seat belt pretensioner		4	Gas strut/preloaded spring
	High strength zone	000 000	Battery low voltage		SRS control unit			Battery pack, high-voltage
	Low voltage device that disconnects high voltage	1	High voltage power cable	4	High voltage component	X	***	Cable cut
	Fuel tank content gasoline/ethanol	*	Air-conditioning component		Zone requiring special attention			
			ID No.		Version date		Page	
			HL4BL50EA001		07/2025		1 of 4	




5-door SUV, From 2025



Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

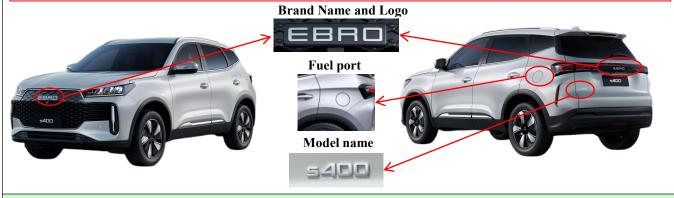


2. Immobilisation/stabilization/lifting

Immobilise vehicle



Depress brake pedal and press button "P", the car will automatically apply the parking brake.

Stabilisation-lifting point

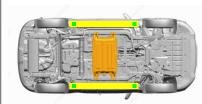

Appropriate lifting points Suitable stabilisation points on the side High-voltage battery

3. Disable direct hazards / safety regulations



In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected.

In all other cases, the high voltage system can be deactivated as follows:

Main method: For deactivation in the motor compartment, disconnect the high voltage battery.






1. Pull the release lever twice to open the hood.





- 2. Disconnect the high voltage.
- ①Push the button; ②Pull out the button

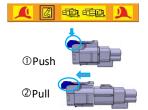

Alternative method: Cut the wire harness in the vehicle cab, disconnect the high voltage battery.









- 1. Remove the carpet as above showed area.
- 2. Cut the wire harness; follow the instructions on the label.

ID No.		Version date	Page
HL4BL50EA	001	07/2025	2 of 4



5-door SUV, From 2025



ACCESS TO 12V BATTERY







2. Remove the trunk carpet.




3. Disconnect the negative terminal.

Access to the occupants

Window Glass

1 Laminated glass

2 - Tempered glass

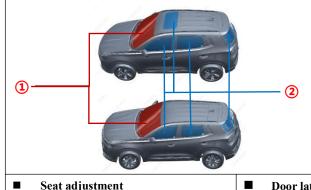

High strength body areas



Seat adjustment





MANUAL



POWER

Door latches/command



MANUAL

Steering column adjustment



Steering column has manual tilt and telescopic adjustment.

5. Stored energy / liquids / gases / solids



























353.3 V lithium iron phosphate battery











51L







R1234yf: 0.620kg



In the event of mechanical deformation of the battery system, there is a risk of a thermal reaction in the high voltage battery. Monitor the temperature of the high voltage battery!



ID No.	Version date	Page
HL4BL50EA001	07/2025	3 of 4



5-door SUV, From 2025



In case of fire



USE LARGE AMOUNTS OF WATER













POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED



In case of submersion

After recovering the vehicle from the water, deactivate the high voltage system (see chapter 3) and drain the water. Wear appropriate personal protective equipment!

8. **Towing / transportation / storage**


Towing



Front towing eyelet



Rear towing eyelet

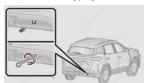

STORE AT SAFE DISTANCE FROM OTHER VEHICLES!



BATTERY RE-IGNITION!



4 of 4

Transportation



Please use ① flatbed rescue vehicle to load the vehicle.

Important additional information



Center airbag

10. Explanation of pictograms used								
4	Hybrid Electric Vehicle on fuel of liquid group 2		Boot		General warn	ing 4	Warning, Electricity	
	Seat adjustment, longitudinal		Seat height adjustment	*	Seat adjustme seat back recl		Steering wheel, tilt control	
□ IR \$\$\$	Use thermal Infrared camera		Use water to extinguish the fire		Flammable		Acute toxicity	
	Hazardous to the human health	*	Environmental hazard		Corrosives		Bonnet	
		ID No.	Version date		Page			

07/2025

HL4BL50EA001