



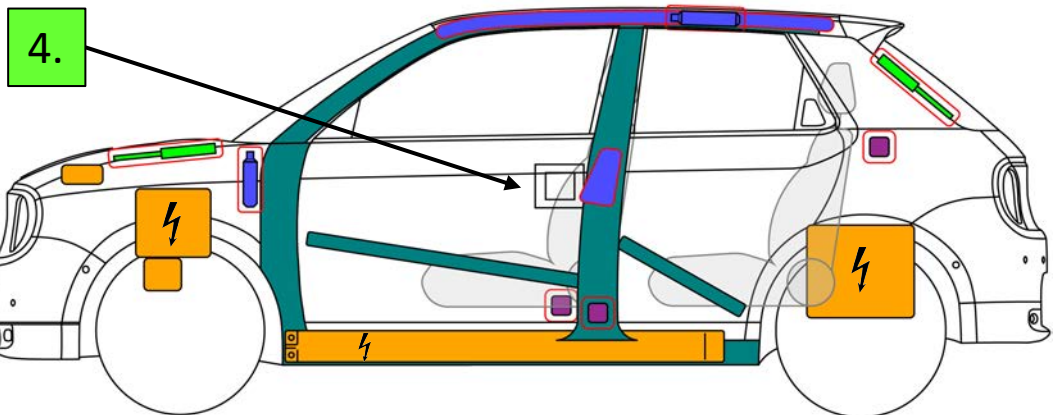

Honda e
Type: 5dr Hatchback
(2020 -)

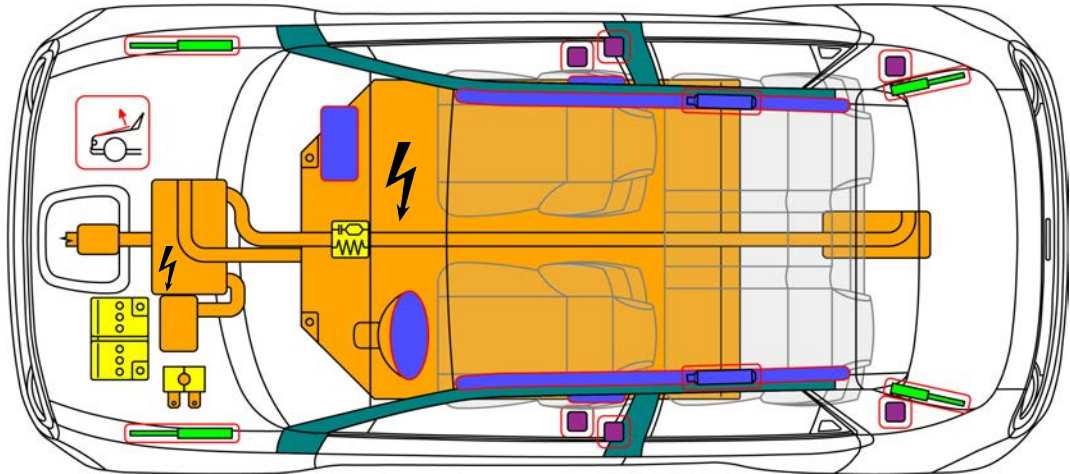

Airbag	Stored gas inflator	Seat belt pretensioner	SRS control unit	Pedestrian protection active system
Automatic rollover protection system	Gas strut/Preloaded spring	High strength zone	Zone requiring special attention	
Battery low voltage	Ultra-capacitor, low voltage	Fuel tank	Gas tank	Safety valve
Battery pack, high-voltage	High voltage power cable/component	High voltage device that disconnects high voltage	Fuse box disabling high voltage	High voltage ultra-capacitor

Honda e Type: 5dr Hatchback (2020 -) – Additional Pages

1. Identification / Recognition

! LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

Brand and model name



Side camera mirror system




Charge port in the hood



2. Immobilization / Stabilization / Lifting

Immobilize vehicle:

1. Block wheels and set parking brake;
2. Push the P (park) button to select the P (park) position.

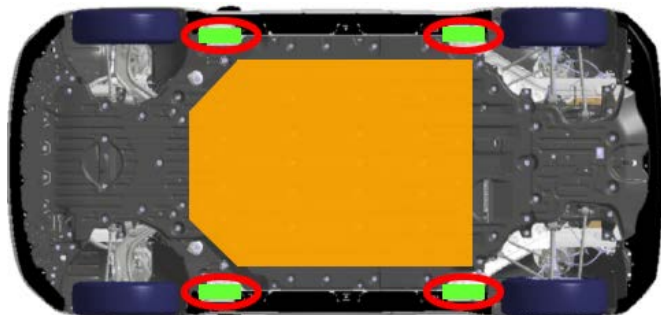

Lifting points:

 
- Appropriate lifting points;
- High voltage battery;

3. Disable direct hazards / Safety regulations

Deactivation of high voltage system, when the vehicle is ON




Deactivation of high voltage system, when the vehicle is OFF or UNKNOWN



Honda e Type: 5dr Hatchback (2020 -) – Additional Pages

Disconnect 12 Volt battery

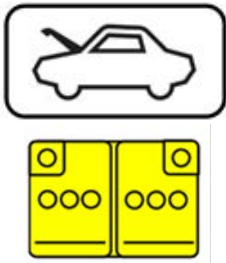

Safety regulations:



Always assume the vehicle is powered, even if it is silent!
 Make sure that the vehicle is immobilized and the propulsion system is deactivated;
 Never touch, cut, or open any orange high voltage power cable or high voltage component;
 In case of a collision with airbag deployment and/or seat belt pretensioner activation, the propulsion system will be disabled. The restraint systems are still active.

4. Access to the occupants

Seat adjustment



Steering column adjustment



Pop-up handle










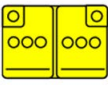







Glass types:

- A. Laminated glass.
- B. Tempered glass.

When the front door outer handle doesn't pop-out automatically, push the front side inwards.



5. Stored energy / Liquids / Gases / Solids

	355V	     
	12V	 
	R-1234yf 395-445 g	   



When conventional antifreeze/coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. An increasing battery pack temperature might be an indicator of thermal runaway.



6. In case of fire



USE LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED IGNITION!

7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system;
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3).

8. Towing / transportation / storage


Location front hook



Location rear hook



Towing

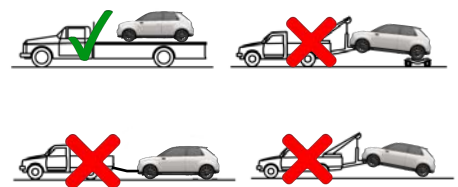

STORE VEHICLE IN AN OPEN-AIR PARKING AT SAFE $\geq 5M$ DISTANCE FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED IGNITION!

9. Important additional information

- No other important information;

10. Explanation of pictograms used

	Remove smart key		Electric vehicle
	Warning high voltage		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Corrosives
	Use thermal infrared camera		Bonnet