


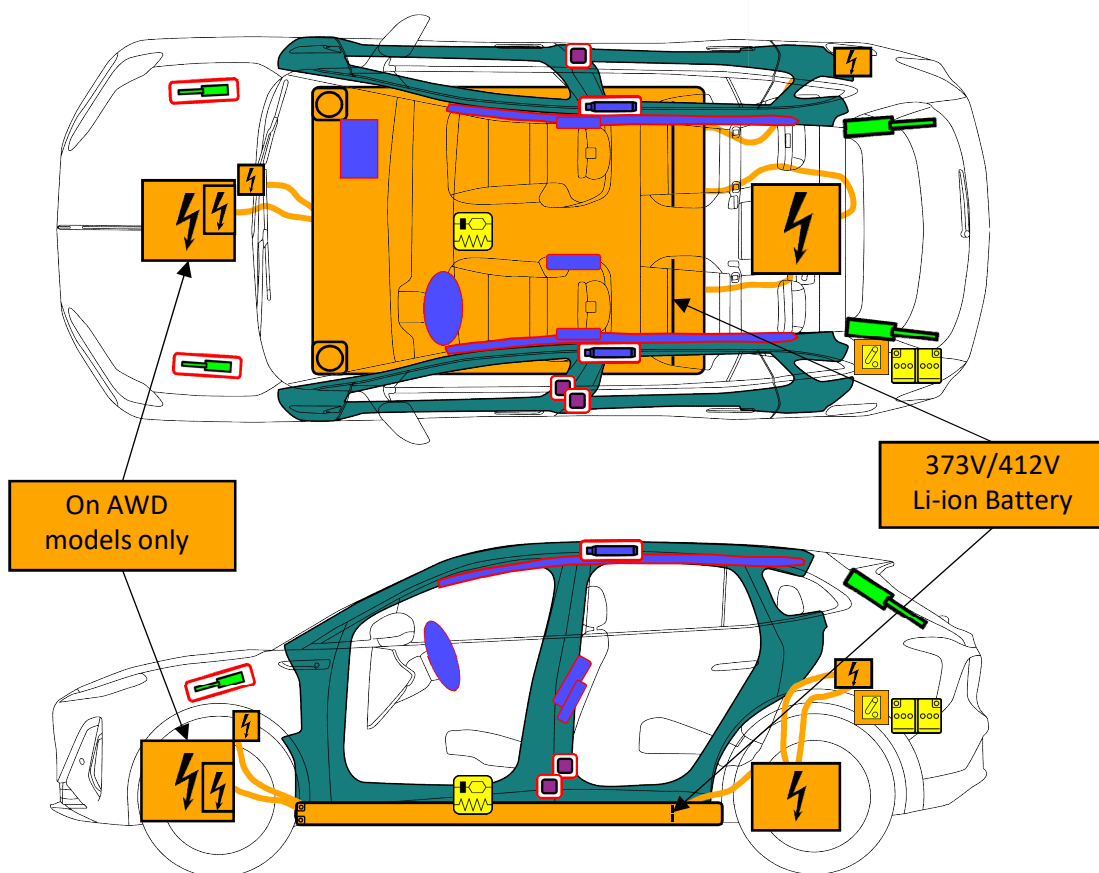

	Airbag		Seat belt pretensioner		Battery pack, high-voltage
	Gas strut / Preloaded spring		SRS control unit		High voltage component
	High strength zone		Stored gas inflator		Battery low voltage
	Low voltage device that disconnects high voltage		High voltage power cable		



HONGQI EHS5


SUV, 5-seater, 5-doors, 2025-



1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

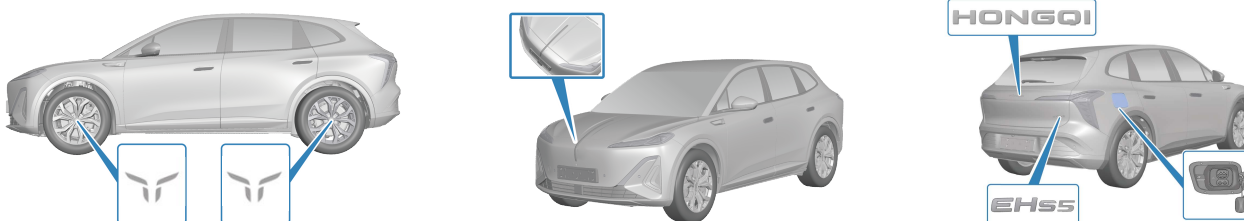

2. Immobilisation / stabilisation / lifting


Immobilise the vehicle

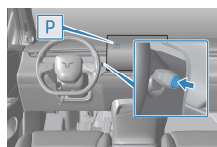

Shift into "P"



Engage EPB

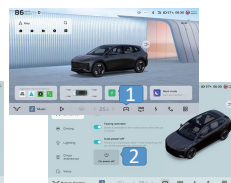


Turn off the ignition



Parking wedge

Stabilisation-lifting points




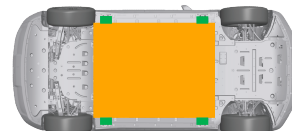


Stabilisation-lifting points





High-voltage battery

3. Disable direct hazards / safety regulations



Main disabling method

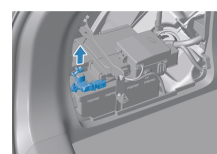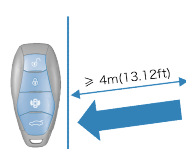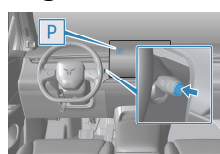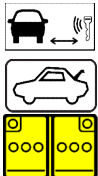

Alternative disabling method

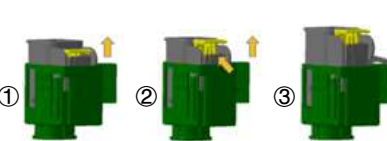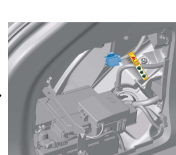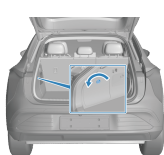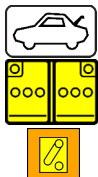

Access to 12V battery

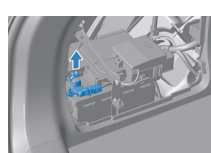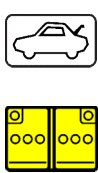

Do not touch , or open high-voltage components and the high-voltage battery!
Wear appropriate personal protective equipment!

In the event of an accident in which the airbags are deployed , the high-voltages system will be automatically deactivated.

Document I.D. Number:

Rescue Sheet_HONGQI_EHS5_EN

Version No.

01

Version Date


06/2025

Page No.

2/4


4. Access to the occupants

Glass types

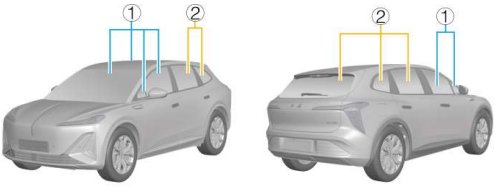


① Laminated glass ② Tempered glass

High strength zone

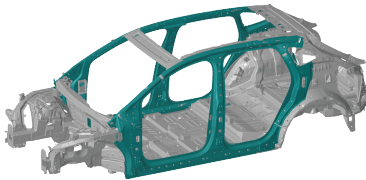

Steering column adjustment

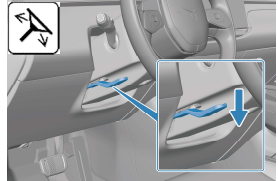


Mechanical

Door opening



Mechanical

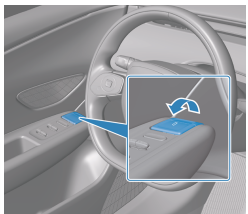

Mechanical

Seat adjustment




Driver

Electric



Passenger

Electric

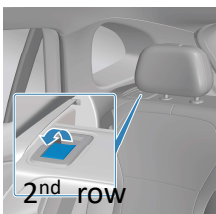


2nd row

Mechanical

If the low-voltage battery is powered off, various electrical adjustments in the vehicle will not be properly operated, such as seat electric adjustment.

5. Stored energy / liquids / gases / solids

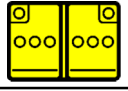	  	12V
	     	373V/412V
	  	R1234yf 1110±15g

 When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera. Always wear appropriate PPE. 

6. In case of fire

 Extinguish the fire using large amounts of water.

  **BATTERY RE-IGNITION!**

 HONGQI	HONGQI EHS5 SUV, 5-seater, 5-doors, 2025-	
--	---	---

7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

8. Towing / transportation / storage

Hook Rear



Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Important additional information

For more information related to rescue, please refer to
<https://www.hongqi-auto.com/pages/cartype/>

10. Explanation of pictograms used

	General warning sign		Explosive		Warning; low temperature
	Remove smart key		Corrosives		Use water to extinguish the fire
	Boot		Acute toxicity		Use thermal Infrared camera
	Flammable		Hazardous to the human health		Electric Vehicle
	Steering wheel, tilt control		Air-conditioning component		Warning, Electricity
	Seat height adjustment		Seat adjustment, longitudinal		

Document I.D. Number:
Rescue Sheet_HONGQI_EHS5_EN

Version No.
01

Version Date
06/2025

Page No.
4/4