




HONGQI EHS7

SUV, 5-seater, 5-doors, 2025-

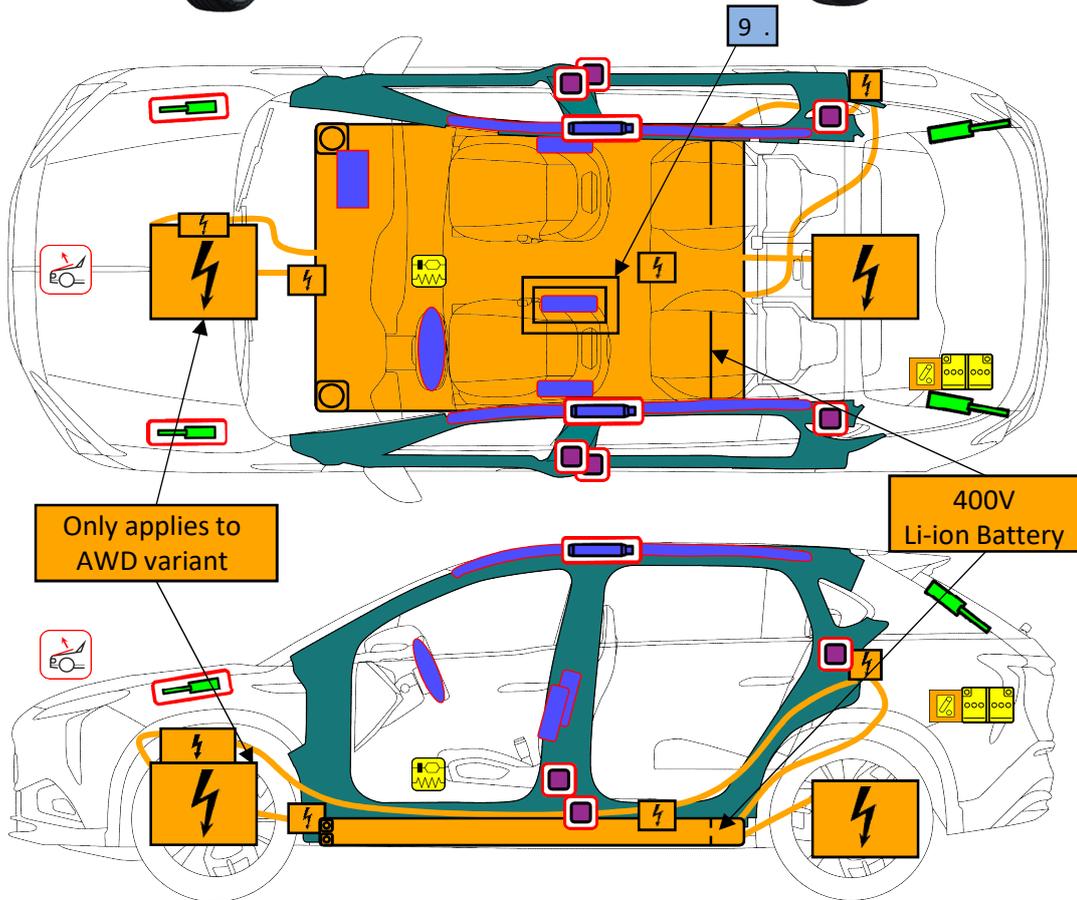


	Airbag		Seat belt pretensioner		Battery pack, high-voltage
	Gas strut / Preloaded spring		SRS control unit		High voltage component
	High strength zone		Stored gas inflator		Battery low voltage
	Low voltage device that disconnects high voltage		Zone requiring special attention		High voltage power cable
	Pedestrian protection active system				



Document I.D. Number: Rescue Sheet_HONGQI_EHS7_EN	Version No. 01	Version Date 07/2025	Page No. 1/4
---	--------------------------	--------------------------------	------------------------

1. Identification / recognition

 The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.

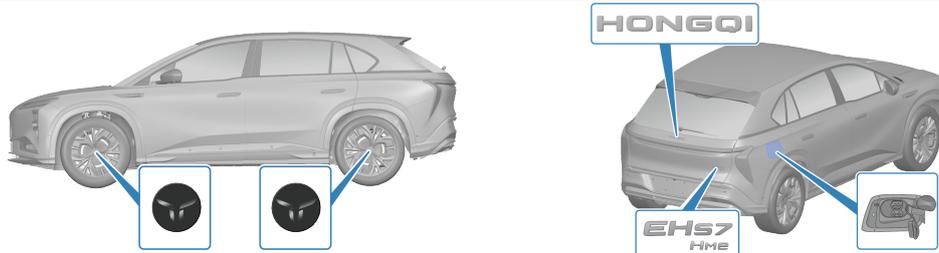

2. Immobilisation / stabilisation / lifting
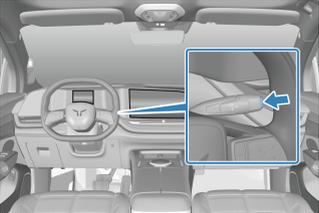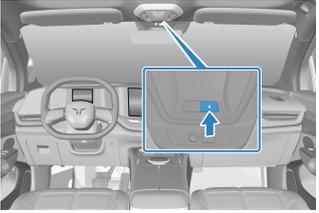
<p>Immobilise the vehicle</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Shift into "P"</p> </div> <div style="text-align: center;">  <p>Turn off the ignition</p> </div> </div>	<p>Stabilisation-lifting points</p> <div style="display: flex; align-items: center;">   </div> <div style="margin-top: 5px;"> ■ Stabilisation-lifting points ■ High-voltage battery </div>	<p style="text-align: center;">Parking wedge</p>
--	--	--

3. Disable direct hazards / safety regulations

Main disabling method

Alternative disabling method

Access to 12V battery

 Do not touch , or open high-voltage components and the high-voltage battery!
Wear appropriate personal protective equipment!

In the event of an accident in which the airbags are deployed , the high-voltages system will be automatically deactivated.




HONGQI EHS7

SUV, 5-seater, 5-doors, 2025-



4. Access to the occupants

Glass types

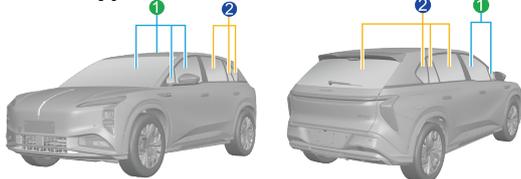


- 1 Laminated glass
- 2 Tempered glass


High strength zone



Steering column adjustment

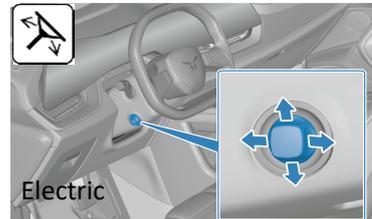


Door opening

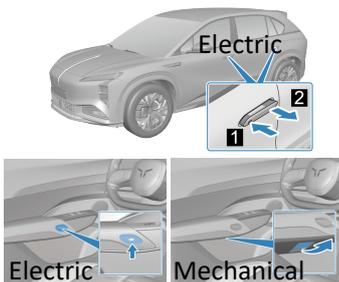

Seat adjustment



2nd row

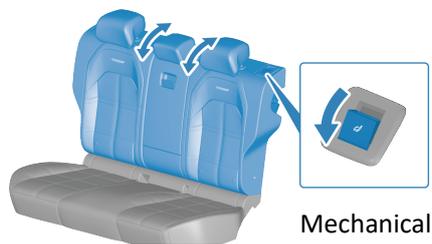


If the low-voltage battery is powered off, various electrical adjustments in the vehicle will not be properly operated, such as seat electric adjustment, steering column electric adjustment, exterior door and interior door electric handle. 2nd row seat adjustment switch is located on the upper surface of seat backrest.

5. Stored energy / liquids / gases / solids

		12V
		400V
		R1234yf 1120±25g



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera. Always wear appropriate PPE.

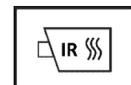

6. In case of fire



USE LARGE AMOUNTS OF WATER



BATTERY RE-IGNITION!




DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY.

7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

8. Towing / transportation / storage

Hook Front

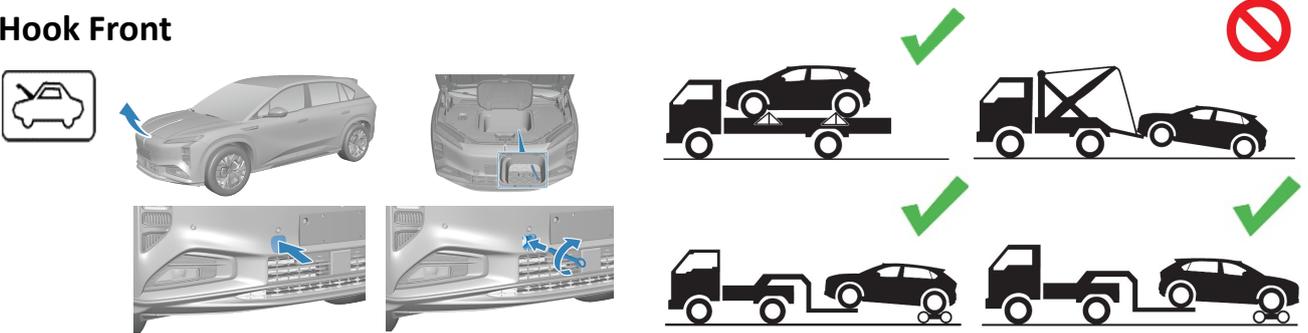

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Important additional information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark 9. on Page 1

For more information related to rescue, please refer to <https://www.hongqi-auto.com/pages/cartype/>

10. Explanation of pictograms used

	General warning sign		Explosive		Warning; low temperature
	Remove smart key		Corrosives		Use water to extinguish the fire
	Bonnet		Acute toxicity		Use thermal Infrared camera
	Boot		Hazardous to the human health		Electric Vehicle
	Flammable		Air-conditioning component		Warning, Electricity
	Steering wheel, tilt control		Seat height adjustment		Seat adjustment, longitudinal