


| | | | | | | | | | |
|--|----------------------------------|--|------------------------------|--|---|--|---------------------|--|--|
| | Airbag | | Stored gas inflator | | Seat belt pretensioner | | SRS control unit | | Pedestrian protection active system |
| | Battery low-voltage | | Gas strut / Preloaded spring | | High strength zone | | Fuel cell component | | Gas line (H2) |
| | Battery pack, high-voltage | | High voltage power cable | | High voltage component | | Cable Cut | | Gas tank with gas type indication (H2) |
| | Zone requiring special attention | | | | Automatic hydrogen overpressure safety valve with gas type indication | | | | |

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

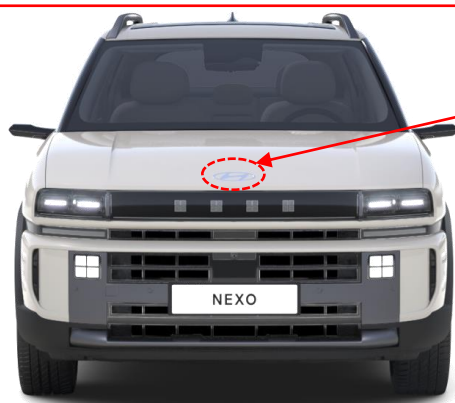


Brand Logo Name



Model name

NEXO

Charging door:

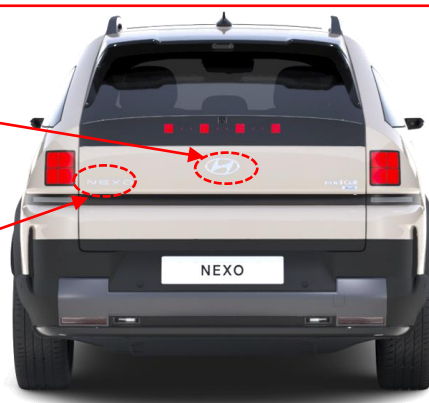

2. Immobilisation / stabilisation / lifting

Immobilisation:




① Chock the wheels and pull the electronic parking brake switch to set the parking brake.

② For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:

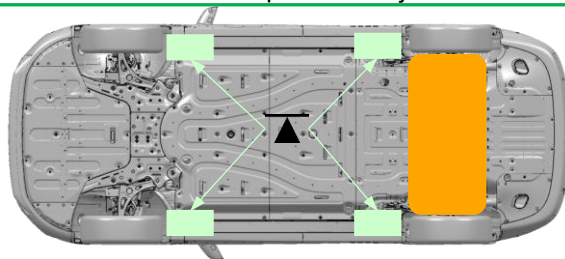

3. Disable direct hazards / safety regulations

IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW




Disabling High Voltage Battery:



① Pull the hood release lever on the driver side.




② Go to the front of the vehicle. Push the secondary hood release lever to the left.

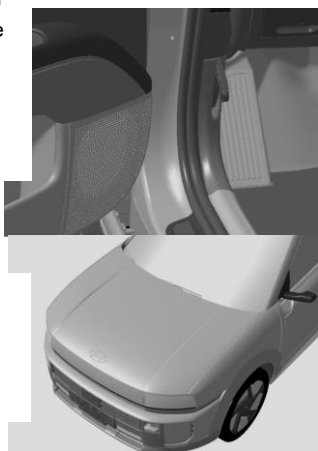

Access to Service Interlock:



The service interlock is located in front of the fusebox, nearby the washer reservoir.

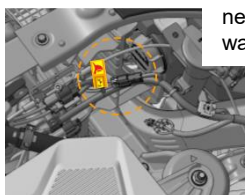




Disabling:



Cut the cable of the service interlock to disable the HV-System




Shut off on each hydrogen tank.

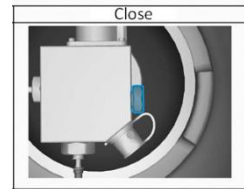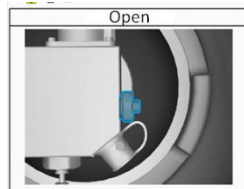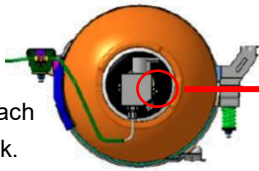


Disabling 12V Battery:



Remove the luggage board and luggage tray.

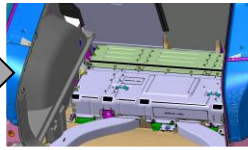


Remove the 12 V battery negative connector to the left of the battery system to disconnect power.

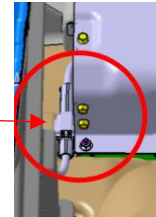

4. Access to the occupants



Front:

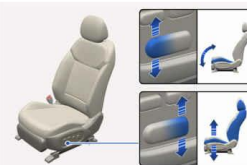


Rear:




Glass:

- ① Laminated
- ②③ Tempered (OPT Laminated)
- ④ : Tempered

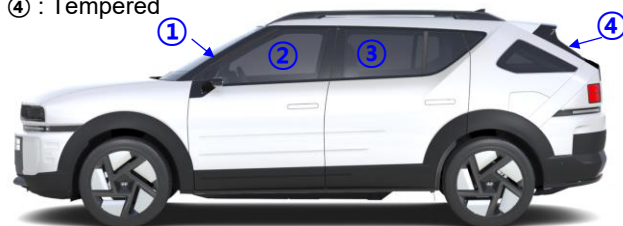


Vehicle body - Ultra-high Strength Steel

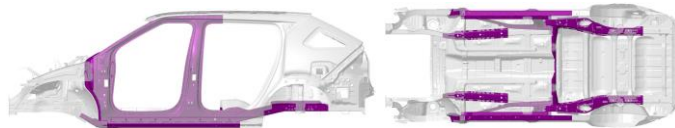

Open from inside:

Remove the cover at the bottom of the boot, then slide the latch in the direction of the arrow to unlock the boot.

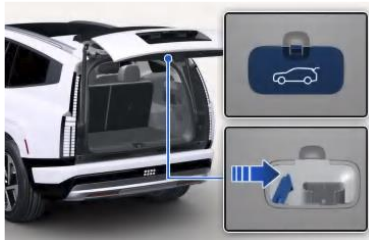

Door handles:

When the door outer handles doesn't pop-up, push the front side inwards.

 


Push



Pull

5. Stored energy / liquids / gases / solids



12V



LI ION



240V



H₂



 
54.2l
x3



R-1234yf
575g




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA




6. In case of fire



Use large amount of water

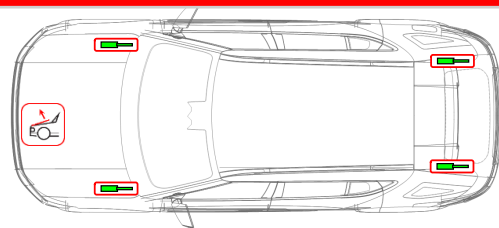

BATTERY RE-IGNITION!

 


Gas strut!




Risk of missile effect of hood and tailgate.



Safety valves in each tank open within minutes when fires spreading to the rear underbody

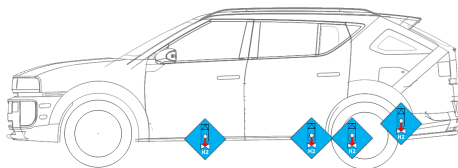

Hydrogen burns with an almost invisible flame

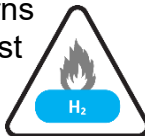

7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage

OK

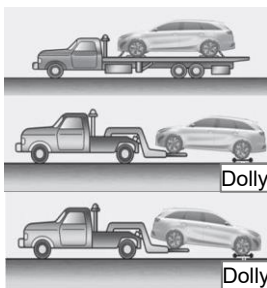

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.


Not OK

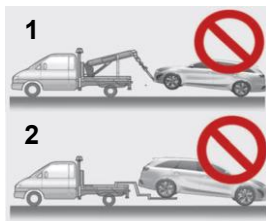

Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Towing Hook

Location front hook Location rear hook

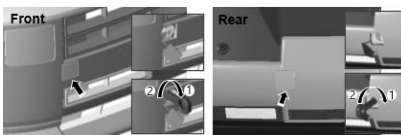

The hook located in the tool case in the tailgate The hook must be used only temporary towing.

Store at safe distance from other vehicles

10. Explanation of pictograms used

| | | | | | |
|--|--|--|---------------------------------|--|---|
| | General warning sign | | Warning, Electricity | | Vehicle on Hydrogen Fuel Cell Electric Vehicle |
| | Air-conditioning component | | Use thermal Infrared camera | | Use water to extinguish the fire |
| | Acute toxicity | | Corrosives | | Environmental hazard |
| | Explosive | | Flammable | | Hazardous to the human health |
| | Bonnet | | Boot | | Steering wheel, tilt control |
| | Attention: hydrogen burns with an almost invisible flame | | Lifting point; central support | | Seat height adjustment |
| | Seat adjustment, longitudinal | | Direction of overpressure valve | | Manual gas shut-off valve with gas type indication (H2) |