


 


 

 
 











Legend

 Airbag	 Stored gas inflator	 Seat belt pretensioner	 SRS control unit	 Pedestrian protection active system
 Automatic rollover protection system	 Gas strut / Preloaded spring	 High strength zone	 Zone requiring special attention	
 Battery, low voltage	 Ultra capacitor, low voltage	 Fuel tank	 Gas tank	 Safety valve
 High voltage battery pack	 High voltage power cable / component	 High voltage disconnect	 Fuse box disabling high voltage system	 Ultra capacitor' high voltage

1. IDENTIFICATION / RECOGNITION


Range Rover PETROL models can be identified by the following badges fitted to the vehicle.



2. IMMOBILISATION / STABILISATION / LIFTING


Immobilise the vehicle

1. Chock the wheels.
2. When the **P** button is pressed, the transmission engages (**P**) and the EPB applies to help secure the vehicle.

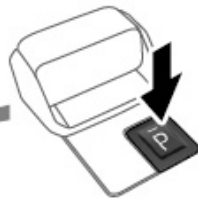

Vehicle lifting and jacking.

Only lift or jack the vehicle using the jacking points shown in the illustration below.

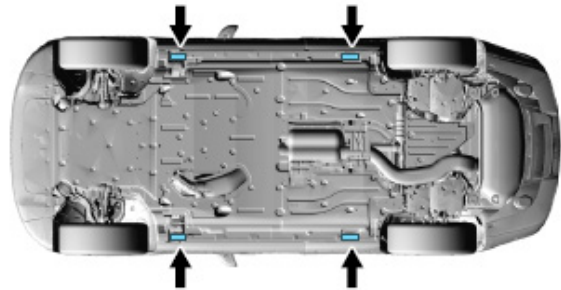

Do not place cribbing such as wooden blocks or rescue air lifting bags under the exhaust or fuel system, doing so may result in fuel leaks or fire.



3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

Perform the procedure to completely shut off the vehicle.


1. Switch off ignition.
2. Remove all smart keys from the vehicle and store at least 5 metres away.
3. Disconnect the start-up battery.




2

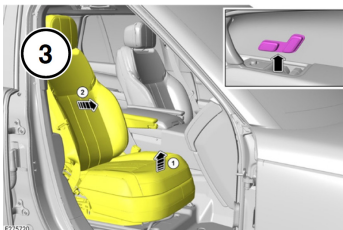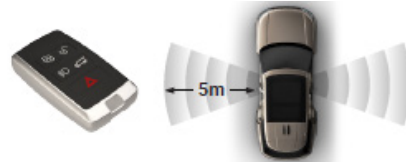


Raise the front row seat.
Reposition the front row seat forward.

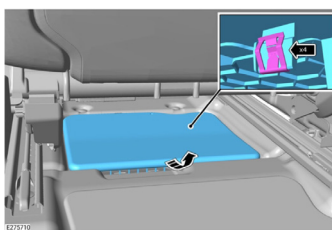


Remove the access cover.

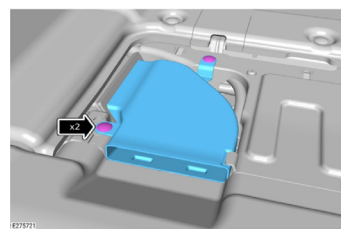


Remove the 2 clips.
Remove the rear air duct.

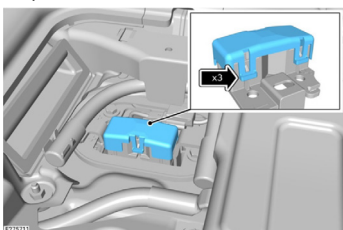



Release the 3 retaining clips.
Remove the startup battery terminal cover.

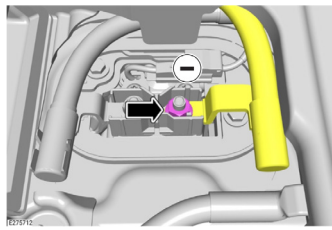

Remove the startup battery ground terminal nut.
Release and reposition the startup battery ground cable.

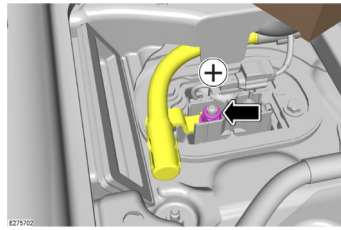

Remove the startup battery positive terminal nut.
Release and reposition the startup battery positive cable.

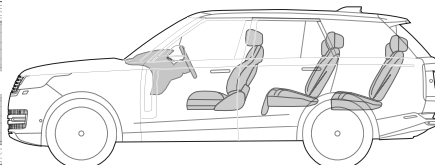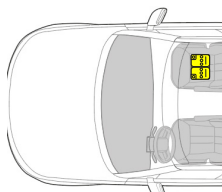


Always disconnect the negative terminal first and reconnect last. Failure to do so may lead to an electrical shock, resulting in injury

4. ACCESS TO THE OCCUPANTS

- 1. Laminated
- 2. Tempered

(LAMINATE AVAILABLE AS AN OPTION FOR SECOND ROW)

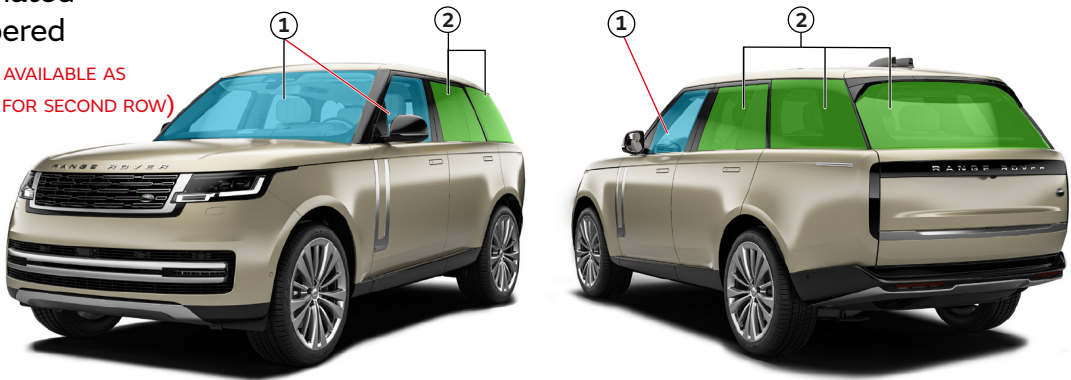

To open the door if doors are unlocked and handles are in their retracted position:
1. Press the forward part of the door handle (1) to present the rear of the handle.
2. Pull the rear of the handle (2) to open the door.



5. STORED ENERGY / LIQUIDS / GASES / SOLIDS

		12v
		90l
		8.7l

6. IN CASE OF FIRE

Small vehicle fires can be treated with normal firefighting methods.



7. IN CASE OF SUBMERSION


Work on the vehicle only after it has been removed from the water.

8. TOWING / TRANSPORTATION / STORAGE

Front towing eye

The front towing point is located behind a removable cover in the lower front bumper. To remove the cover:


1. Rotate each of the fasteners (1) counter-clockwise with a suitable tool and remove the fasteners. Keep them somewhere safe.
2. Pull the front edge of the cover (2) downwards and forwards to release.
3. The towing eye (3) is located in the centre of the front bumper.

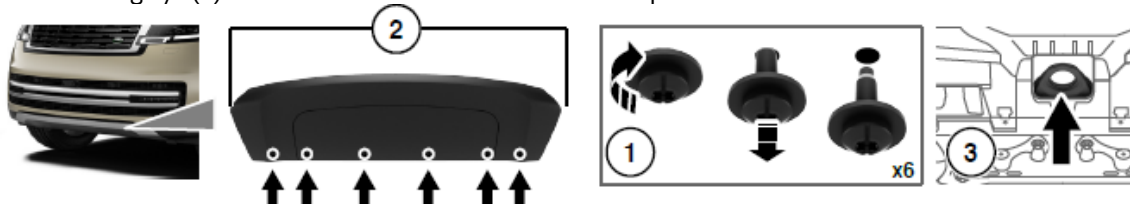

Rear towing eye

The rear towing eye is located behind an access panel in the rear bumper. To use the towing eye:

1. Unscrew the four trim clips and pull outward.
2. Pull the panel outward.
3. The towing eye is located in the centre of the rear bumper beam.

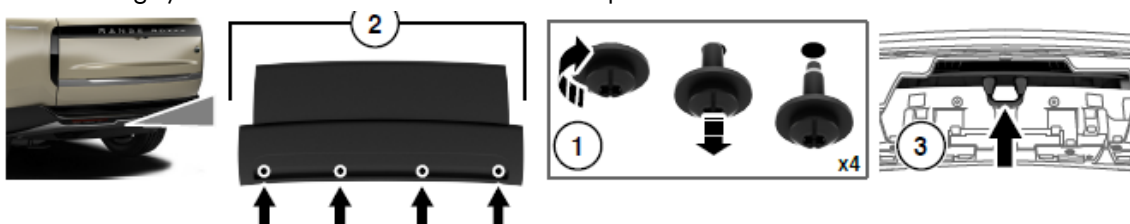

Recovery method

Transporter or trailer:

The recommended method for recovery or transportation of the vehicle is on a transporter or trailer designed for that purpose.



If the vehicle cannot be recovered by using the recommended method, in an emergency, the vehicle can be towed on all four wheels for a short distance if essential. Do not tow the vehicle for more than 50 km (30 miles). Do not exceed 50 km/h(30 mph).



Straight bar tow on all wheels:

9. IMPORTANT ADDITIONAL INFORMATION

For further details, please refer to TOPIx <https://topix.jaguar.jlrext.com>

10. EXPLANATION OF PICTOGRAMS USED



General Warning



Warning, Electricity



Explosive



Corrosives



Hazardous to human health



Acute Toxicity



Flammable

ID No

ERG460

Version No

1.0

Page No

4 of 4