



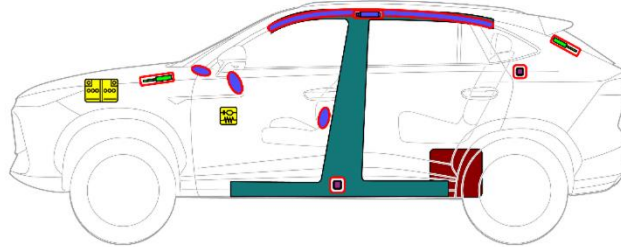

MG HS, 2024-

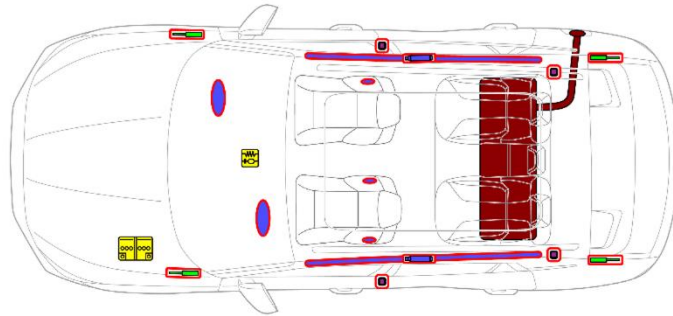

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut / Preloaded spring
	Battery low voltage		Fuel tank		High strength zone				

ID Nr.	Version Nr.	Version date	page
MG HS	1.0	10/2024	Page 1 of 4




1. Identification/Recognition



A LACK OF MOTOR NOISE DOES NOT INDICATE THE SYSTEM IS OFF, A SILENT MOVEMENT CAPABILITY EXISTS UNTIL THE VEHICLE IS FULLY SHUT DOWN. ALWAYS WEAR APPROPRIATE PPE.



2. Immobilisation/Stabilisation/Lifting

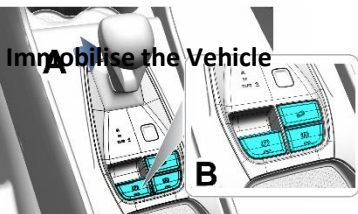


Immobilise the Vehicle

- A: Place in P position;
- B: Make sure the EPB is applied (indicator ON);
- C: Press the START/STOP Switch to shut down the power system.



Jacking or Lifting

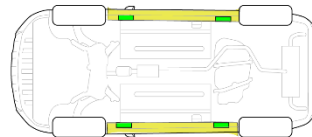


Appropriate lift areas

Use caution to ensure you never come into contact with the fuel tank or other harness while lifting or manipulating the vehicle.

3. Disabling Direct Hazards / Safety Regulations

The vehicle power system can be shut down normally.

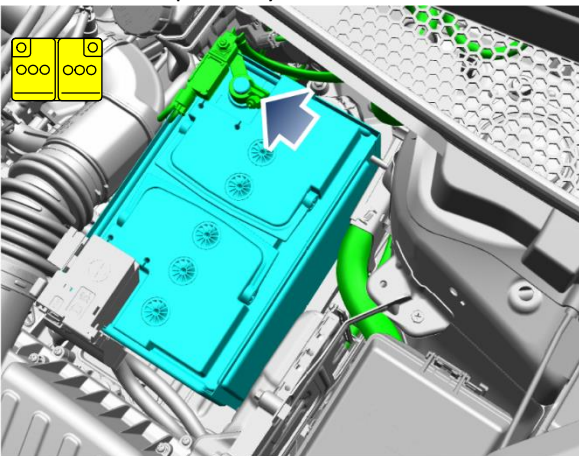




Open the bonnet.

Power off and disconnect the negative cable of 12V low-voltage battery.

ID Nr.	Version Nr.	Version date	page
MG HS	1.0	10/2024	Page 1 of 4


4. Access to the Occupants

-  ULTRA HIGH STRENGTH STEEL
-  NO-CUT ZONES

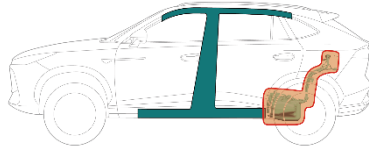


Glass types


- Front window: Laminated glass
- Rear window: Tempered glass
- Four door : Tempered glass

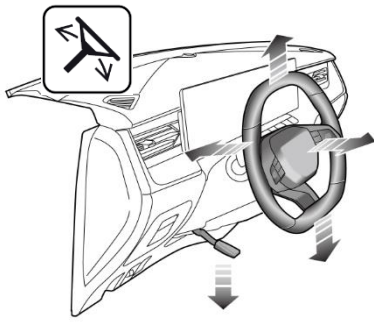

Fully release the locking lever, the steering wheel can be adjusted in 4 directions.

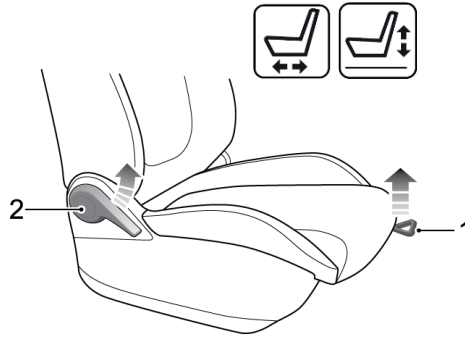




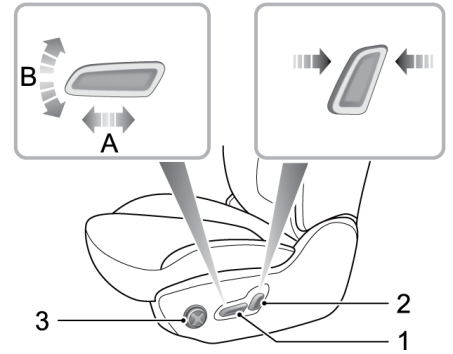

 
- 1、 Forward/Backward Adjustment
- 2、 Backrest Adjustment



- 1、 Cushion Height * and Forward/Backward Adjustment
- 2、 Backrest Adjustment
- 3、 Lumbar Support *

5. Stored Energy / Liquids / Gases / Solids

		12V
		Coolant: 10.3L(1.5T DCT) / 9.6L(1.5T MT) / 7.8L(2.0T AT) Refrigerant: 560 ± 20 g(1.5T) / 480 ± 20 g(2.0T)
		Fuel tank: 55L

6. In Case of Fire



USE LARGE AMOUNTS OF WATER.



BATTERY RE-IGNITION!



DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY.

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- Continuously spray with a large amount of continuous water.
- To recover the vehicle, do not tow it directly, use a rescue vehicle instead.

ID Nr.	Version Nr.	Version date	page
MG HS	1.0	10/2024	Page 1 of 4




7. In Case of Submersion

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- To transfer the vehicle, do not tow it directly but use a recovery vehicle instead.

8. Towing / Transportation / Storage

- Personnel are prohibited from staying in the vehicle when towing and transporting the vehicle.
- When using a transporter to ship the vehicle always ensure the parking brake is applied, and the vehicle must be secured as illustrated.
- The vehicle can be towed from the site only when you make sure there is no safety risk. If the battery pack is deformed, leaks, smokes, etc., the safety risk should be solved first.
- Before towing the vehicle, switch on the hazard warning lamps, close all doors and lock the vehicle. The drive wheels MUST be suspended above the ground.
- When towing, DO NOT accelerate or brake suddenly, this can cause accidents.

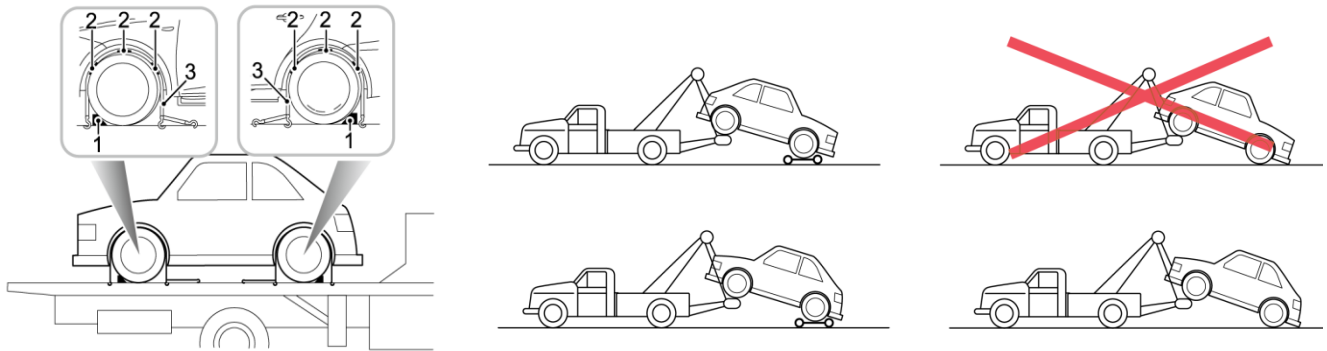

Please consult the Owner's Handbook for detailed instructions

10. Explanation of Pictograms Used

	Battery low voltage		Airconditioning component		Use thermal Infrared camera		Steering wheel, tilt control		Seat adjustment, longitudinal
	Seat height adjustment		Use water to extinguish the fire		Hazardous to human health		Flammable		Corrosives
	Explosive		Acute toxicity		Fuel tank				

ID Nr.	Version Nr.	Version date	page
MG HS	1.0	10/2024	Page 1 of 4