


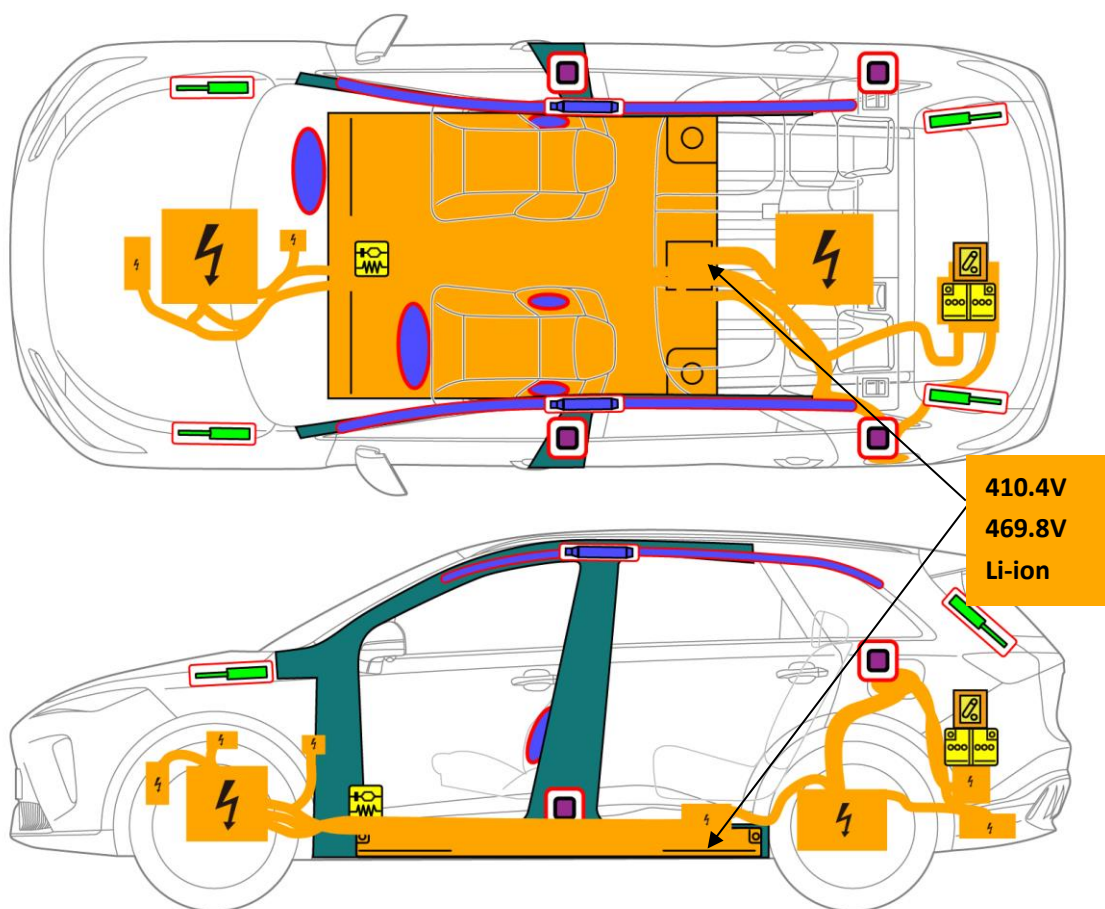

	Airbag		Stored gas inflator		Seat belt pretensioner		Gas strut / Preloaded spring		High strength zone
	SRS control unit		Battery low voltage		Battery pack, high-voltage		Low voltage device that disconnects high voltage		High voltage power cable
	High voltage component								
ID Nr.		Version Nr.		Version date			page		
MGS6 EV		1.0		06/2025			Page 1 of 4		



1. Identification/Recognition



A LACK OF MOTOR NOISE DOES NOT INDICATE THE SYSTEM IS OFF, A SILENT MOVEMENT CAPABILITY EXISTS UNTIL THE VEHICLE IS FULLY SHUT DOWN. ALWAYS WEAR APPROPRIATE PPE.




MG



MG


2. Immobilisation/Stabilisation/Lifting

Immobilise the Vehicle

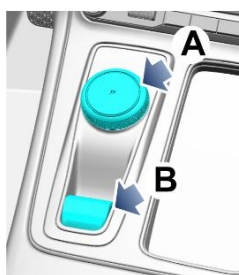

- A: Place in P position.
B: Ensure that the parking brake is applied.
C: Exit the vehicle with the key and close all doors, bonnet and tailgate, press the Lock button of the key to turn off the power.

Jacking or Lifting

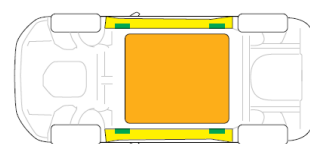

Appropriate stabilisation-lifting points




Appropriate stabilisation points vehicle on side

Use caution to ensure you never come into contact with the high voltage battery or other high voltage components while lifting or manipulating the vehicle.


3. Disabling Direct Hazards / Safety Regulations



In cases of emergency, the high voltage system can be isolated by removing the manual service disconnect device (master safety device) located in the loadspace.

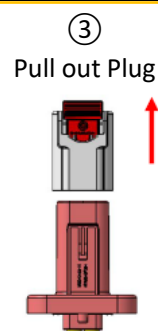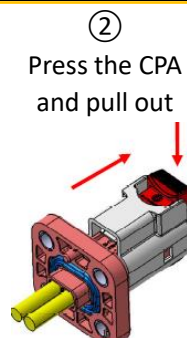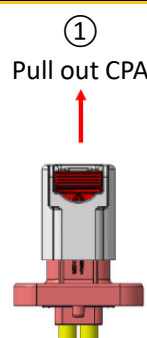


ALTERNATIVE DISABLING METHOD

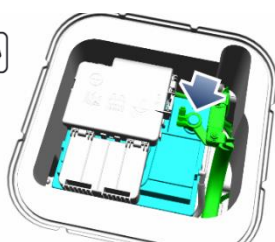

The vehicle power system can be shut down normally.

Power off and disconnect the negative cable of 12V low-voltage battery.

ACCESS to low voltage battery

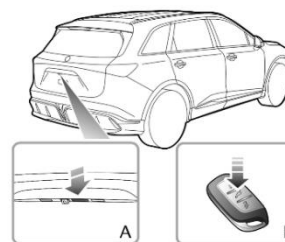


ID Nr.	Version Nr.	Version date	page
MGS6 EV	1.0	06/2025	Page 2 of 4




4. Access to the Occupants

- ULTRA HIGH STRENGTH STEEL
 NO-CUT ZONES

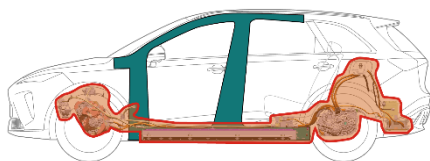


Glass Types


- Front window: Laminated glass
- Rear window: Tempered glass
- All door window : Tempered glass

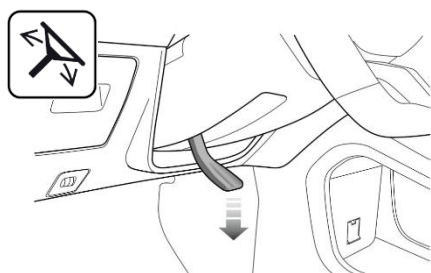

Fully release the locking lever, the steering wheel can be adjusted in 4 directions.

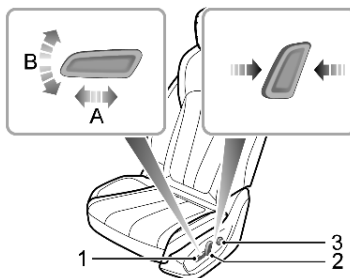

- 1、 Forward/Backward Adjustment
- 2、 Cushion Height Adjustment
- 3、 Backrest Adjustment

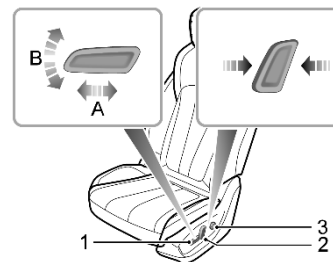


- 1、 Forward/Backward Seat Adjustment and Cushion Angle Adjustment *
- 2、 Backrest Adjustment
- 3、 Lumbar Support *

5. Stored Energy / Liquids / Gases / Solids

		12V
		410.4v 469.8v
		Refrigerant: $0.73 \pm 0.02\text{kg}$ / $0.58 \pm 0.02\text{kg}$



 The battery assembly cover should never be breached or removed under any circumstances, including fire. Doing so may result in severe electrical burns, shocks, or electrocution.



Internal battery damage may not be detected, it can become unstable with a risk of thermal runaway. Check battery pack temperature with a thermal imaging camera.

6. In Case of Fire



USE LARGE AMOUNTS OF WATER.



BATTERY RE-IGNITION!



DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY.

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- Disconnect the high-voltage output immediately when conditions permit.
- Continuously spray with a large amount of continuous water.
- Ensure the high-voltage battery is completely extinguished and cooled to avoid reignition.
- To recover the vehicle, do not tow it directly, use a rescue vehicle instead.

ID Nr.	Version Nr.	Version date	page
MGS6 EV	1.0	06/2025	Page 3 of 4




7. In Case of Submersion

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- Avoid touching the metal conductor of the damaged high-voltage device.
- If there is no hissing sound or foam being emitted by the high voltage battery pack, the vehicle can be salvaged by professional organizations.
- After recovery from deep or flood water the vehicle high voltage system must be isolated. For the specific method of disconnecting high-voltage power, please refer to Chapter 3. Isolate the vehicle by placing it in an open location after disconnecting the high voltage.
- To transfer the vehicle, do not tow it directly, use a recovery vehicle instead.

8. Towing / Transportation / Storage

- Personnel are prohibited from staying in the vehicle when towing and transporting the vehicle.
- When using a transporter to ship the vehicle always ensure the parking brake is applied, and the vehicle must be secured as illustrated.
- The vehicle can be towed from the site only when you make sure there is no safety risk. If the battery pack is deformed, leaking or smoking, etc., the safety risk should be eliminated first.
- Before towing the vehicle, switch on the hazard warning lamps, close all doors and lock the vehicle. The drive wheels MUST be suspended above the ground.
- When towing, DO NOT accelerate or brake suddenly, this can cause accidents.

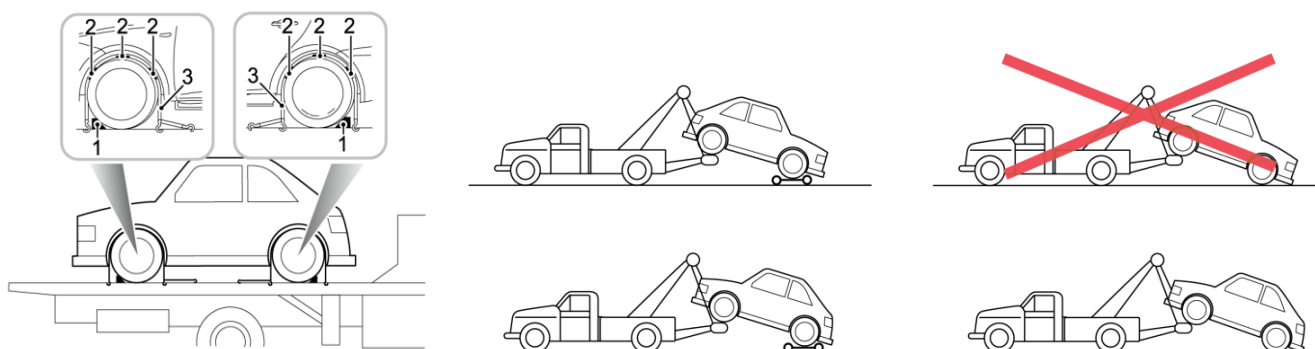

10. Explanation of Pictograms Used

	Electric Vehicle		Warning, Electricity		Airconditioning component		Lifting point		Use thermal Infrared camera
	Steering wheel adjustment		Seat adjustment, longitudinal		Seat height adjustment		Use water to extinguish the fire		Hazardous to human health
	Flammable		Corrosives		Explosive		Acute toxicity		Bonnet; hood
	Remove smart key /starter key		Rear Loadspace						

ID Nr.	Version Nr.	Version date	page
MGS6 EV	1.0	06/2025	Page 4 of 4