

MITSUBISHI Eclipse Cross

5 doors / 5 seats / Hatchback 2025-01




Version

1

Page

1/4

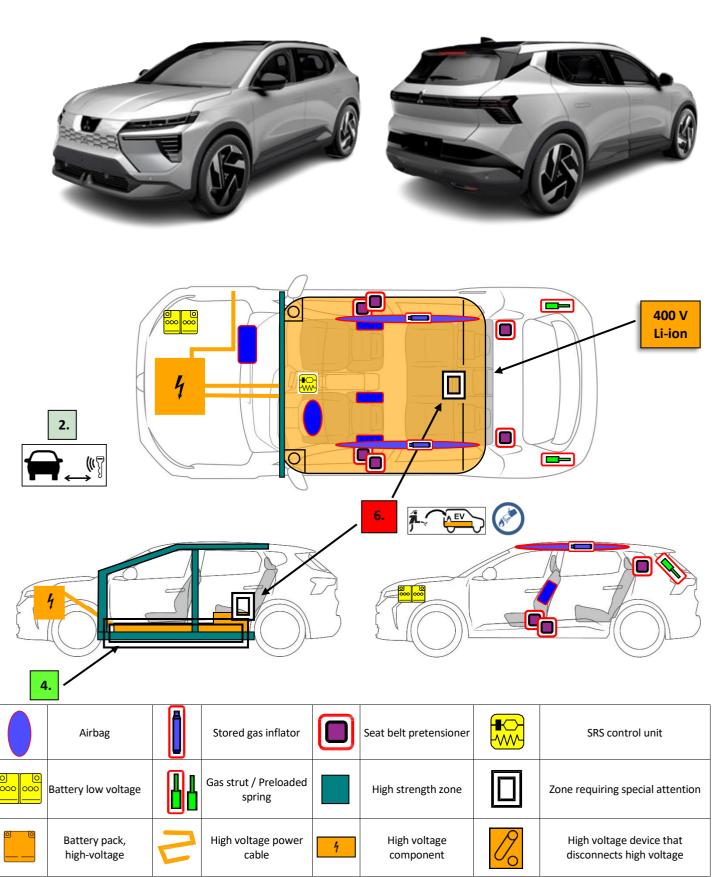

In consultation with	Internal reference Date	
Here I Julia - Francis Hermit Fland on	RS-HCB EV-2024	25/07/2025
MINISTÈRE DE L'INTÉRIEUR		

1. Identification / recognition



2. Immobilization / stabilization / lifting

Immobilization




Engine stop







No lift zone

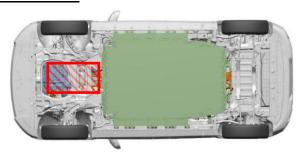

Orange wiring area

3. Disable direct hazards / safety regulations


12 Volt battery







- 1- Engine stop
- 2- Disconnect the (-) 12V batteries

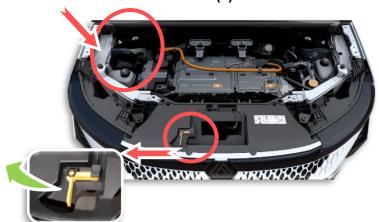

In consultation with



Internal reference	Date	Version	Page
RS-HCB EV-2024	25/07/2025	1	2 / 4


400 Volt battery



Any activation of the airbag in frontal impact or the rear belt pre-tensioner in rear impact guarantees an automatic disconnection of the 400V battery:

No disconnection system => no manual action required

4. Access to the occupants

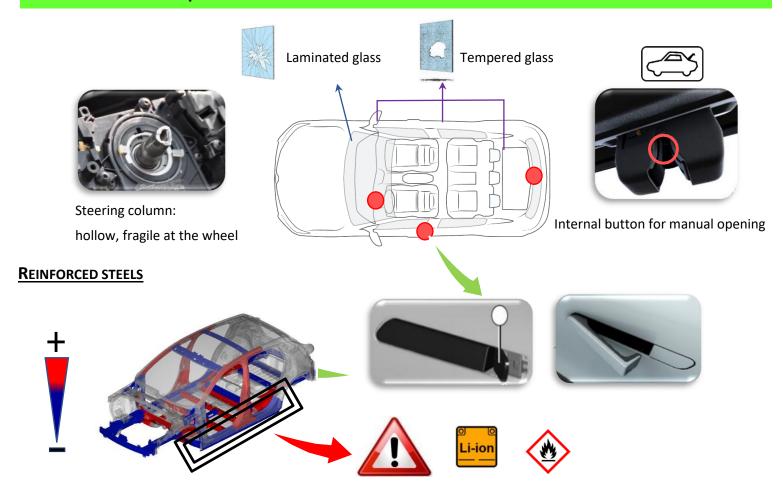

5. Stored energy / liquids / gases / solids

Li-ion	Lithium-lon	60 / 87 kW.h	400 V
--------	-------------	--------------	-------

In consultation with	Internal reference	Date	Version	Page
Sales - Egolie - Francisi Rizonutque Française	RS-HCB EV-2024	25/07/2025	1	3 / 4
MINISTÈRE DE L'INTÉRIEUR				

6. In case of fire

Extinguishing a traction battery fire











Vehicle fire without thermal runaway of the high-voltage battery

- Extinguish the vehicle fire.
- Monitor the temperature of the high-voltage battery.



 
• Extinguish the vehicle fire.

• Extinguish the high-voltage battery fire with water through the dedicated "Fireman Access" port.

Vehicle fire with thermal runaway of the high-voltage battery

• Continue to cool the high-voltage battery through the "Fireman Access" port for at least 10 minutes.





Monitor the temperature of the high-voltage battery.

 


GAS SPRINGS





Risk of missile effect of cylinders



7. In case of submersion





No electrical risk

8. Towing / transportation / storage



10. Explanation of pictograms used

4	Electric Vehicle	Bonnet		Boot
□ IR SS	Use thermal Infrared camera	Special battery access		
	Respiratory system	Use water to extinguish the fire	\otimes	Do not break or open

In consultation with



Internal reference	Date	Version	Page
RS-HCB EV-2024	25/07/2025	1	4 / 4