



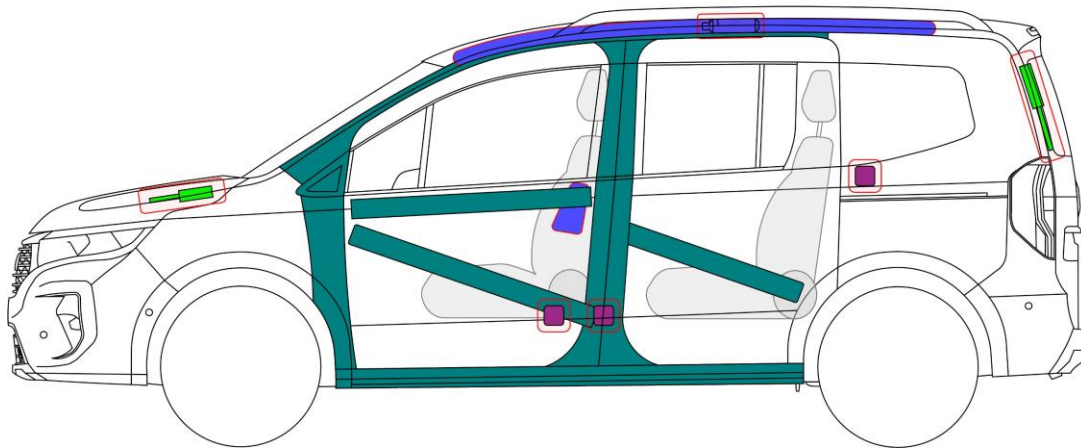

NISSAN


Townstar

TYPE: XFK, 5-door MPV
(2021 -)

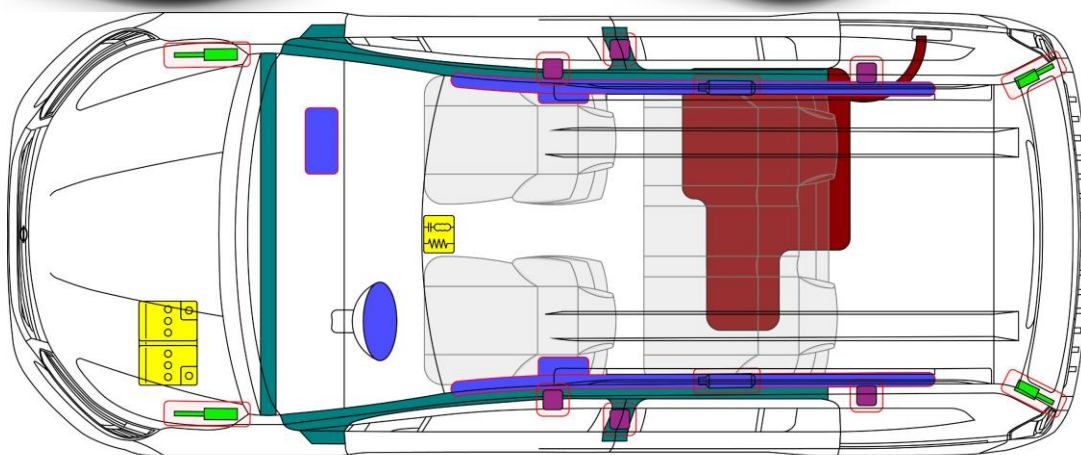

| | | | | | | | | | |
|--|--------------------------------------|--|--------------------------------------|--|---|--|----------------------------------|--|-------------------------------------|
| | Airbag | | Stored gas inflator | | Seat belt pretensioner | | SRS control unit | | Pedestrian protection active system |
| | Automatic rollover protection system | | Gas strut / Preloaded spring | | High strength zone | | Zone requiring special attention | | |
| | Battery low voltage | | Ultra-capacitor, low voltage | | Fuel tank | | Gas tank | | Safety valve |
| | Battery pack, high voltage | | High voltage power cable / component | | High voltage device that disconnects High voltage | | Fuse box disabling high voltage | | High voltage ultra-capacitor, |
| | Fuel tank content Gasoline / Ethanol | | | | Fuel tank content Diesel | | | | |


1. Identification / recognition

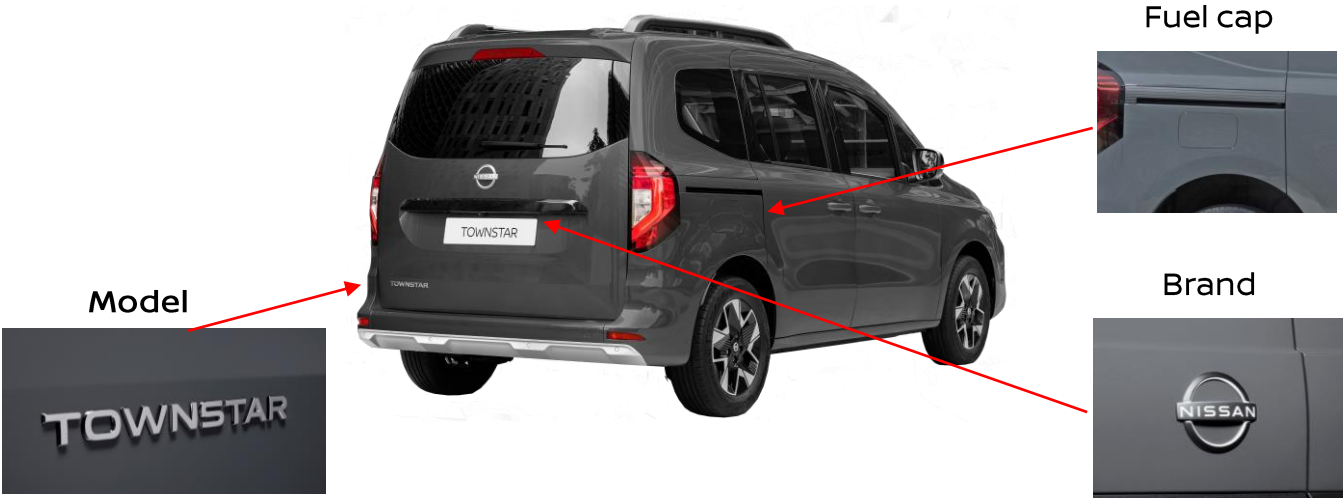

2. Immobilization / stabilization / lifting


Immobilize vehicle:

 - 1. Block wheels
- 2. Set parking brake
- 3. Press start/stop button or turn ignition key to 'OFF' position




Lifting points:

 Appropriate lifting points;

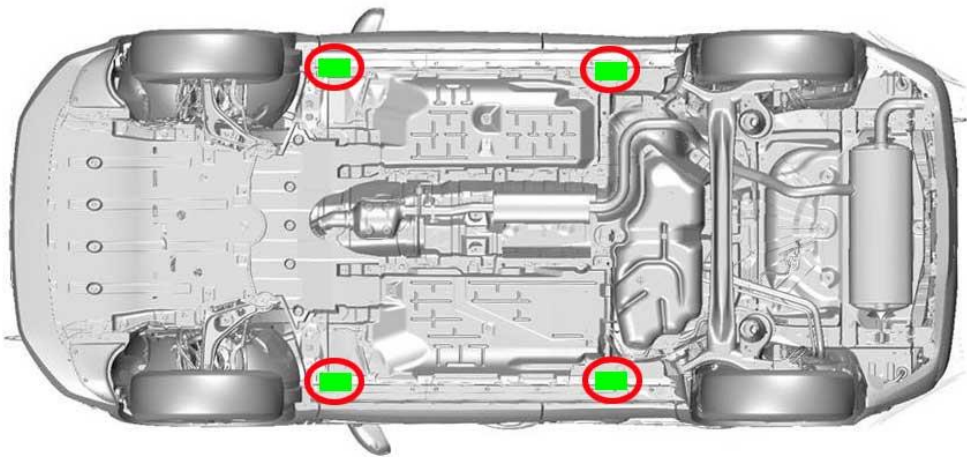


3. Disable direct hazards / safety regulations

Access to the engine compartment

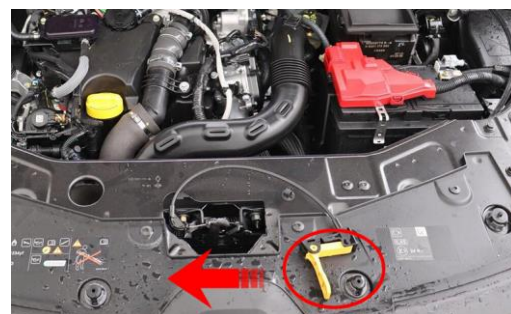


Disconnect the 12 Volts battery

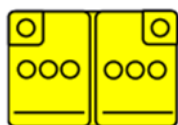

1. Switch off the ignition
2. Disconnect the negative terminal (-)
3. Disconnect the positive terminal (+)

4. Access to the occupants

High strength steel in body and door

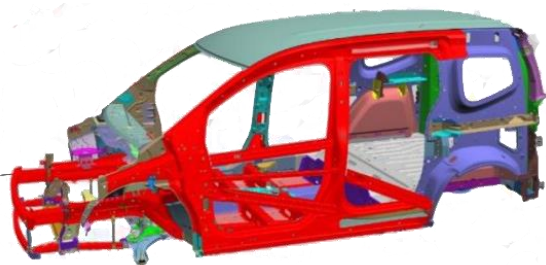

Trunk opening from the inside




Steering column adjustment




Glass types:

- A. Laminated glass.
- B. Tempered glass.

 


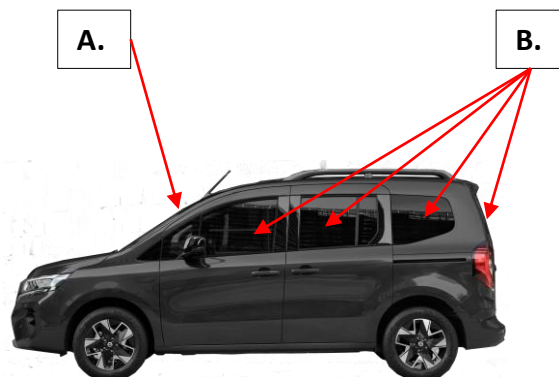



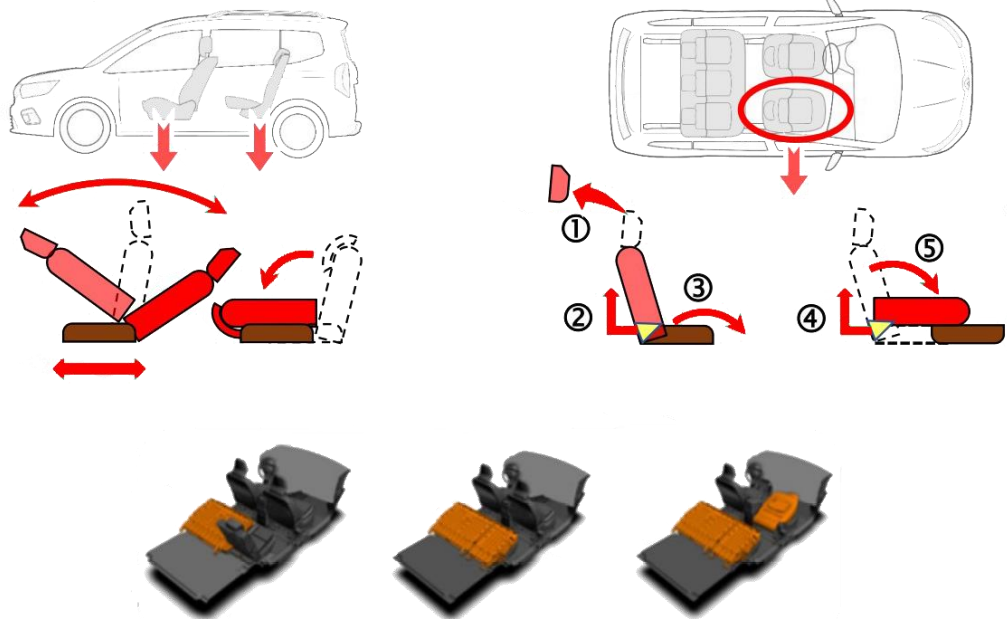








Steering column, hollow and breakable with tools



Possible movement of seats



5. Stored energy / liquids / gases / solids

| | | |
|--|-----------------------|---|
|  | 12V |   |
|  | R-1234yf 550 ±25 g |     |
|  | 60 L |    |
|  | 60 L |    |

6. In case of fire















USE WATER



GAS STRUT, RISK OF MISSILE EFFECT

10. Explanation of pictograms used

| | | | |
|---|---------------------------------|---|----------------------------------|
|  | General warning sign |  | Flammable |
|  | Warning; low temperature |  | Hazardous to the human health |
|  | Air-conditioning component |  | Explosive |
|  | Vehicle on fuel of liquid gr. 2 |  | Corrosives |
|  | Vehicle on fuel of liquid gr. 1 |  | Environmental hazard |
|  | Bonnet |  | Use water to extinguish the fire |