
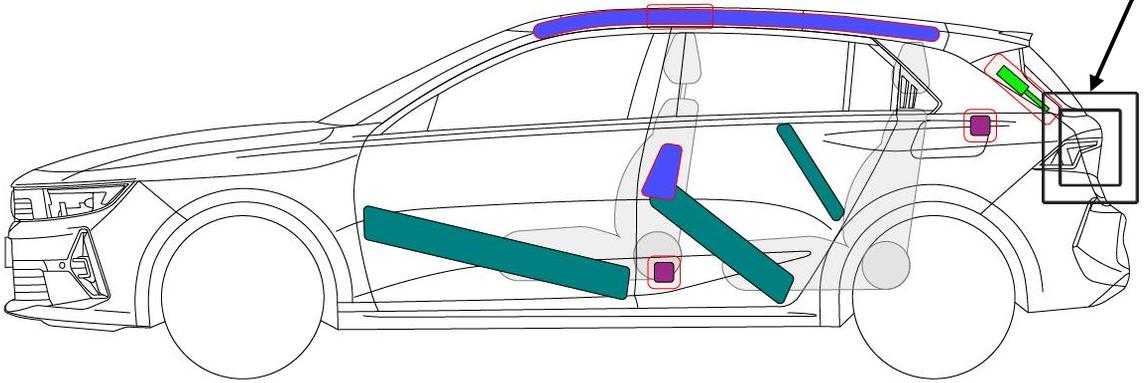


**Opel Astra-L  
5dr Hatchback  
(2021 →)**

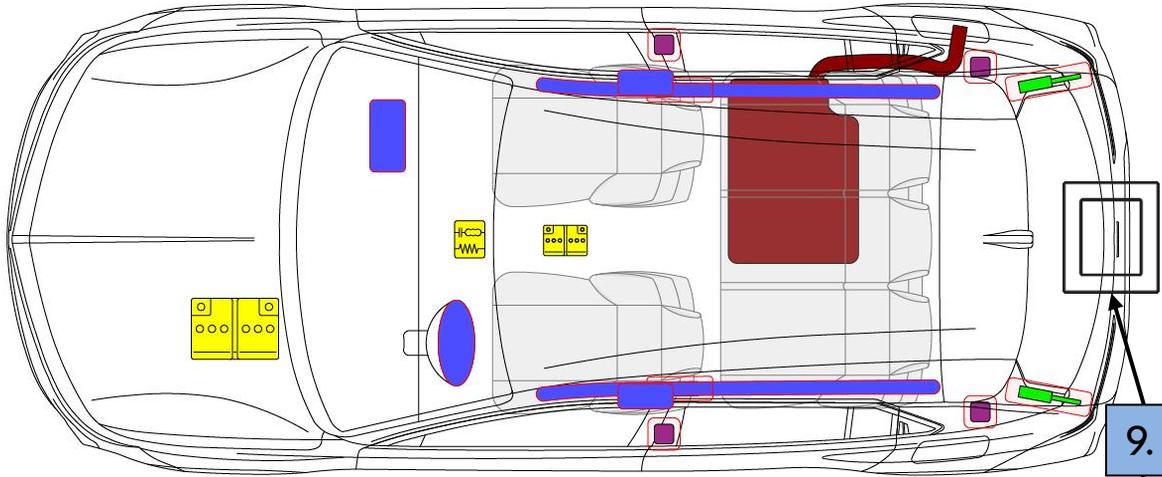

9.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
			Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention
	Battery low voltage				Fuel tank		
					Fuel tank content gasoline/ethanol		Fuel tank content Diesel

## 1. Identification / Recognition

Brand



Model name



## 2. Immobilization / Stabilization / Lifting


**Immobilize vehicle:**

1. Block wheels, apply brake and move gear selector to (P) park mode (AT-version)
2. Set parking brake by pulling the parking brake switch (P)



**Lifting points:**

 Appropriate lifting points


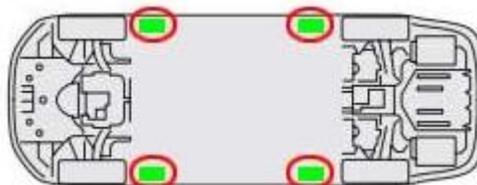


## 3. Disable direct hazards / Safety regulations

1. Switch the ignition key to the 'OFF' position and remove it or push the Start/Stop button once. Then, remove the electronic key and keep at least 16 ft. (5 m) away from the vehicle



 2. Disconnect 12 Volt battery

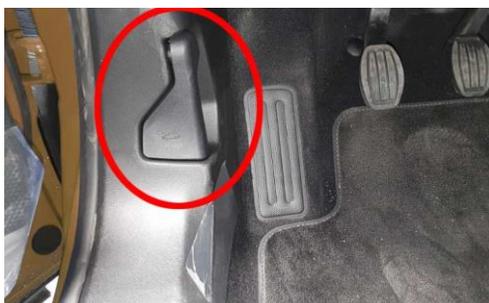

## 4. Access to the occupants

Seat adjustment




Steering column adjustment




**Glass types:**

- A. Laminated glass.
- B. Tempered glass.

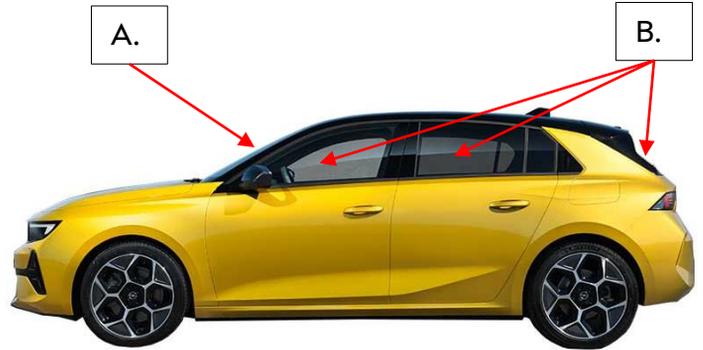

## 5. Stored energy / Liquids / Gases / Solids

 	12V	 
	R-1234yf 395-445 g	   
	52L	 
	52L	 

## 8. Towing / transportation / storage

Location front hook



Location rear hook




# Opel Astra-L 5dr Hatchback (2021 →) Additional Pages

## Towing



## 9. Important additional information

### Location of trunk release touchpad

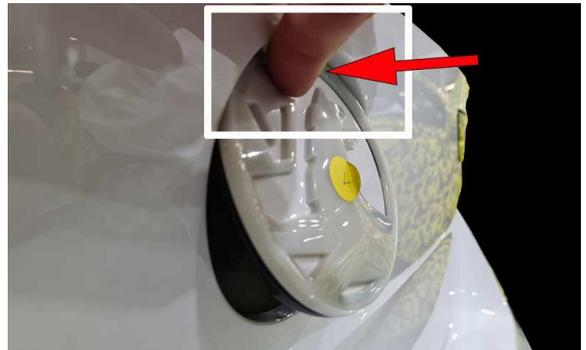

## 10. Explanation of pictograms used

	Remove smart key		Flammable
	Air-conditioning component		Hazardous to the human health
	Caution		Explosive
	Warning; low temperature		Corrosives
	Vehicle on fuel of liquid group 1		Bonnet
	Vehicle on fuel of liquid group 2		