


# Peugeot e3008

5 doors/ 5 seats/ Sedan BEV FWD (2023/ -> )







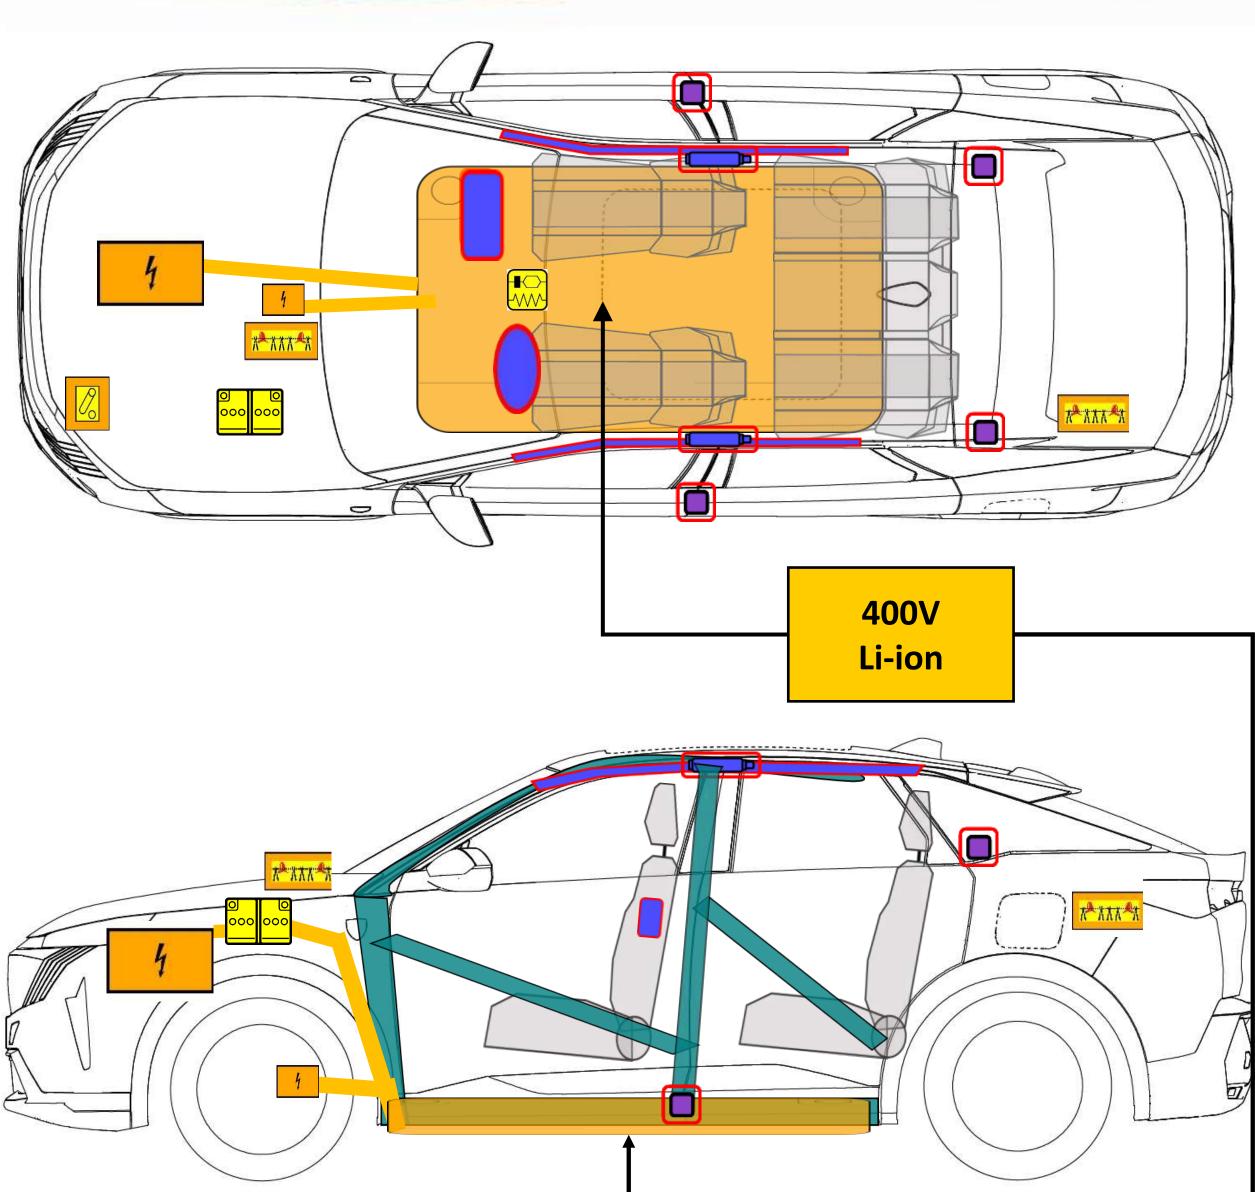


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit	
000 000	Battery low voltage		Gas strut / Preloaded spring		High strength zone	4	High voltage component	
	Battery pack, high- voltage	2	High voltage power cable	X X X X X X	Cable cut	<b>%</b>	Low voltage device that disconnects high voltage	

STELLANTIS	ID N°	Version N°	Version date	Page
STELEMATIS	01365_24_00334	OR	12.12.24	1/4

#### 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF, SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APROPRIATE PPE.

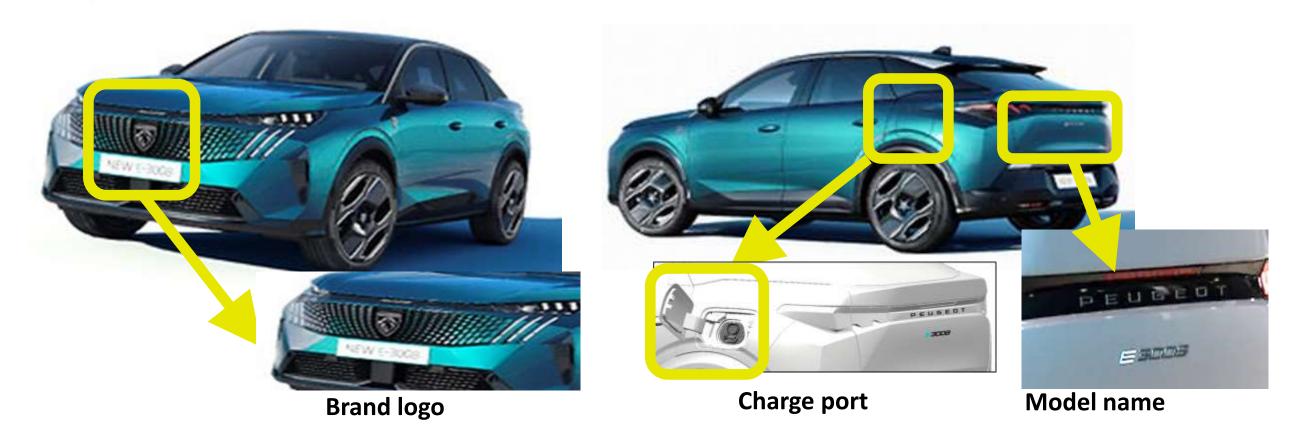


#### 2. Immobilisation / stabilisation / lifting










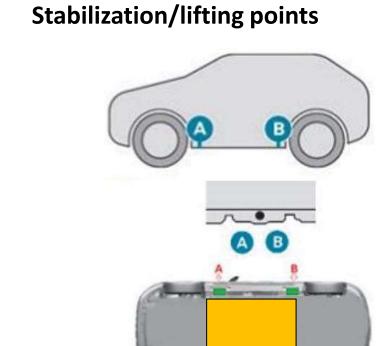 




Do not place cribbing such as wooden blocks or rescue air lifting bags under the fuel system or high voltage power cables. Doing so may result in fuel leaks, fire, or electric shock.

#### 3. Disable direct hazards / safety regulations


#### Main disabling method






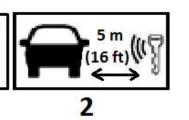





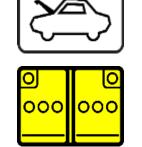



 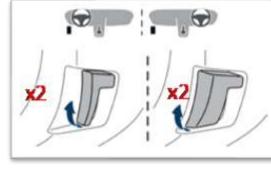


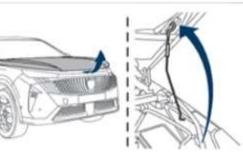

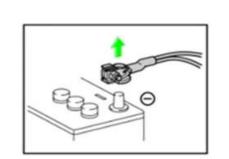

















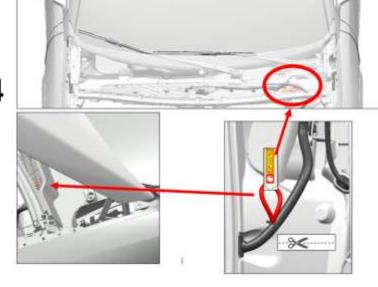

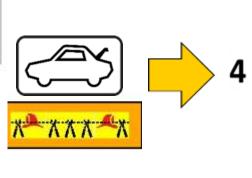


Moquette	O

STELLANTIS	ID N°	Version N°	Version date	Page
	01365_24_00334	OR	12.12.24	2/4

#### 4. Access to the occupants

(serial production) (optional product)

**Glass types** 

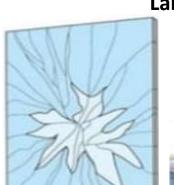












High strength steel body

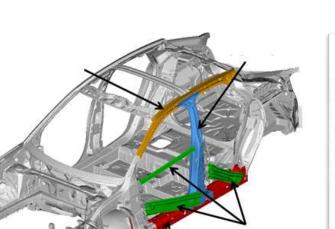




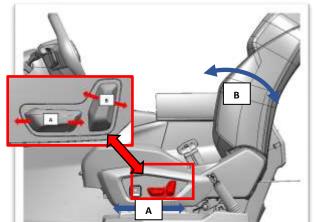

**Steering column** adjustment

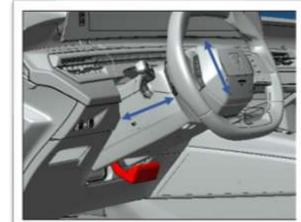

#### 5. Stored energy / liquids / gases / solids

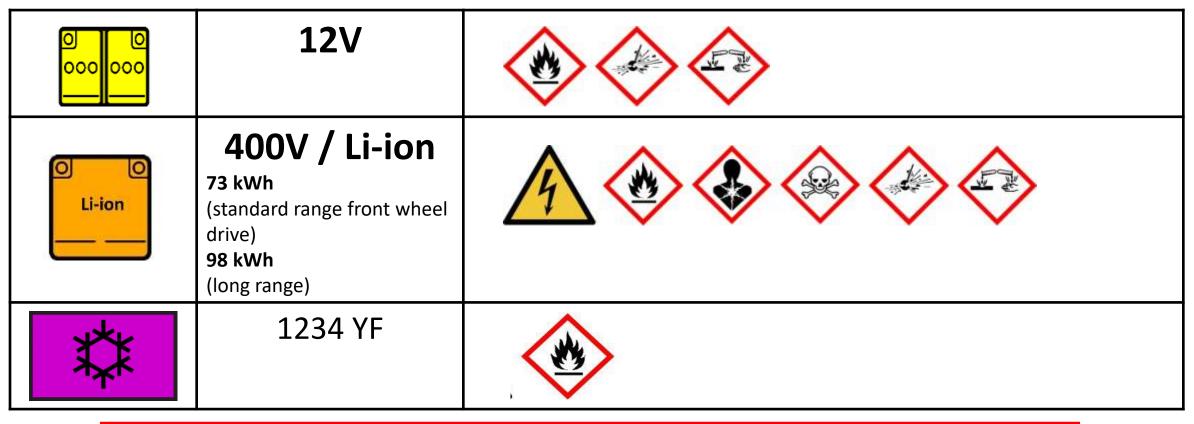



when coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



#### 6. In case of fire



#### Use large amount of water









Lithium-ion batteries may self-ignite or reignite once the fire has been extinguished. Monitor the temperature of the high-voltage battery!

STELLANTIS	ID N°	Version N°	Version date	Page
STELEMATIS	01365_24_00334	OR	12.12.24	3/4

#### 7. In case of submersion





Remove the vehicle from the water then refer to chapter 3, Disable direct hazards / safety regulation


#### 8. Towing / transportation / storage

#### **Location front hook**



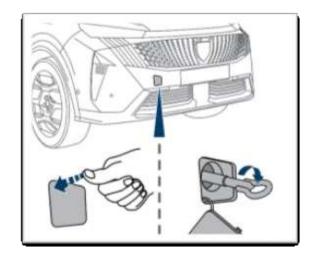

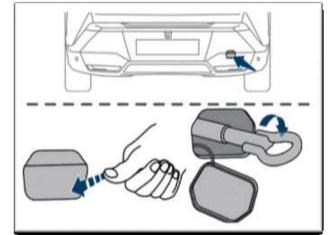

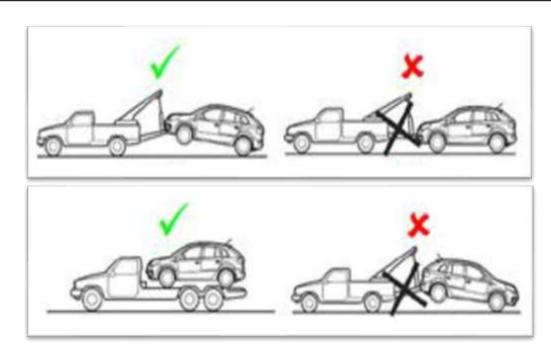

STORE AT SAFE DISTANCE FROM OTHER VEHICLES!



#### 9. Important additional information

















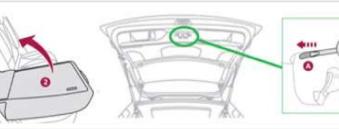

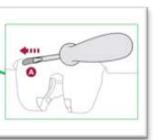



## **BEV FWD**







### 10. Explanation of pictograms used

	Remove smart key		Flammable
$\wedge$	General warning sign		Hazardous to the human health
*	Warning; low temperature		Acute toxicity
4	Warning, Electricity		Explosive
*	Air-conditioning component		Corrosives
4	Electric Vehicle	( Solar	Use water to extinguish the fire
□\IR \\\\	Use thermal Infrared camera		Bonnet

STELLANTIS	ID N°	Version N°	Version date	Page
STEELANTIS	01365_24_00334	OR	12.12.24	4/4