

Note: The illustration shows the maximum possible range of equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner	SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / preloaded spring		High-strength zones	Special attention		
00000	Battery pack, low-voltage	HH	Ultracapacitor, lowvoltage		Fuel tank	Gas tank		Safety valve
	Battery pack, high-voltage	2	High-voltage power cable	8	High-voltage disconnect	Fuse box, disabling high-voltage system	HAH	Ultracapacitor, highvoltage

 Additional information
 Document number
 Version
 Page

 rds_vwv_270_003_en
 09/2021
 1 of 3



1. Identification / recognition




2. Immobilisation / stabilisation / lifting

Immobilize the vehicle

Apply the parking brake.



Lifting points

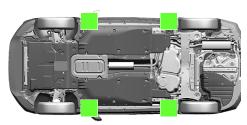

Suitable lifting points

Turn off the ignition

Remove the ignition key from the steering column or press the "Start Stop" button in the center console.






3. Disable direct hazards / safety regulations

Disconnect the 12-volt battery



Disconnect the earth connection (-) in the engine compartment

4. Access to the occupants

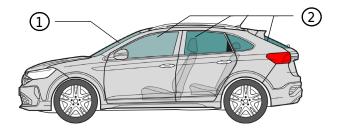

Glass types:

- (1) Composite safety glass
- (2) Single-layer safety glass

09/2021

Additional information Document number Version Page



5. Stored energy / liquids / gases / solids



12 V

6. In case of fire

7. In case of submersion

8. Towing / transportation / storage



Do not tow a vehicle that has been involved in an accident on its drive axles.

45 I

9. Important additional information

10. Explanation of pictograms used















Release the bonet

Remove smart key

Additional information **Document number** Version Page 3 of 3 09/2021