



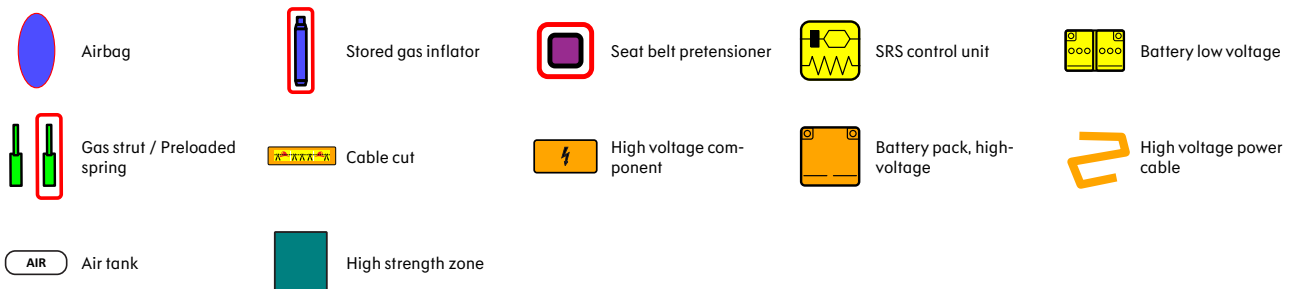

ZEEKR

Zeekr 7x  
Type: 5dr SUV  
(2025 - )

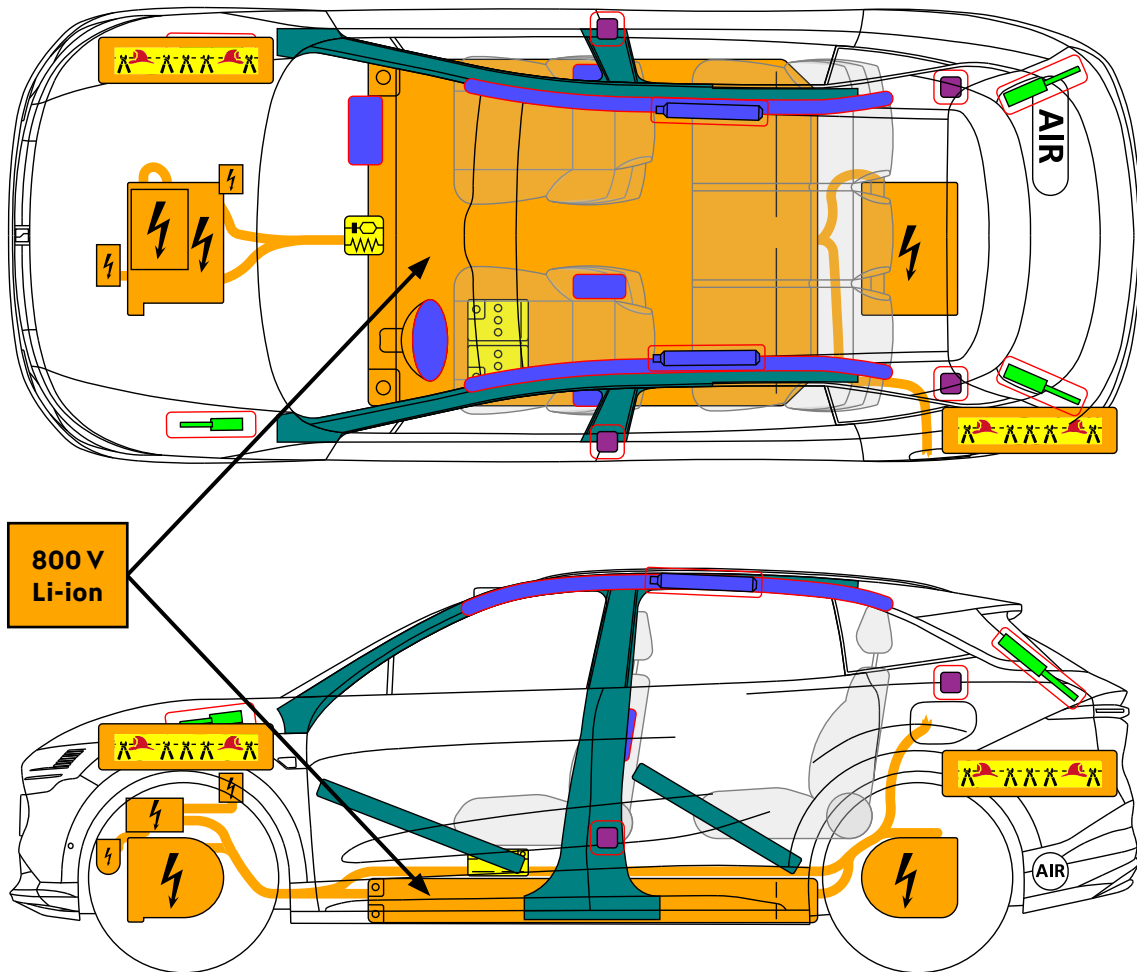

Internal reference

Version

Creation date

Page

Zeekr\_7X\_SUV\_2025\_5d\_Electric\_EN

01

01/2025

1 / 4



ZEEKR

Zeekr 7x  
Type: 5dr SUV  
(2025 - )



## 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

### Brand logo



### Model name




### Charge port



## 2. Immobilisation / stabilisation / lifting


### Immobilise vehicle:

1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position

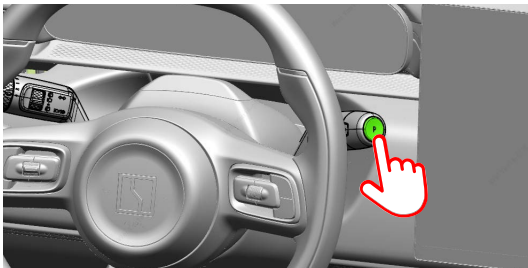

### Lifting points:



- Appropriate lifting points
- High voltage battery

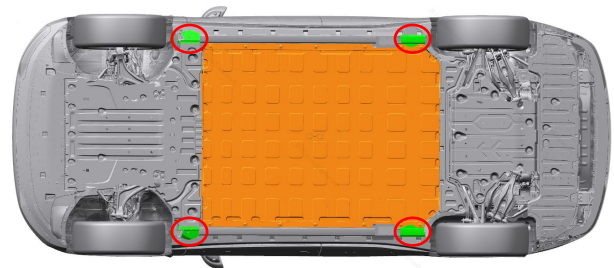



## 3. Disable direct hazards / safety regulations

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.

### Main method:

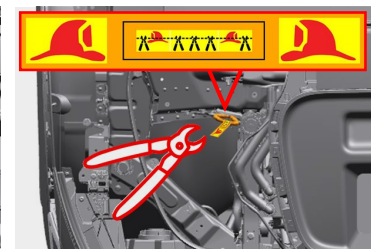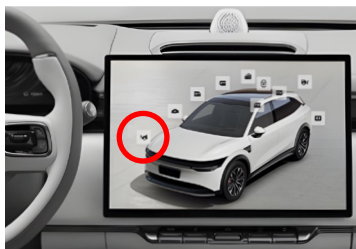

### Alternative method:

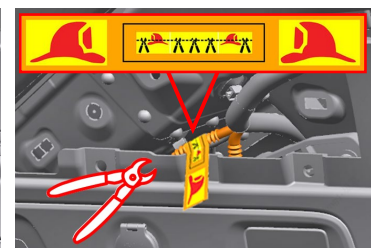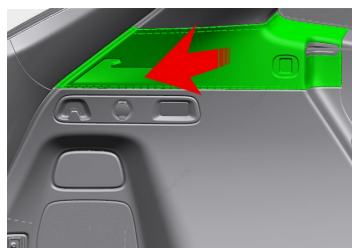







**ZEEKR**

**Zeekr 7x**  
**Type: 5dr SUV**  
**(2025 - )**


 
#### Disconnect 12 Volt battery

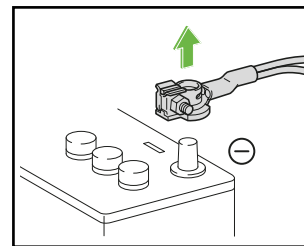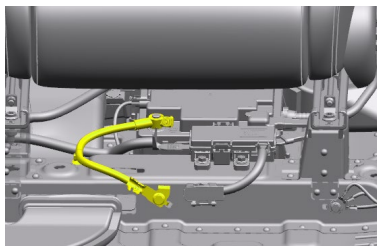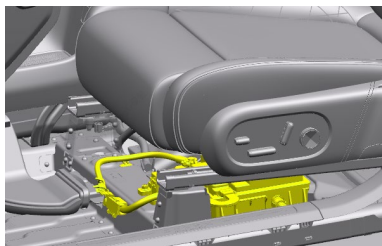

#### Safety instructions




Always assume the vehicle is powered, even if it is silent!

Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.

## 4. Access to the occupants

### Steering wheel, tilt control

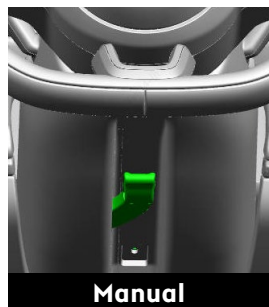

Manual




Electric

### Seat adjustment




### Glass types

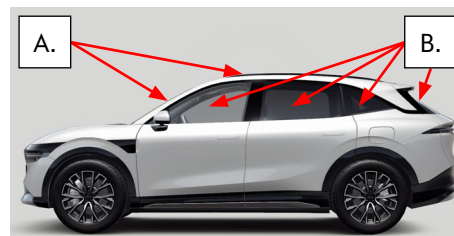


A. Laminated glass

B. Tempered glass


### Opening side doors from outside with power

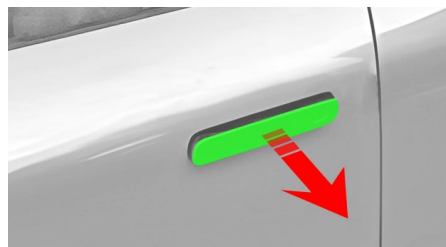

### Opening side doors from inside with power

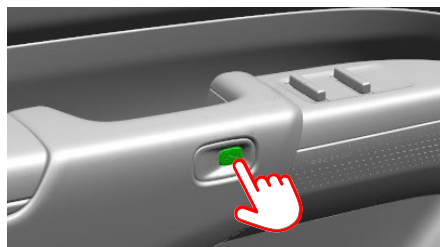

### Opening side doors from inside without power

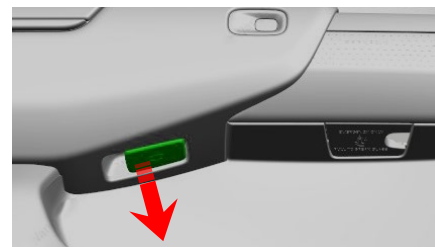


## 5. Stored energy / liquids / gases / solids

|  |                            |  |
|--|----------------------------|--|
|  | 800V                       |  |
|  | 12V                        |  |
|  | HFC-1234yf<br>875 +/- 25 g |  |
|  | 17 bar                     |  |



 When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway. Wear appropriate PPE.



Internal reference

Version

Creation date

Page

Zeekr\_7X\_SUV\_2025\_5d\_Electric\_EN

01

01/2025

3 / 4



**ZEEKR**

**Zeekr 7x**  
**Type: 5dr SUV**  
**(2025 - )**



## 6. In case of fire

Extinguishing method for the high voltage (HV) battery:



**LARGE AMOUNTS OF PURE WATER**



**POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.**




## 7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

## 8. Towing / transportation / storage


**Recovery hook storage**

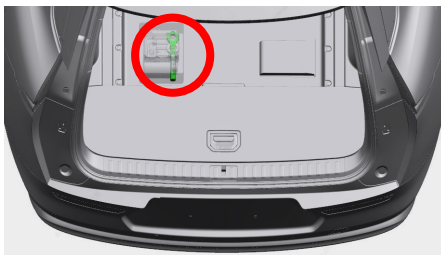


**Location front hook**



**Location rear hook**

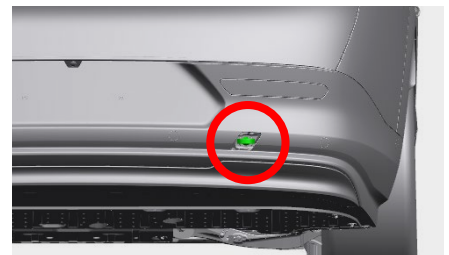

**Towing**

 

**STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE  $\geq 5M$  FROM OTHER OBJECTS OR VEHICLES!**



**POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.**



## 10. Explanation of pictograms used

|  |                                  |  |                               |
|--|----------------------------------|--|-------------------------------|
|  | Electric Vehicle                 |  | Flammable                     |
|  | Warning, Electricity             |  | Hazardous to the human health |
|  | General warning sign             |  | Acute toxicity                |
|  | Warning; low temperature         |  | Corrosives                    |
|  | Air-conditioning component       |  | Explosive                     |
|  | Use water to extinguish the fire |  | Bonnet                        |
|  | Use thermal Infrared camera      |  | Boot                          |

Internal reference

Version

Creation date

Page

Zeekr\_7X\_SUV\_2025\_5d\_Electric\_EN

01

01/2025

4 / 4