



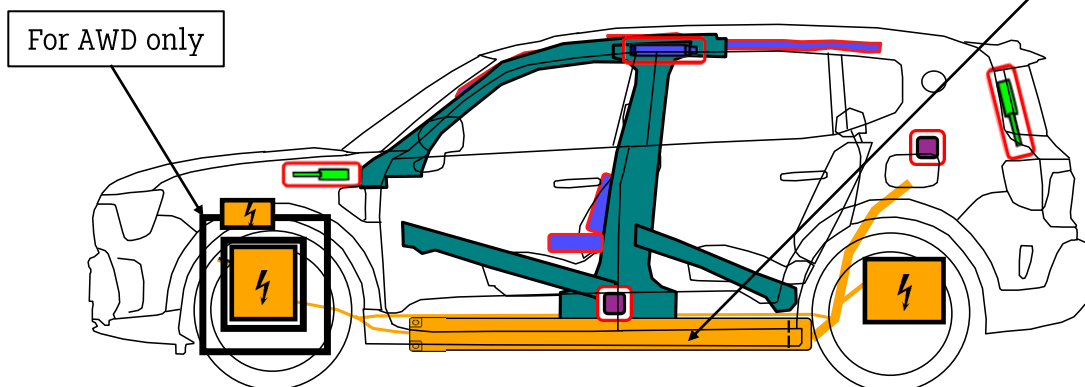

smart #5
5-door model,
as of 2025

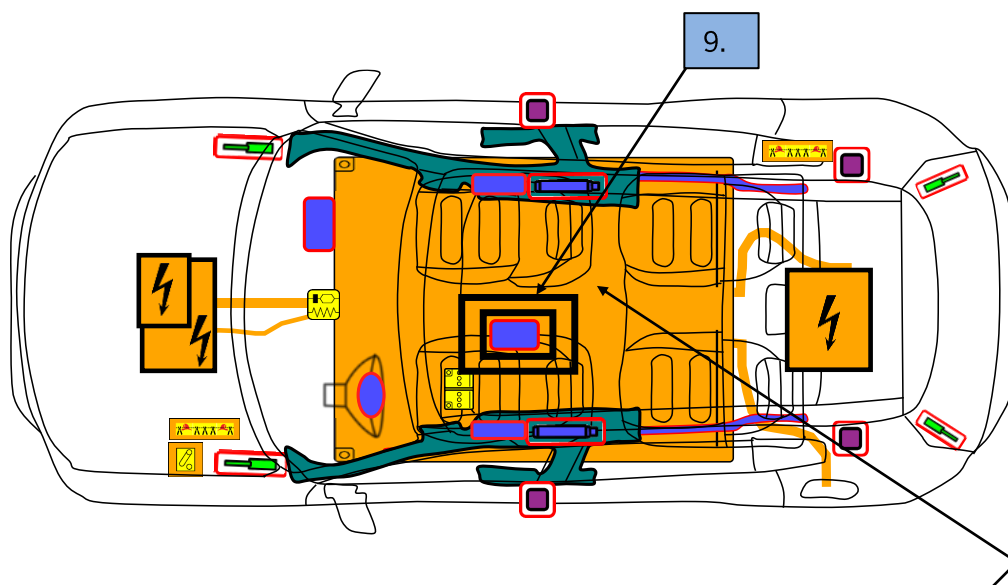

| | | | | | | | | | |
|--|--|--|------------------------------|--|----------------------------------|--|------------------------|--|-----------|
| | Airbag | | Stored gas inflator | | Seat belt pretensioner | | SRS control unit | | Cable cut |
| | Battery pack, high-voltage | | Gas strut / Preloaded spring | | High strength zone | | Battery low voltage | | |
| | Low voltage device that disconnects high voltage | | High voltage power cable | | Zone requiring special attention | | High voltage component | | |



smart #5
5-door model,
as of 2025



1. Identification / recognition





LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.



2. Immobilisation / stabilisation / lifting


Immobilise vehicle

Parking brake: ① Block wheels by depressing the brake pedal and ② press switch P at the selector lever to select the P (park) position. The brake is activated automatically.

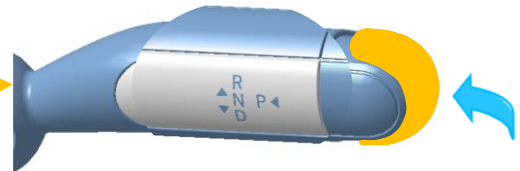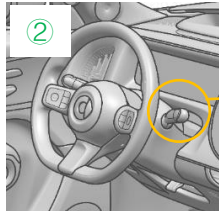

The electric motor is silent. The indicator on the left of the instrument cluster indicates whether the electric drive is switched "OFF" or "READY" for operation.

Stabilisation – Lifting points

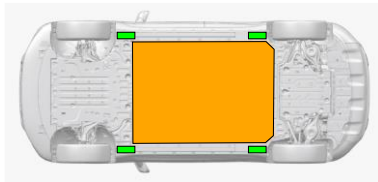

■ Appropriate lifting points;


■ High voltage battery;



3. Disable direct hazards / safety regulations

Deactivate the high-voltage system


MAIN METHOD: For deactivation in the engine compartment, disconnect the high voltage battery.

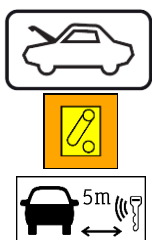

① Open the bonnet;



② Remove the cover board.

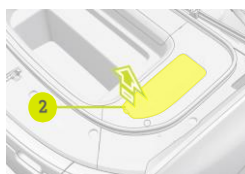


③ Disconnect the high voltage.



1. Pull out red tab

2. Pull out black connector

 3. Keep the key at a distance of at least 5 m.




Alternative method 1: Cut the removable cable in the passenger compartment.



① Remove the right-side C-pillar upper trim panel.

② Cut the removable cable; follow the instructions on the label.

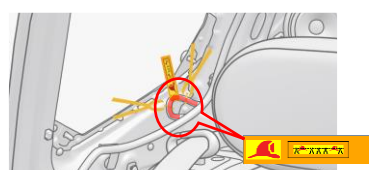



smart #5

5-door model,
as of 2025



Alternative method 2: Cut the removable cable in the engine compartment.



① Press the latch and remove the pull rope cover.



② Pull the bonnet release cable twice to open the bonnet.



③ Cut and remove the wiring harness with rescue signs in the engine compartment.



Access to 12V Battery



① Open the carpet under driver's seat;



② Disconnect the 12V battery.




Always assume the vehicle is powered, even if it is silent!


Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with airbag deployment and/or seat belt pretensioner activation, the propulsion system will be disabled.

4. Access to the occupants

High strength steel body

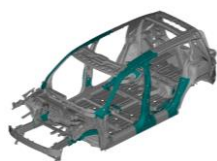


Seat adjustment

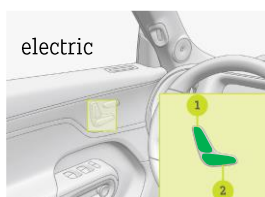

Steering column adjustment



Glass types

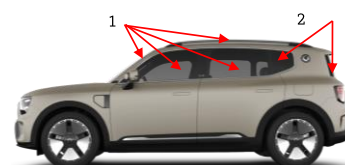


1. Laminated glass.


2. Tempered glass.

Door opening in emergency situations:

- a) Press the left corner of the handle to pivot it;
b) Pull the right side to open the door.

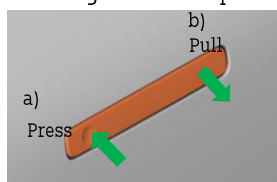

Opening side doors from inside without power

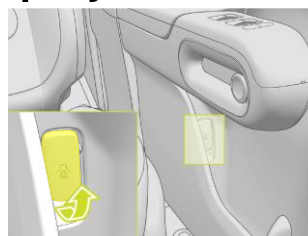

Pull the emergency door handle to open the door. Each of the four doors is equipped with an emergency door handle.

5. Stored energy / liquids / gases / solids

| | | | | |
|--|--|-----------|---------------|----------------|
| | | 398V/685V | | |
| | | 12V | | |
| | | | w/o heat pump | with heat pump |
| | | R-1234yf | 525±25g | 925±25g |



If coolant escapes from the battery cooling system, there is a risk of a thermal reaction in the high-voltage battery.
Monitor the temperature of the high-voltage battery!





smart #5
5-door model,
as of 2025



6. In case of fire



USE LARGE AMOUNTS OF WATER




**POTENTIAL RISK OF BATTERY RE-IGNITION /
DELAYED IGNITION!**

7. In case of submersion

After rescuing the vehicle from the water, deactivate the high-voltage system (see Chapter 3) and allow the water to drain. Wear appropriate protective equipment!

8. Towing / transportation / storage

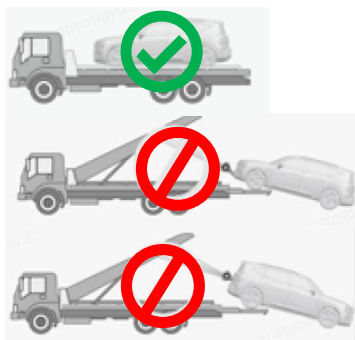

STORE VEHICLE IN AN OPEN-AIR PARKING AT
SAFE DISTANCE $\geq 5\text{M}$ FROM OTHER OBJECTS OR
VEHICLES!


 


POTENTIAL RISK OF
BATTERY RE-IGNITION
/DELAYED IGNITION!



9. Important additional information

Centre airbag

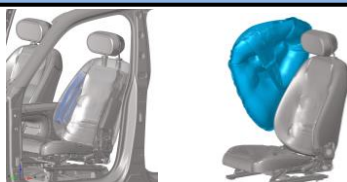

10. Explanation of pictograms used

| | | | | | | | |
|----------------------------------|----------------------|----------------|-------------------------------|----------------------------|------------------|------------------------|-------------------------------|
| | | | | | | | |
| Flammable | Explosive | Corrosives | Hazardous to the human health | Air-conditioning component | Electric vehicle | Seat height adjustment | Seat adjustment, longitudinal |
| | | | | | | | |
| Use water to extinguish the fire | General warning sign | Acute toxicity | Use thermal Infrared camera | Warning, Electricity | Bonnet | Remove smart key | Steering wheel, tilt control |