


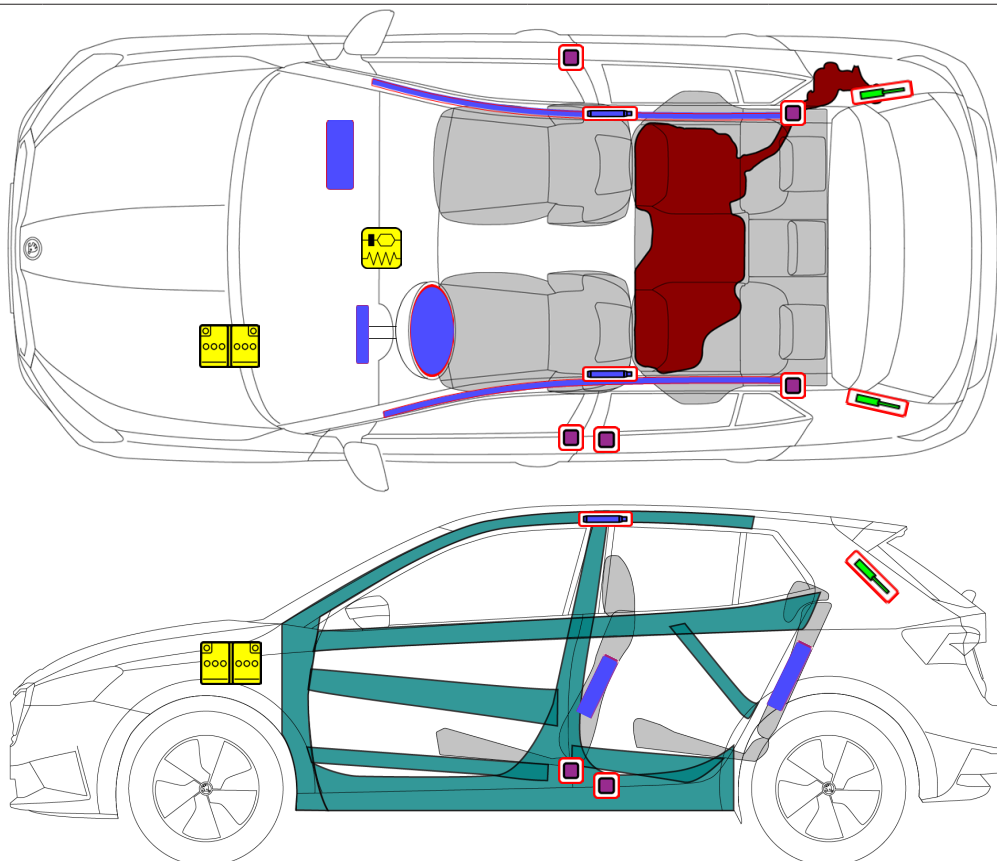

Legend

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra-capacitor
	Fuel tank content gasoline/ethanol								
				ID-Number	Version number	Version date	Page		
				TMB- PJ	01	09/2021	1 of 4		



1. Identification / recognition



Lettering **FABIA** on the tailgate.



2. Immobilisation / stabilisation / lifting

2A - Immobilisation / stabilisation



Automatic gearbox

1. Shift selector lever into position "P".
2. Secure the vehicle with the parking brake.



Manual gearbox

1. Put the shift lever into neutral position.
2. Secure the vehicle with the parking brake.

 


Turn the ignition key to the "OFF" position" and remove it

or





Press the START-STOP button.



Remove the key from the vehicle.

 
 
2B - Lifting

Lifting points

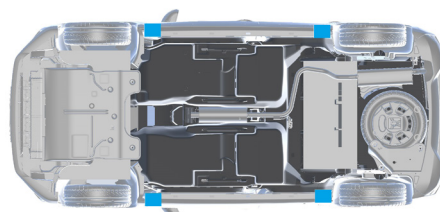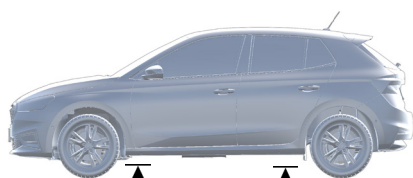

3. Disable direct hazards / safety regulations

3A - Shut power off



See chapter 2A





 

or




- a) Locate the 12V battery in the engine compartment, see chapter 3B.
- b) Disconnect the 12V battery from the vehicle electrical system using a suitable tool.

1. Disconnect the negative pole (-).
2. Disconnect the positive pole (+).

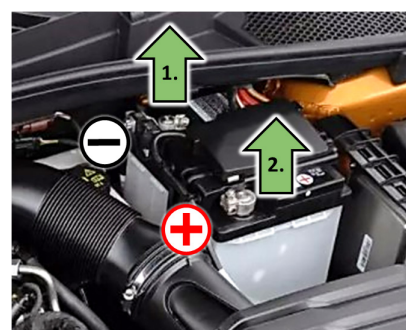

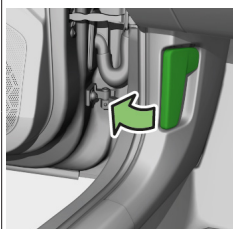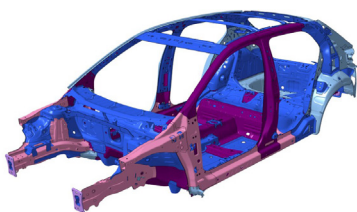
3B - Access to 12V battery

4. Access to the occupants
High strength body areas

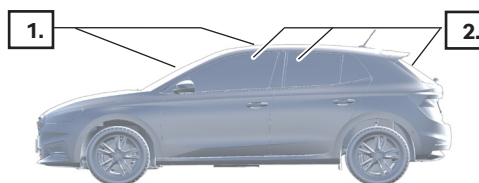
Glass types: 1. Laminated safety glass
2. Tempered safety glass


5. Stored energy / liquids / gases / solids

		50L
		12V
		0,43Kg

6. In case of fire


Use large amount of water.

Use appropriate protective equipment!

7. In case of submersion

After recovering the vehicle from the water, drain the water.

Use appropriate protective equipment!

8. Towing / transportation / storage

Do not tow the vehicle on the front axles.




10. Explanation of pictograms used

Flammable	Environmental hazard	Corrosives	Hazardous to the human health	Explosive	Vehicle on fuel of liquid group 2	Air-conditioning component	General warning sign	Lifting point; central support
Use water to extinguish the fire	Bonnet	Remove smart key	Device to shut down power in vehicle					