
GWM H7 HEV

5 doors/5 seats/SUV

from 2026





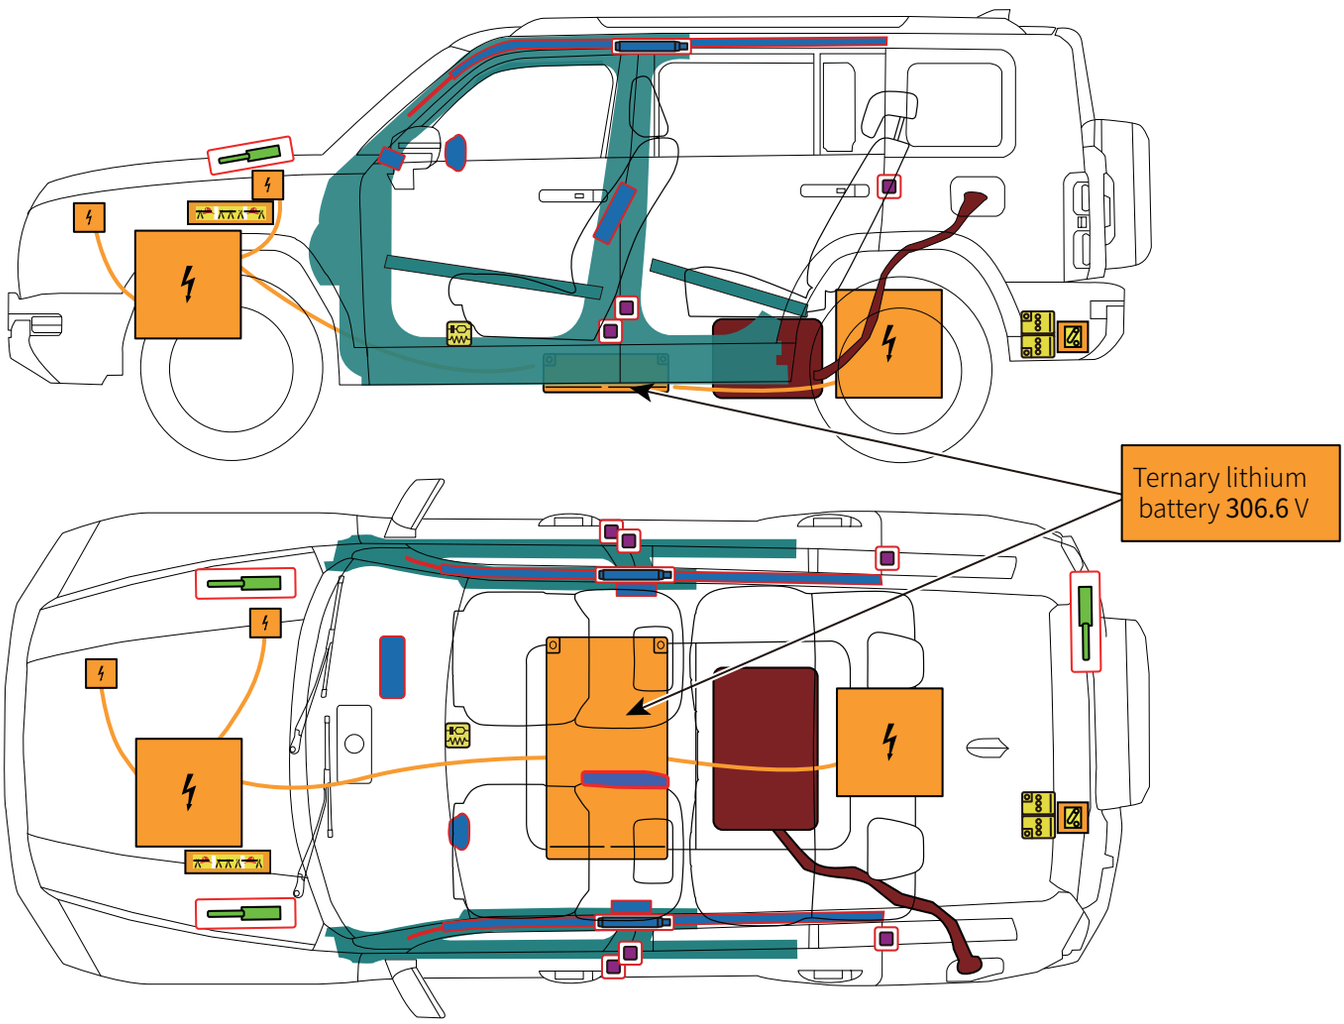

	Airbag		Stored gas inflator		Seat belt pre-tensioner		SRS control unit		Fuel tank content gasoline/ ethanol
	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Low voltage device that disconnects high voltage		Cable cut
	High voltage power cable		High voltage component		Battery pack, high-voltage				


This overview shows the maximum scope of vehicle equipment.


ID No.	Version No.	Page No.
LGW-GWM H7-HEV	V1	1/4

© Great Wall Motor Company Limited

1. Identification / recognition


LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.WEAR APPROPRIATE PPE.

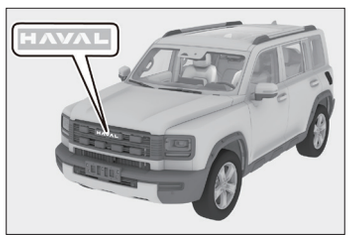

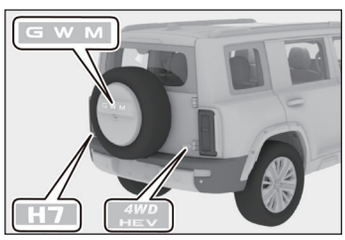


2. Immobilisation / stabilisation / lifting

Stabilise vehicle

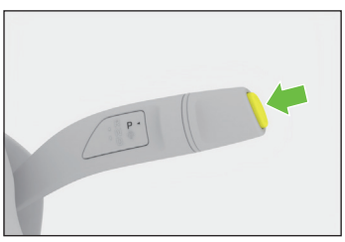


Press the P button, engage the P gear and apply the parking brake.

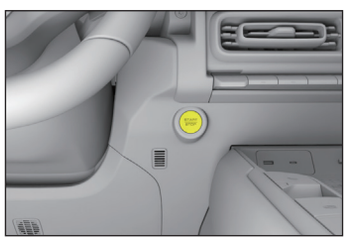

Turn off the vehicle power supply.


Lifting points

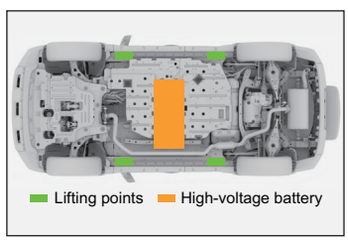


3. Disable direct hazards / safety regulations


After the vehicle collision, high-voltage power is cut off, and this indicator is displayed on the instrument cluster.


Primary method

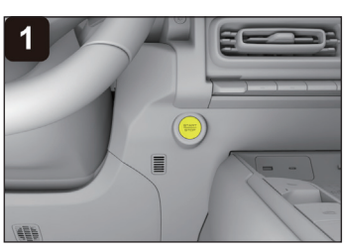

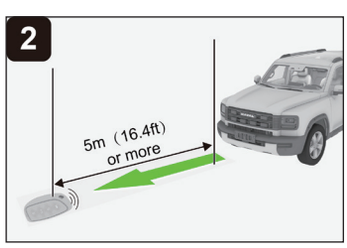





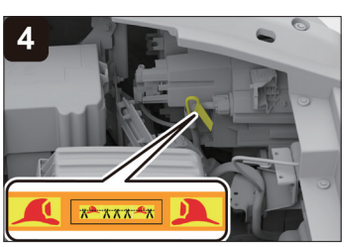


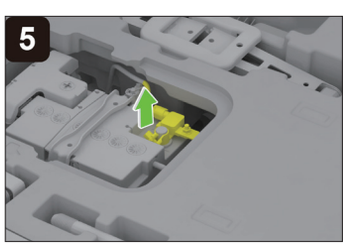


Secondary method

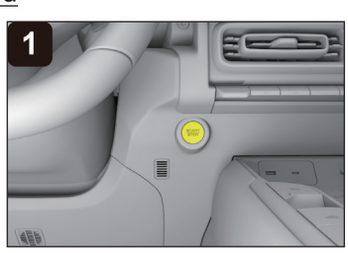


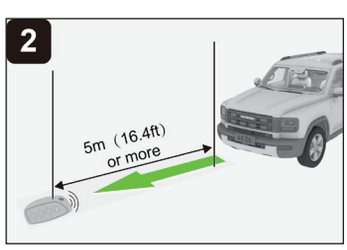

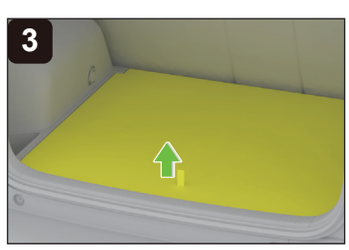

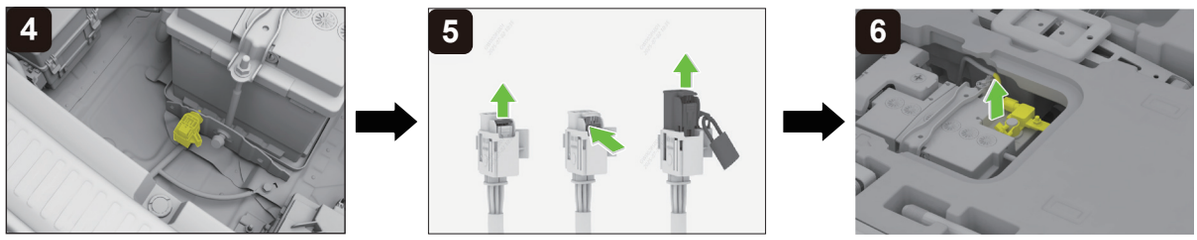


Disconnect 12 V battery

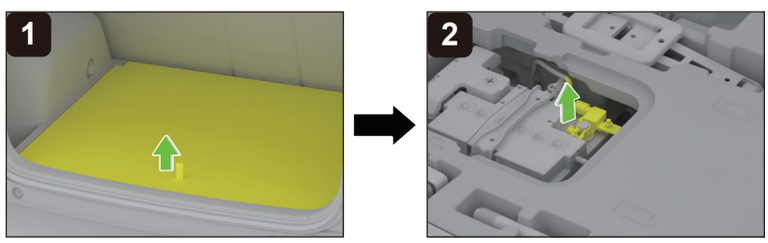


4. Access to the occupants

AFTER DISCONNECTING THE NEGATIVE CABLE OF THE 12 V BATTERY, ALL ELECTRICAL FUNCTIONS OF THE VEHICLE WILL BE DISABLED.

High-strength zone

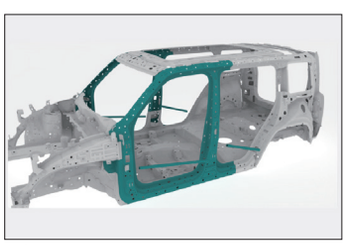


Seat adjustment

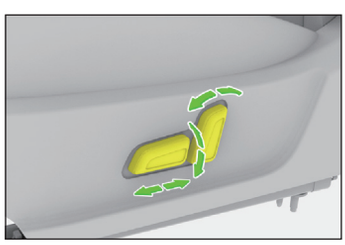

Steering wheel adjustment



Glass type

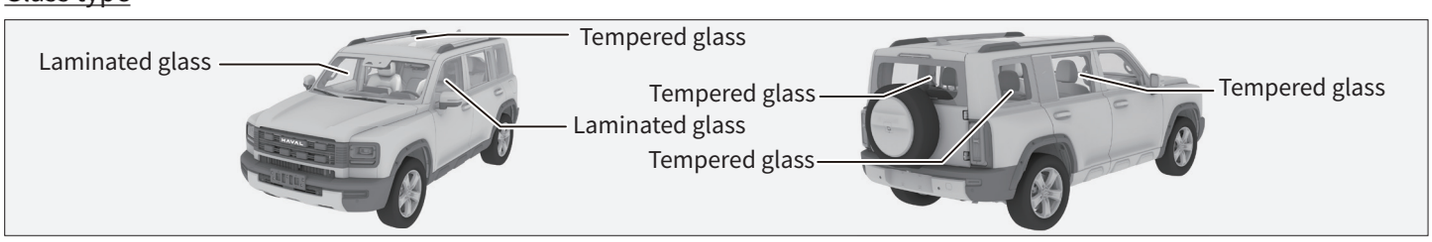

5. Stored energy / liquids / gases / solids

		12 V
Li-ion		306.6 V
		55 L
		750 ± 10 g

6. In case of fire

USE COPIOUS AMOUNTS OF WATER TO EXTINGUISH THE FIRE.

- Risk of traction battery re-ignition!
- Do not enter the interior of a burning vehicle!


The current vehicle's battery pack is at risk of thermal runaway. Danger! Please move away from the vehicle immediately!

7. In case of submersion


- Tilt the vehicle to one side to drain water from the interior.
- When handling any submerged vehicle, wear appropriate personal protective equipment. Before starting any operations, if possible, pull the vehicle out of the water, secure it, and disconnect the power supply(see Chapter 3).

8. Towing / transportation / storage


Front towing eye position

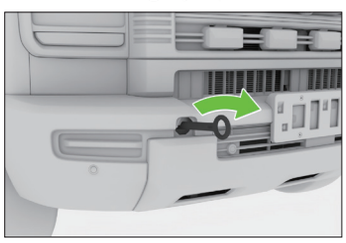


Rear towing eye position

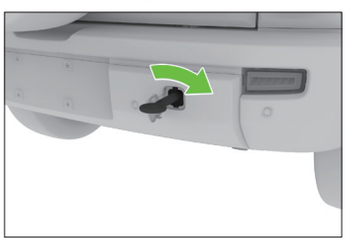

Towing eye storage location

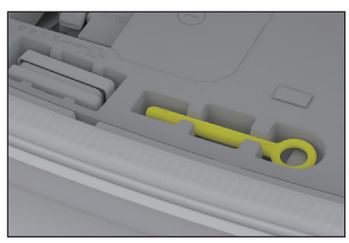

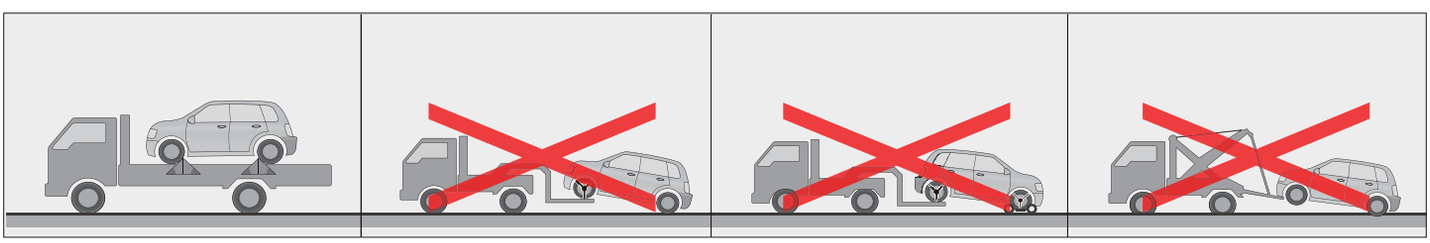

STORE THE VEHICLE IN A SAFE LOCATION AWAY FROM OTHER VEHICLES!

9. Important additional information

No other important information.

10. Explanation of pictograms used

Pictogram	Meaning
	Remove smart key
	Bonnet
	General warning sign
	Boot

Pictogram	Meaning
	Flammable
	Explosive
	Corrosives
	Warning, Electricity

Pictogram	Meaning
	Hazardous to the human health
	Use water to extinguish the fire
	Air-conditioning component
	Use thermal Infrared camera