
GWM ORA 5 EV

5 - door SUV, Hatchback

from 2026

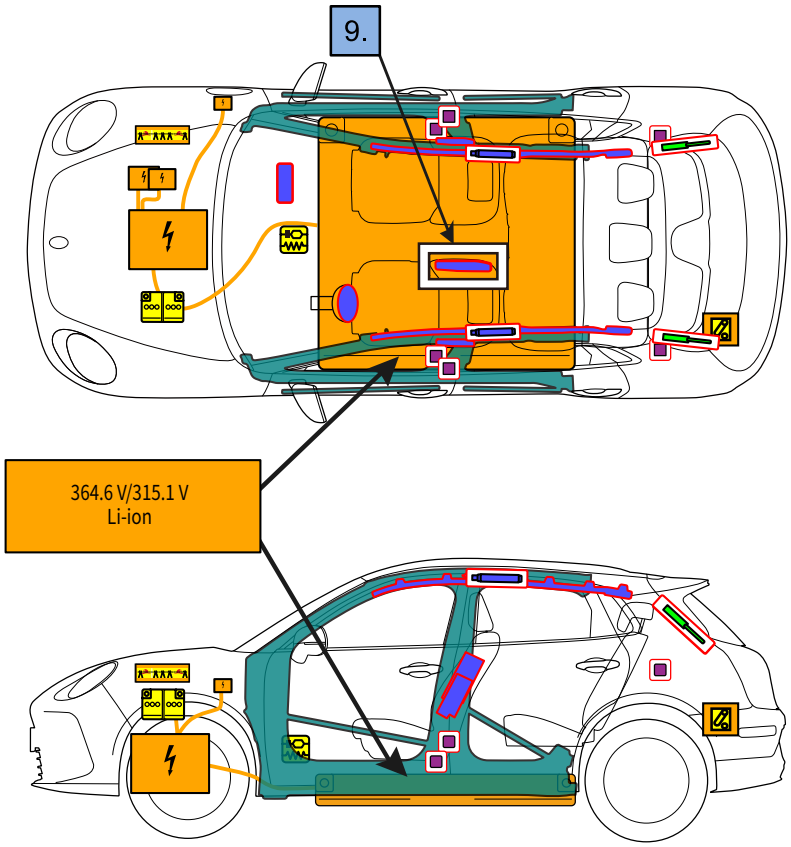





	Airbag		Stored gas inflator		Seat belt pre-tensioner		SRS control unit		Battery low voltage
	Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		Battery pack, high-voltage		High voltage power cable
	High voltage component		Low voltage device that disconnects high voltage		Cable cut				

This overview shows the maximum scope of vehicle equipment.


ID No.	Version No.	Page No.
LGW-ORA 5-EV	V1	1/4


© Great Wall Motor Company Limited

1. Identification / recognition

THERE IS THE POSSIBILITY OF SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.




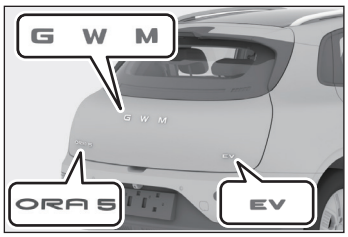

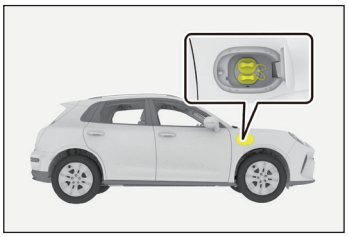


2. Immobilisation / stabilisation / lifting

Stabilise vehicle

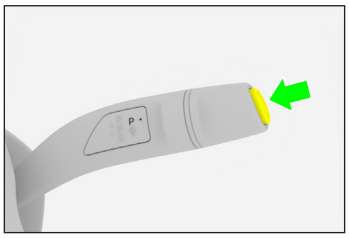


Press the P button, engage the P gear and apply the parking brake.

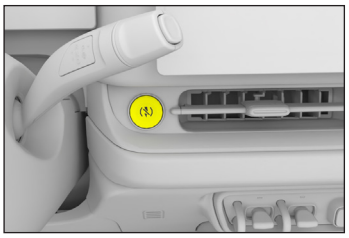

Press the button to switch off vehicle power supply.

Lifting points

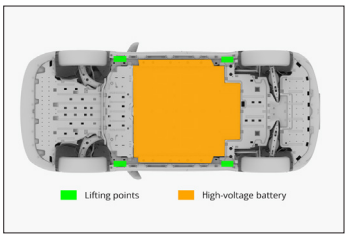


3. Disable direct hazards / safety regulations


Li-ion


In any collision that causes the airbag control unit to issue a collision signal, such as airbag deployment or a severe rear impact, accompanied by illumination of the SRS warning light and the electric power system fault indicator lamp , the vehicle will automatically cut off the high voltage power.

Primary method

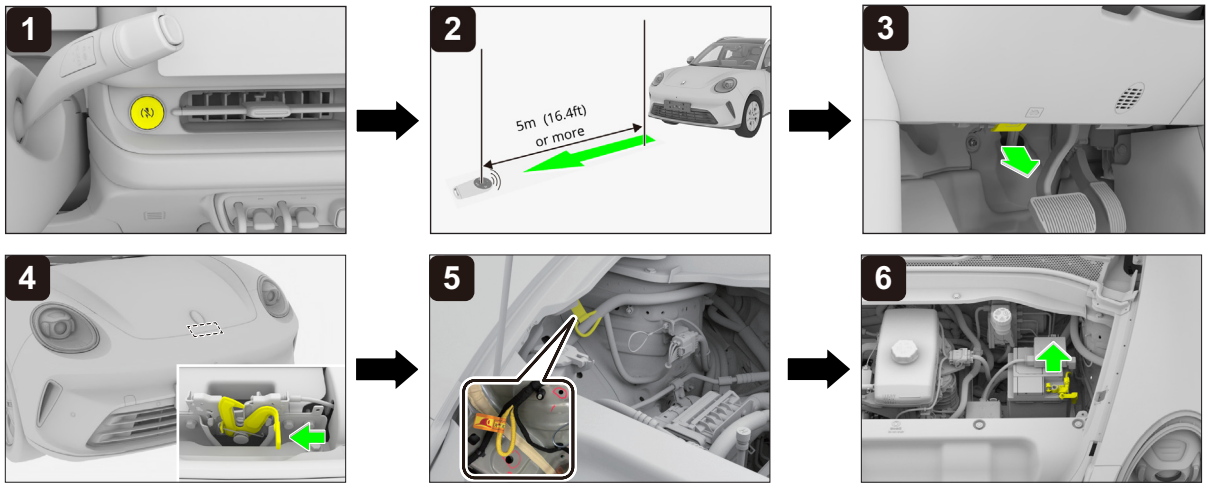


Secondary method

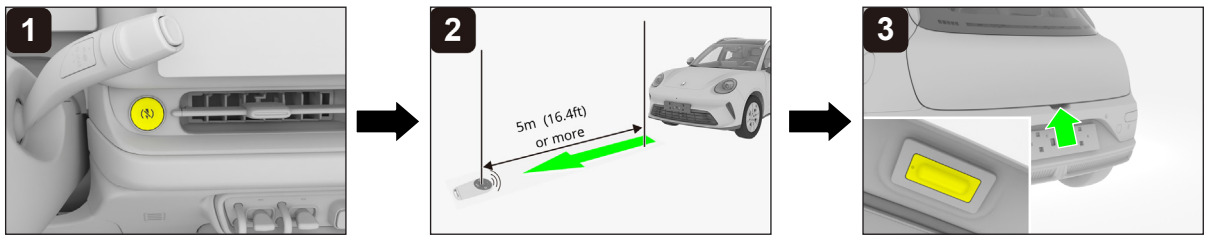

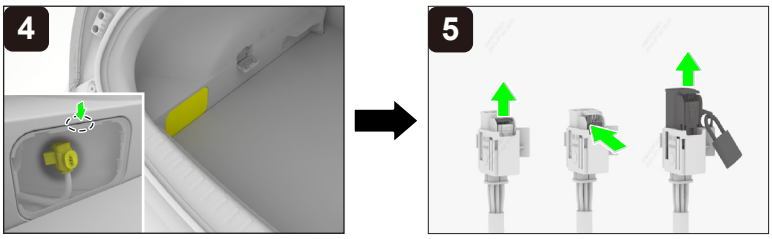


Disconnect 12 V battery

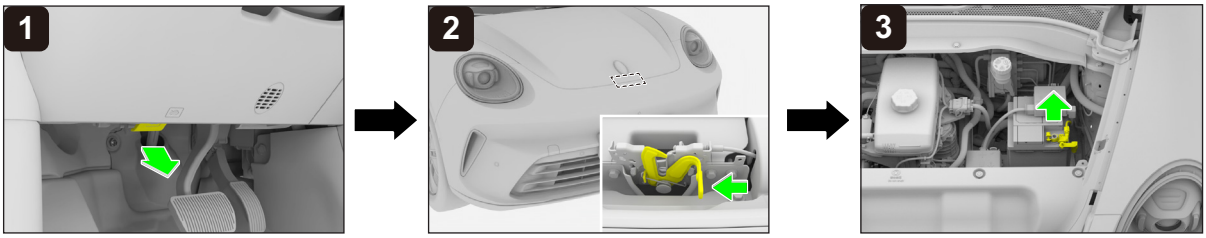

4. Access to the occupants


AFTER DISCONNECTING THE NEGATIVE CABLE OF THE 12 V BATTERY, ALL ELECTRICAL FUNCTIONS OF THE VEHICLE WILL BE DISABLED.

High-strength zone

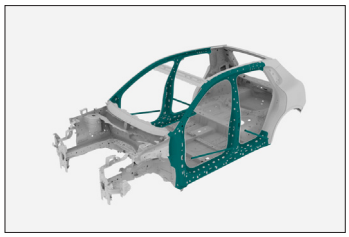


Frontseat adjustment


› Manual seat

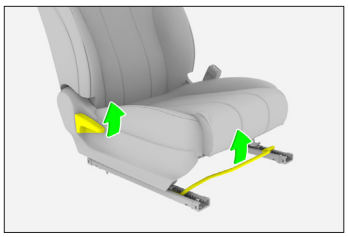


› Power seat

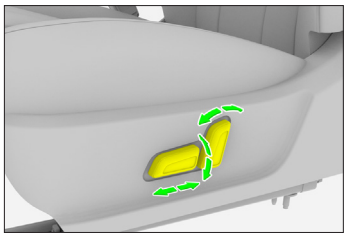

Steering wheel adjustment

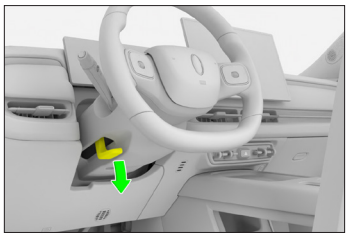

Glass type

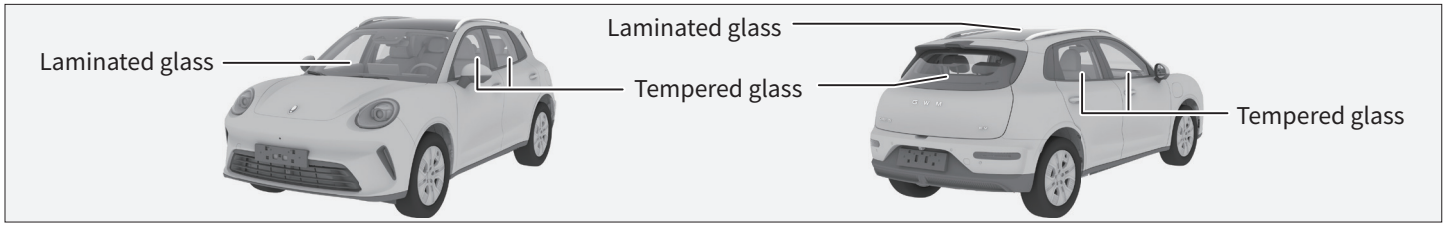

5. Stored energy / liquids / gases / solids

		12 V
Li-ion		364.6V/315.1 V
		1300±20 g

6. In case of fire

› Use copious amounts of water to extinguish the fire.
› If it is difficult to provide large amounts of water, it is recommended to allow the traction battery to burn itself out.


- Risk of traction battery re-ignition!
- Do not enter the interior of a burning vehicle!

7. In case of submersion


- Tilt the vehicle to one side to drain water from the interior.
- When handling any submerged vehicle, wear appropriate personal protective equipment. Before starting any operations, if possible, pull the vehicle out of the water, secure it, and disconnect the power supply(see Chapter 3).

8. Towing / transportation / storage

Front towing eye position

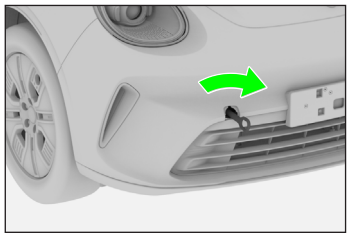


Rear towing eye position

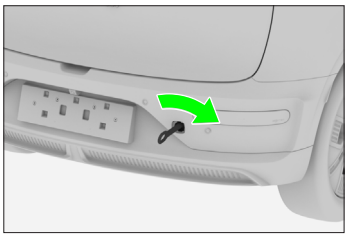

Towing eye storage location




- Risk of traction battery re-ignition!
- Do not enter the interior of a burning vehicle!

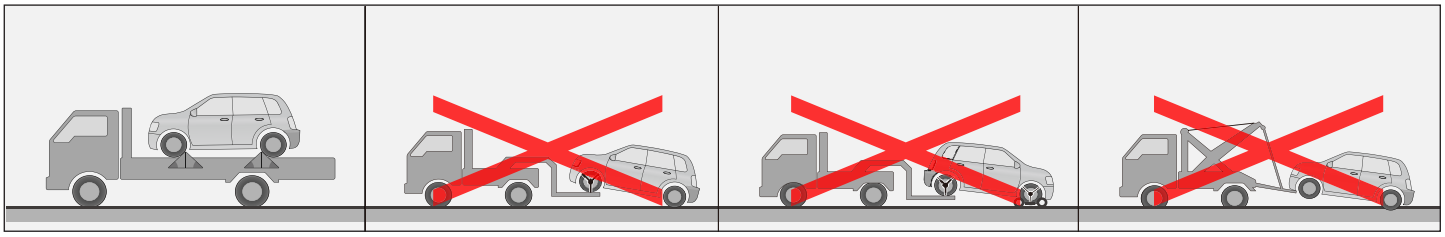

STORE THE VEHICLE IN A SAFE LOCATION AWAY FROM OTHER VEHICLES!

9. Important additional information

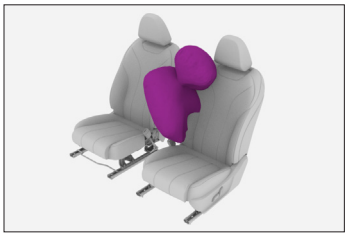

In addition to the side airbag, the driver seat is also equipped with a far-side airbag. The specific location of the far-side airbag is indicated by the marker 9. on the first page.

Manufacturer information	GWM

10. Explanation of pictograms used

Pictogram	Meaning
	Remove smart key
	Bonnet
	General warning sign
	Warning, Electricity

Pictogram	Meaning
	Flammable
	Explosive
	Corrosives
	Use thermal Infrared camera

Pictogram	Meaning
	Hazardous to the human health
	Use water to extinguish the fire
	Air-conditioning component
	Boot