
LEPAS L4 EV

5 doors SUV, from 2026

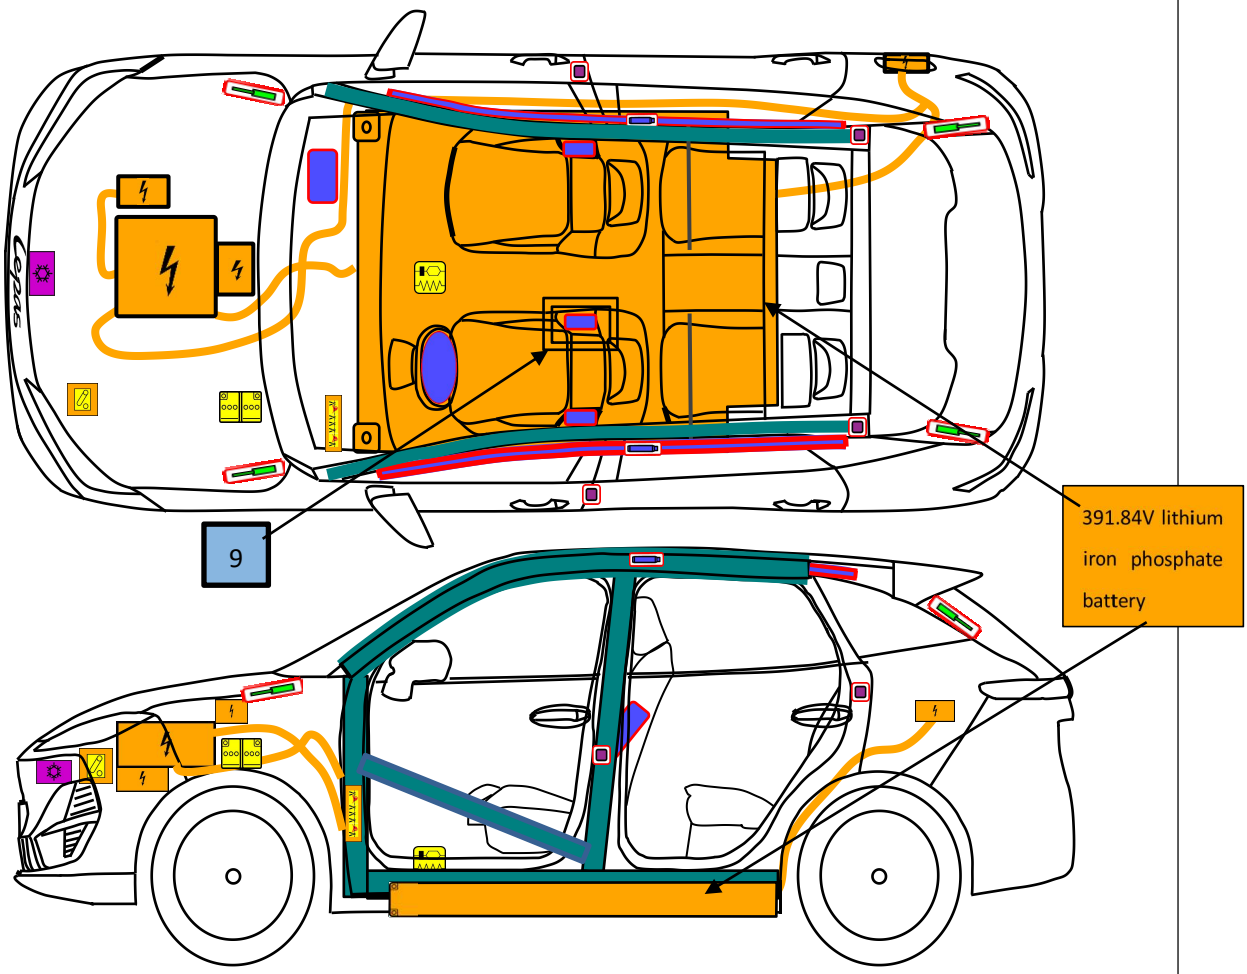






	Airbag		Stored gas inflator		Seat belt pretensioner		Gas strut/preloaded spring
	High strength zone		Low voltage battery		SRS control unit		Battery pack,high-voltage
	Low voltage device that disconnects high voltage		High voltage power cable		High voltage component		Air-conditioning component
	Cable cut		Zone requiring special attention				

ID No.	Version date	Page
E00BL5BA001	7/2026	1 of 4

1. Identification / recognition

LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

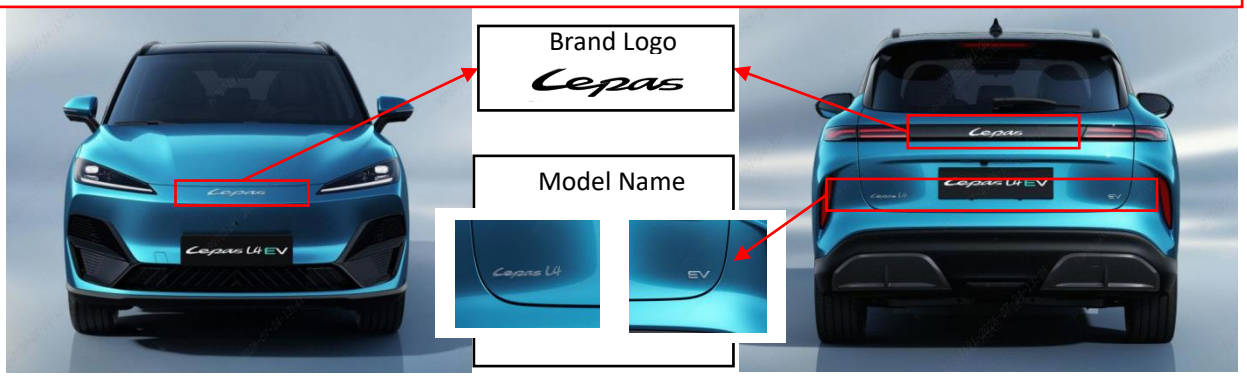


2. Immobilisation / stabilisation / lifting

Immobilise vehicle



Press button “P”(park)

Stabilisation-lifting point

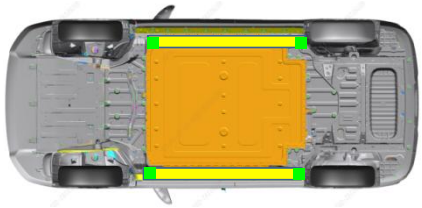

- Appropriate lifting points
- Suitable stabilisation points on the side
- High-voltage battery

3. Disable direct hazards / safety regulations

In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected.

In all other cases, the high voltage system can be deactivated as follows:

Main method: For deactivation in the front compartment,disconnect the high voltage battery.






1. Pull the release lever twice to open the hood.




2. Remove the motor compartment trim cover.

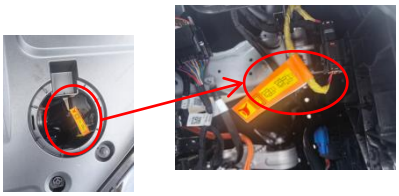

3. Disconnect the high voltage.①Push the button; ②Pull out the button.

Alternative method: Cut the wire harness in the occupant compartment, disconnect the high voltage battery.



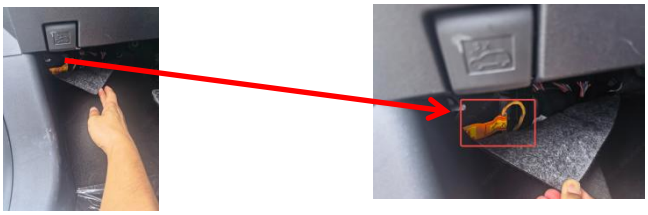

ACCESS TO 12V BATTERY



1. Pull the release lever twice to open the hood.




2. Remove the motor compartment trim cover.



3. Disconnect the negative terminal.

4. Access to the occupants

■ **Window Glass**

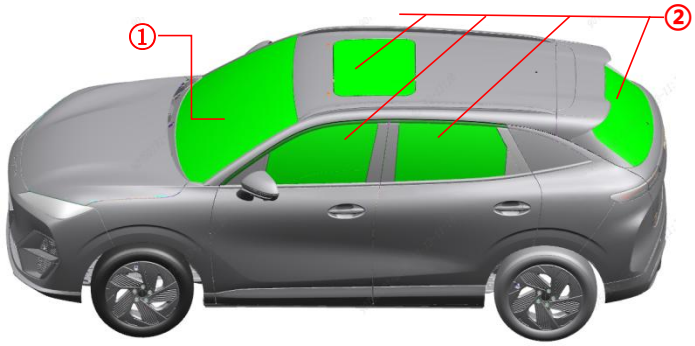


Glass types： ①- Laminated ②- Tempered


■ **High strength body areas**



■ **Seat adjustment**

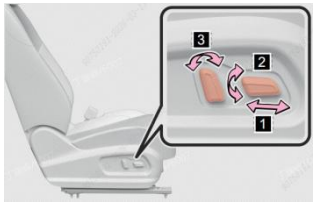


POWER

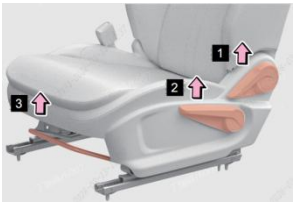

MANUAL

■ **Steering column adjustment**

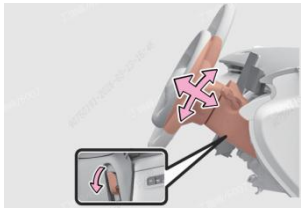

Steering column has tilt and telescopic adjustment.

5. Stored energy / liquids / gases / solids

		12 V
		391.84 V lithium iron
		R1234yf:1.050kg

In the event of mechanical deformation of the battery system, there is a risk of a thermal reaction in the high voltage battery. Monitor the temperature of the high voltage battery!

6. In case of fire

USE LARGE AMOUNTS OF WATER

POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED

7. In case of submersion


After recovering the vehicle from the water, deactivated the high voltage system (see chapter 3) and drain the water.

Wear appropriate personal protective equipment!

8. Towing / transportation / storage

■ Towing

Front towing eyelet

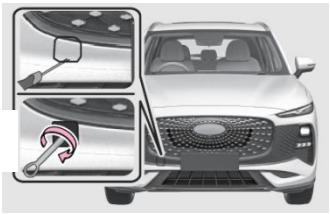


Rear towing eyelet



STORE AT SAFE DISTANCE FROM OTHER


RISK OF BATTERY RE-IGNITION!

■ Transportation

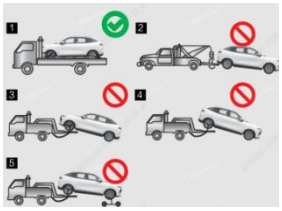

Please use①platform rescue vehicle to load your vehicle.

9. Important additional information

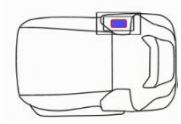



Far side airbag

10. Explanation of pictograms used

	Electric Vehicle		Flammable		Environmental hazard		Hazardous to the human health
	Corrosives		Use water to extinguish the fire		Acute toxicity		General warning sign
	Warning, Electricity		Steering wheel, tilt control		Use thermal Infrared camera		Seat adjustment, longitudinal
	Seat height adjustment		Seat height adjustment		Bonnet		