
Lepas	**LEPAS L8** 5-door/5 seats/ SUV, From 2026		



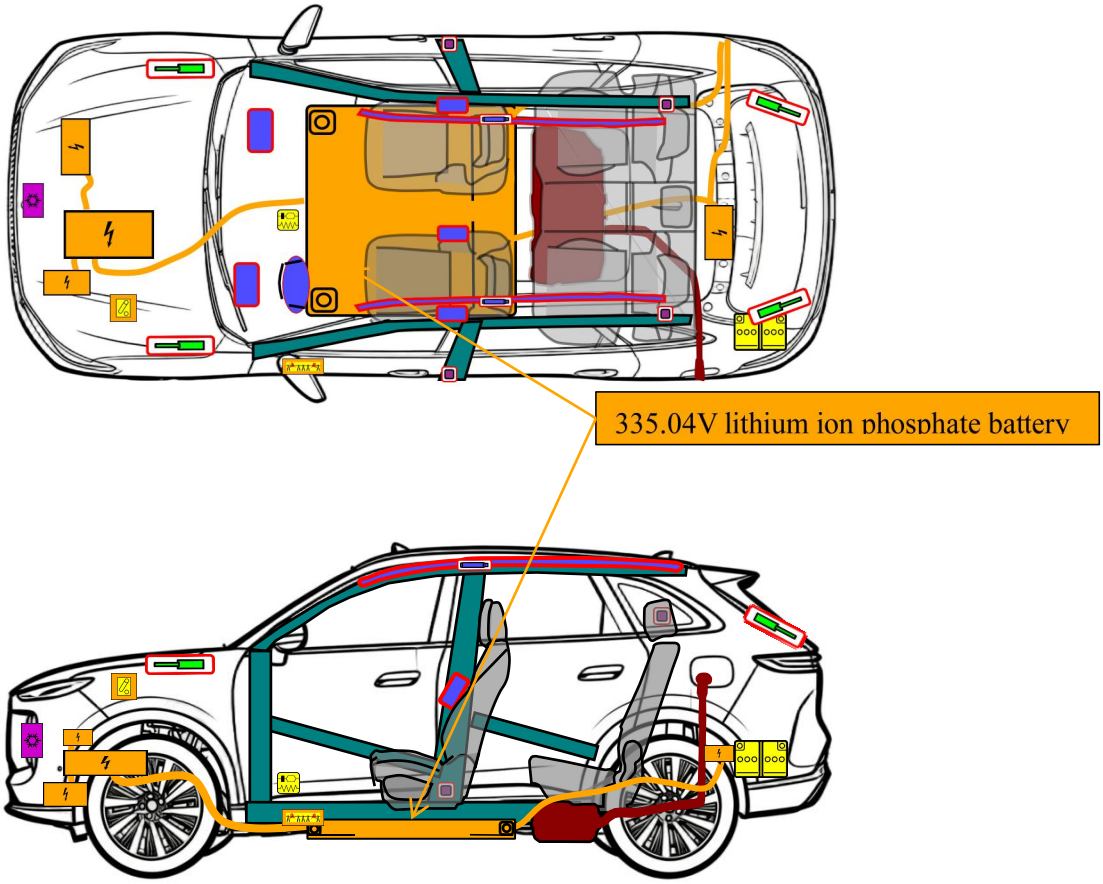




	Airbag		Stored gas inflator		Seat belt pretensioner		Gas strut/preloaded spring
	High strength zone		Battery low voltage		SRS control unit		Battery pack, high-voltage
	Low voltage device that disconnects high voltage		High voltage power cable		High voltage component		Cable cut
	Air-conditioning component		Fuel tank content gasoline/ethanol				

Lepas	**LEPAS L8** 5-door/5 seats/ SUV, From 2026		


1. Identification / recognition

LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

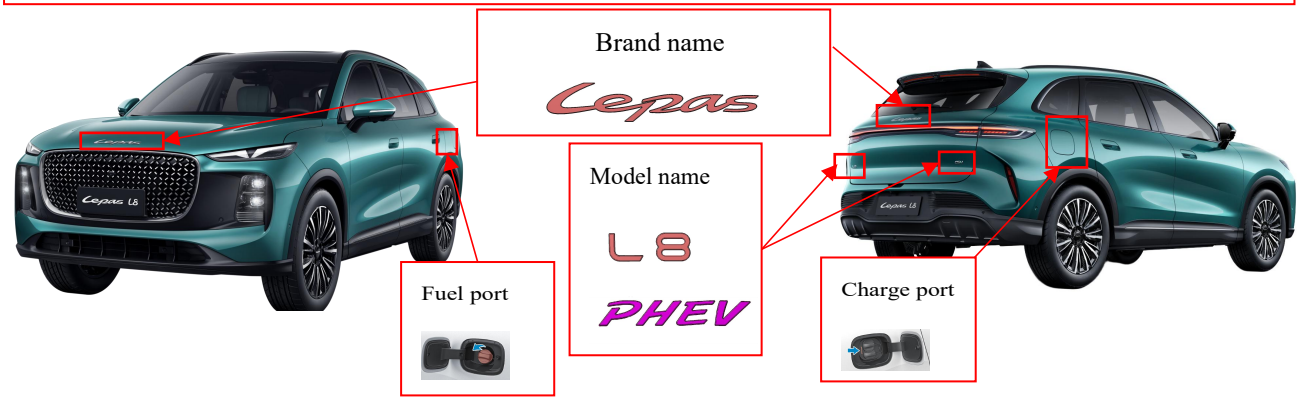


2. Immobilisation/stabilization/ lifting

Immobilise vehicle

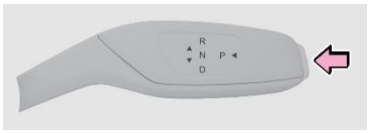

Depress brake pedal and press button “P”, the car will automatically apply the parking brake.

Stabilisation-lifting point

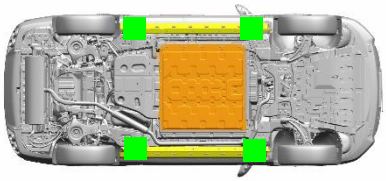

3. Disable direct hazards / safety regulations


In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected.

In all other cases, the high voltage system can be deactivated as follows:


Main method: For deactivation in the front compartment, disconnect the high voltage battery.




1. Pull the release lever twice to open the bonnet.

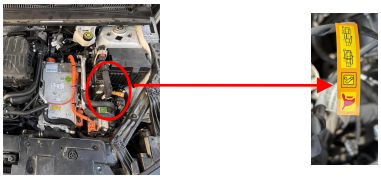

2. Disconnect the high voltage.
①Push the button; ②Pull out the button

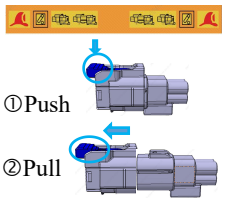

Alternative method: Cut the wire harness in the occupant compartment, disconnect the high voltage battery.

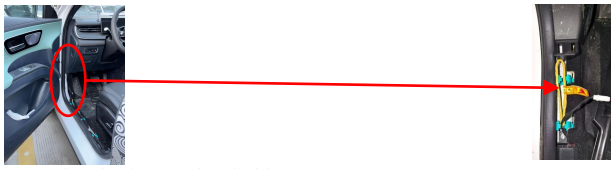


1. Open the driver's door， Remove the plastic trim threshold

2. Cut the wire harness; Just remove this sentence

Lepas	**LEPAS L8** 5-door/5 seats/ SUV, From 2026		

ACCESS TO 12V BATTERY

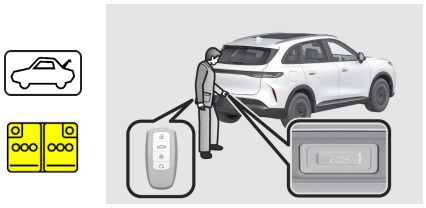

1. Press the exterior switch to open the boot.




2. Remove the Interior trim cover.



3. Disconnect the negative terminal.


4. Access to the occupants

■ **Window Glass**

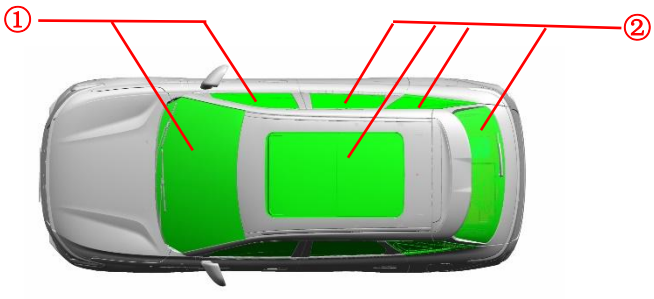


Glass types: ① Laminated ② Tempered

■ **High strength body areas**

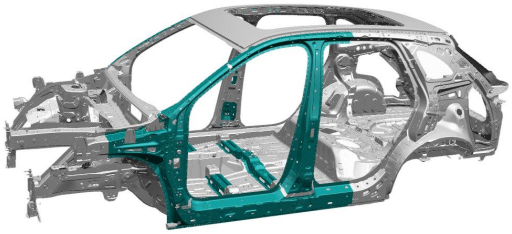


■ **Seat adjustment**

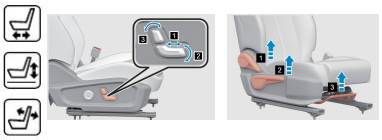

Electric Manual

■ **Door latches/command**

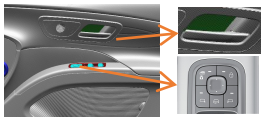



Electric and Emergency switch

■ **Steering column adjustment**



Steering column has manual tilt and telescopic adjustment.

5. Stored energy / liquids / gases / solids

		12 V
		335V Ternary lithium battery
		60L
		R1234yf: 0.55kg



In the event of mechanical deformation of the battery system, there is a risk of a thermal reaction in the high voltage battery. Monitor the temperature of the high voltage battery!



6. In case of fire



Thermal propagation (TP) detection of the high voltage battery:

- The notifcation '**Battery overheating Stop immediately and move away from the vehicle**' on the instrument panel and center display.
- Smoke or fire rising from under the vehicle close to the high voltage battery pack.

Extinguishing method for the high voltage (HV) battery:

USE LARGE AMOUNTS OF WATER

POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED


7. In case of submersion

After recovering the vehicle from the water, deactivate the high voltage system (see chapter 3) and drain the water.
Wear appropriate personal protective equipment!


8. Towing / transportation / storage

■ **Towing**

Front towing eyelet

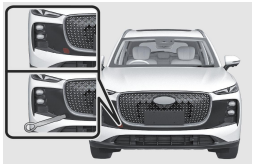


Rear towing eyelet

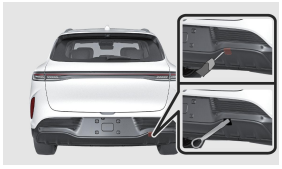

STORE AT SAFE DISTANCE FROM OTHER VEHICLES!


RISK OF BATTERY RE-IGNITION!


■ **Transportation**

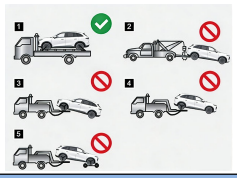

Please use the first method to load the vehicle.

9. Important additional information

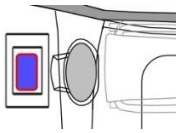

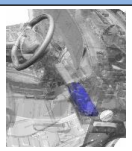

Knee airbag
(if equipped)

10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group 2		Boot		General warning sign		Warning, Electricity
	Seat adjustment, longitudinal		Seat height adjustment		Seat adjustment, seat back recline		Steering wheel, tilt control
	Use thermal Infrared camera		Use water to extinguish the fire		Flammable		Acute toxicity
	Hazardous to the human health		Environmental hazard		Corrosives		Bonnet