





Air suspension optional

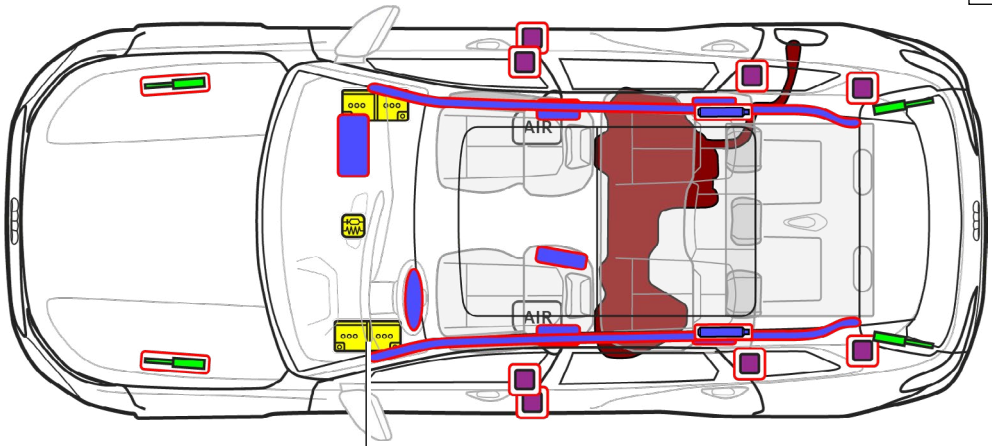

48-volt LI-ION

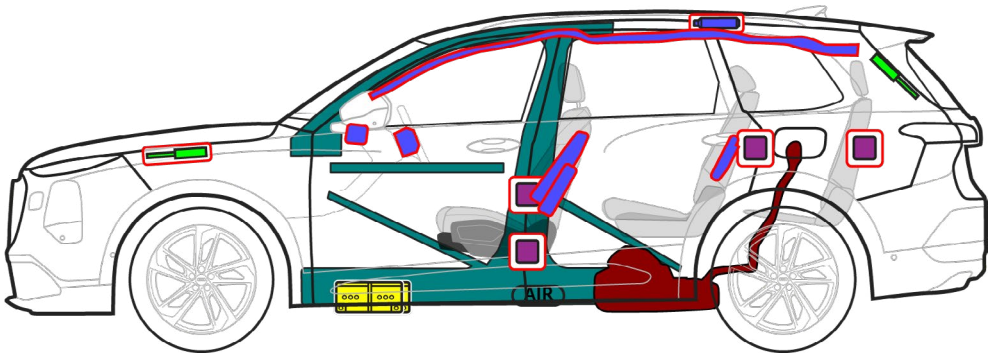

	Airbag		Stored gas inflator		Belt tensioner		SRS Control unit		Gas strut/ Preloaded spring
	High strength zones		Low-voltage battery		Fuel tank, petrol or diesel		Air tank		



Audi Q7 SUV

From 2026, 5-door, max. 7-seater

1. Identification / recognition

Model designation on
B-pillar




Model designation, rear

2. Immobilisation / stabilisation / lifting


Immobilising the vehicle

- 1 Press parking button “P” on right steering column switch
- 2 Apply parking brake in the centre console

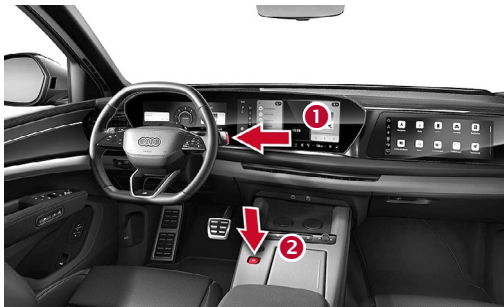

Secure the vehicle to prevent it from rolling away.

Lifting points

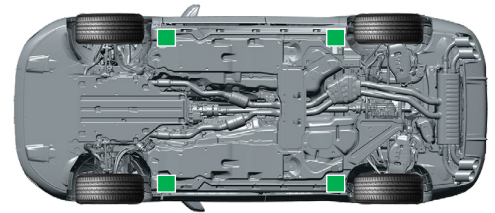

Appropriate lifting points

3. Disable direct hazards / safety regulations

Switch off the ignition



- 1 Press the “Start-Stop” button without operating the foot brake





Remove vehicle key, key card and/
or smartphone app so that they are
more than 5 m away from the vehicle if
possible.

Deactivating the 12-volt electrical system



Front right footwell:

- 1 Remove floor mat
- 2 Remove cover
- 3 Disconnect the negative battery terminal

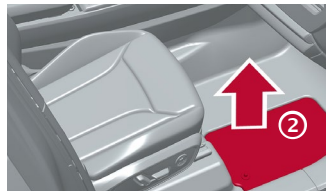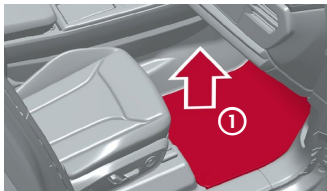

Deactivating the 48-volt electrical system



In the event of an accident in which the airbag is triggered, the 48-volt vehicle electrical system is automatically deactivated as soon as airbag triggering is detected.

For all other cases, the 48-volt vehicle electrical system can be deactivated as follows:

- 1 Ignition off
- 2 Disconnect the 12-volt vehicle battery
- 3 Wait approx. 10 seconds




Audi Q7 SUV

From 2026, 5-door, max. 7-seater

4. Access to the occupants

Glass types:

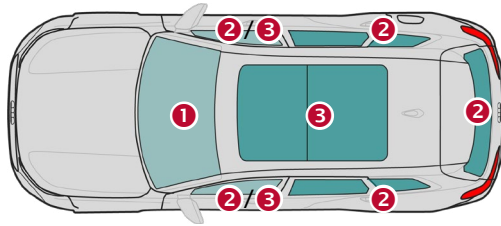


- 1 Laminated glass
- 2 Tempered glass
- 3 Laminated glass (optional)

Door opening inside:



- 1 Press the door button on the inside

5. Stored energy / liquids / gases / solids



Petrol or diesel
max. 83 l



12 V



48 V
Lithium-ion



max. 18 bar

6. In case of fire



Lithium-ion batteries can self-ignite either immediately or after a delay when damage occurs or they are not used properly, or re-ignite after fire-fighting measures. Wear appropriate personal protective equipment!



7. In case of submersion

After recovery, allow the water to drain and deactivate the electrical system (see section 3). Wear appropriate personal protective equipment!

8. Towing / transportation / storage





Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!



9. Important additional information

Further information can be found in the Audi guideline for rescue services at www.audi.com/rescue

10. Explanation of pictograms used							
							
Flammable	Corrosive, skin irritant	Hazardous to human health	Environmental hazard	Gases under pressure	Fuel tank, petrol	Fuel tank, diesel	General warning sign
							
Use water to extinguish the fire	Remove smart key	Use thermal infrared camera					