


DS N°8 5 doors/ 5 seats/ Hatchback (2025/ ->)







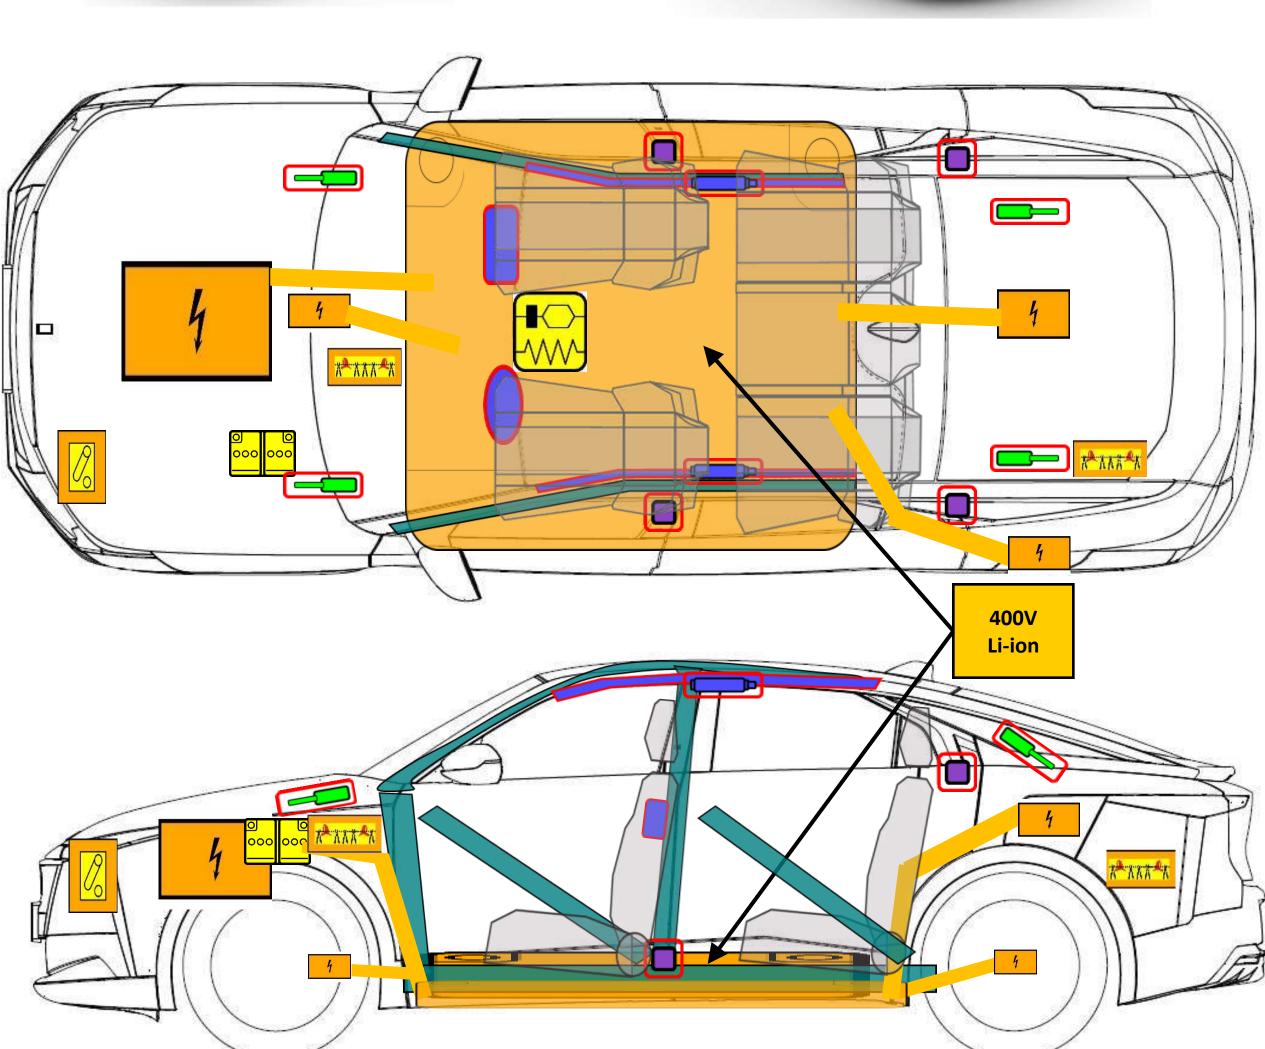

| | Airbag | | Stored gas inflator | Seat belt pretensioner | SRS control unit | | |
|--|--------------------------------|----------|--|---------------------------|------------------|---|---------------------------|
| | | | Gas strut / Preloaded spring | High strength zone | | 4 | High voltage component |
| 000 000 | Battery low voltage | | | | | | |
| | Battery pack, high- voltage | 1 | High voltage power cable | | | | |
| x | Cable cut | % | Low voltage device that disconnects high voltage | | | | |

| STELLANTIS | ID N° | Version N° | Version date | Page |
|------------|----------------|------------|--------------|------|
| | 01365_25_00084 | В | 02/09/2025 | 1/5 |


1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF, SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APROPRIATE PPE.



2. Immobilisation / stabilisation / lifting

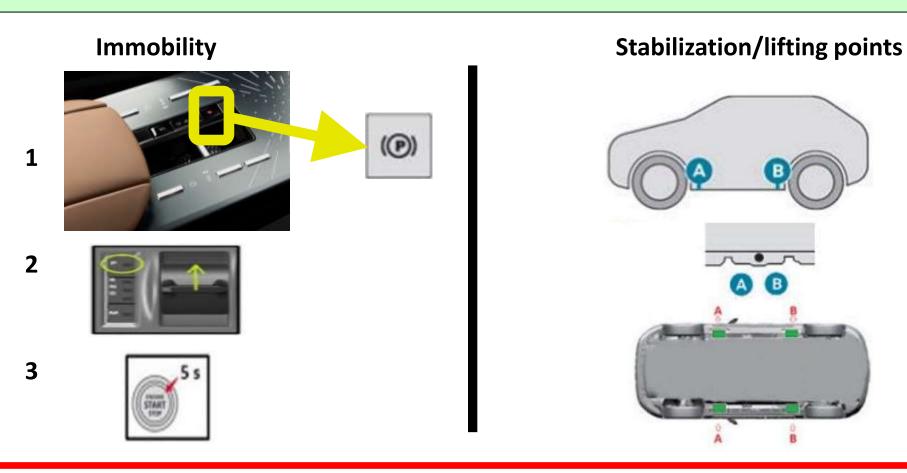




Do not place cribbing such as wooden blocks or rescue air lifting bags under the fuel system or high voltage power cables. Doing so may result in fuel leaks, fire, or electric shock.


3. Disable direct hazards / safety regulations

Main disabling method

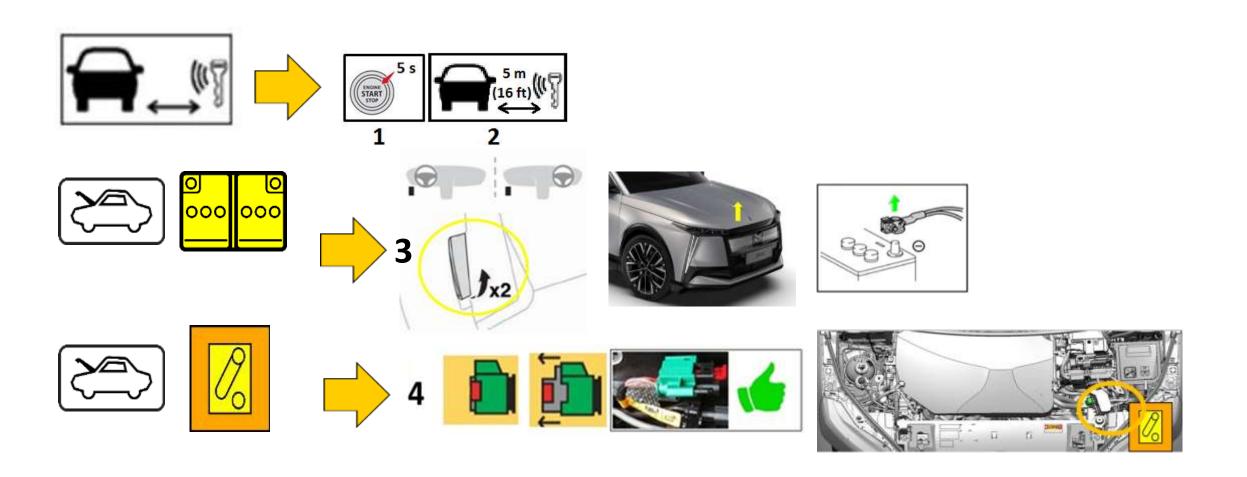


| STELLANTIS | ID N° | Version N° | Version date | Page |
|------------|----------------|------------|--------------|------|
| | 01365_25_00084 | В | 02/09/2025 | 2/5 |

Alternative disabling method 1

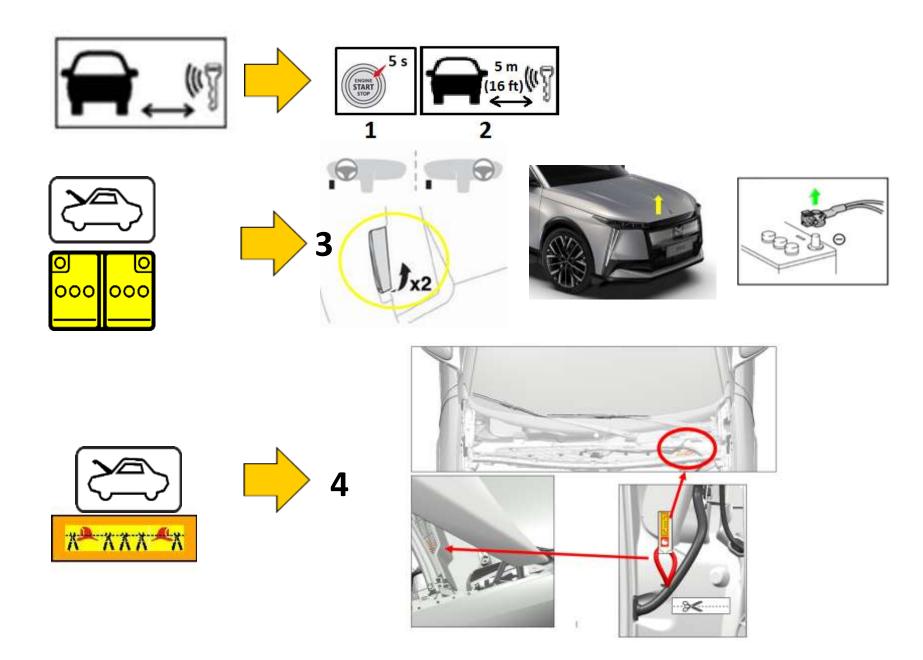

Alternative disabling method 2

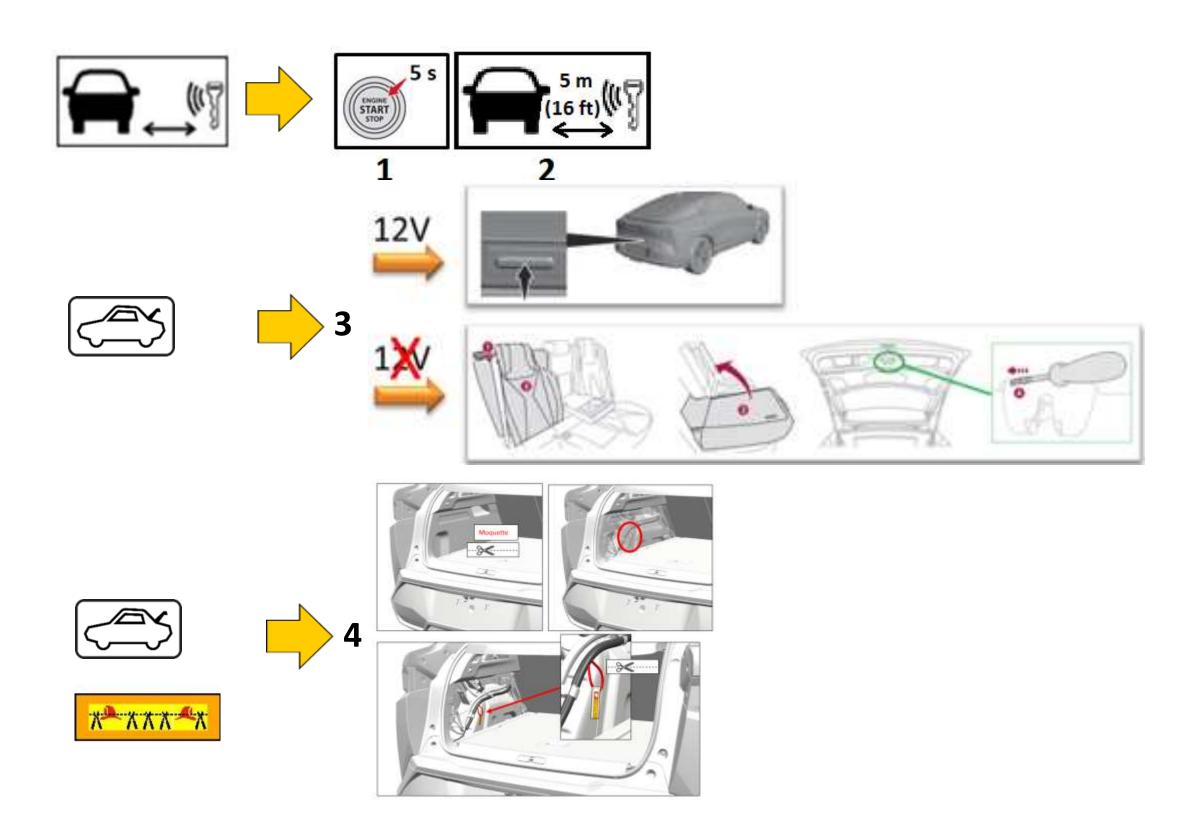

| STELLANTIS | ID N° | Version N° | Version date | Page |
|------------|----------------|------------|--------------|------|
| STEELMAN | 01365_25_00084 | В | 02/09/2025 | 3/5 |

4. Access to the occupants

(serial production) (optional product)

Glass types










Toughened glass

High strength steel body


Seat adjustment

Steering column adjustment

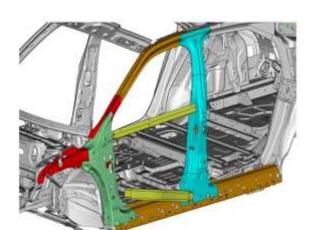




Longitudinal

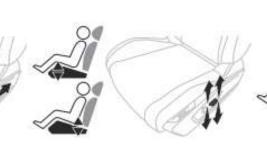


Hauteur et inclinaison de l'assise




Inclinaison des dossiers

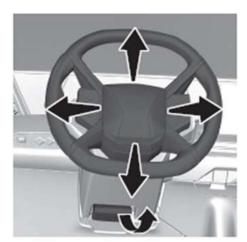

Ouverture porte arrière

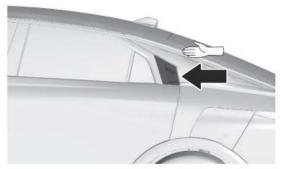

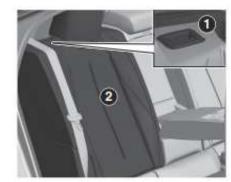

5. Stored energy / liquids / gases / solids

| O Li-ion | 400V | |
|----------|-------------------------|--|
| ** | 0,9L | |
| 4 | Warning, Electricity | |
| 000000 | 12V | |



when coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



6. In case of fire



Use large amount of water

















RE-IGNITION POSSIBLE!





Lithium-ion batteries may self-ignite or reignite once the fire has been extinguished. Monitor the temperature of the high-voltage battery!

| STELLANTIS | ID N° | Version N° | Version date | Page |
|------------|----------------|------------|--------------|------|
| | 01365_25_00084 | A | 22/08/2025 | 4/5 |


7. In case of submersion


Remove the vehicle from the water then refer to chapter 3, Disable direct hazards / safety regulation

8. Towing / transportation / storage

Location front hook

Location rear hook

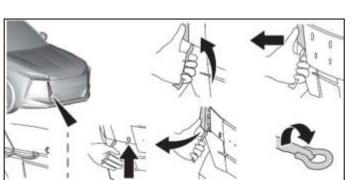

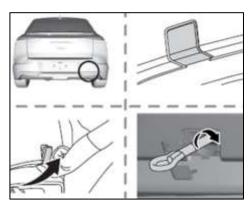

STORE AT SAFE DISTANCE FROM OTHER VEHICLES!



9. Important additional information















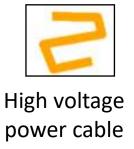

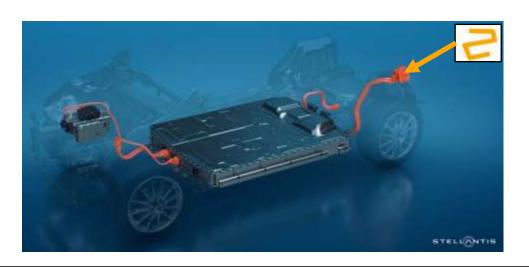



10. Explanation of pictograms used

| A | Remove smart key | | Flammable |
|----------|-----------------------------|----|----------------------------------|
| <u>^</u> | General warning sign | | Hazardous to the human health |
| * | Warning; low temperature | | Acute toxicity |
| 4 | Warning, Electricity | | Explosive |
| * | Air-conditioning component | | Corrosives |
| 4 | Electric Vehicle | 65 | Use water to extinguish the fire |
| ZIR ∰ | Use thermal Infrared camera | | Bonnet |
| | Hayon / coffre | | |

| STELLANTIS | ID N° | Version N° | Version date | Page |
|------------|----------------|------------|--------------|------|
| | 01365_25_00084 | В | 02/09/2025 | 5/5 |