





DONGFENG

DONGFENG BOX

5 door, 5 seater,
hatchback

From 2025

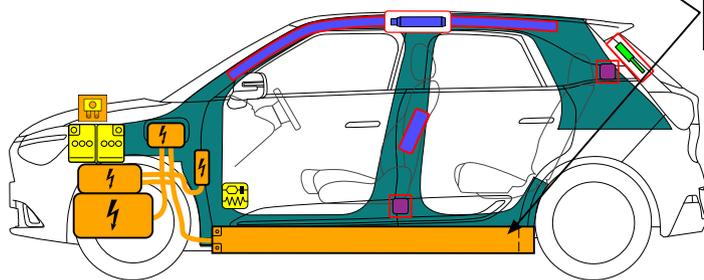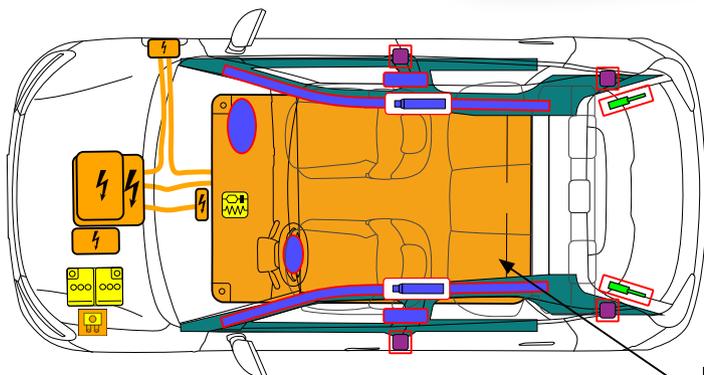

309 V
Li-ion

	Fuse box disabling high voltage		Battery pack, high-voltage		High voltage power cable		High voltage component
	Battery low voltage		SRS control unit		Airbag		Seat belt pretensioner
	Stored gas inflator		High strength zone		Gas strut / Preloaded spring		

DONGFENG BOX
From 2025

ID NO.
DONGFENG-B1

Version NO.
01

Page NO.
1/4



DONGFENG

DONGFENG BOX

5 door, 5 seater,
hatchback
From 2025



1. Identification / Recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF; SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.



2. Immobilization / Stabilization / Lifting

Immobilise The Vehicle

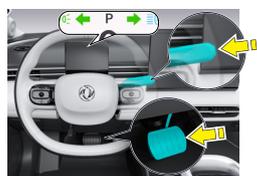


- Step on the brake pedal to bring the vehicle to a smooth stop.
- Shift to P gear.

Chock The Wheels



EPB will be activated even if the vehicle is parked, locked, and powered off, but wedges are still needed to block the wheels to prevent sliding.

Lifting Points

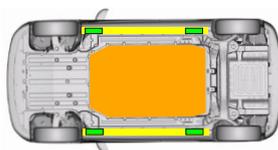

- Appropriate stabilisation-lifting points
- Appropriate stabilisation points vehicle on side
- High voltage battery

3. Disable Direct Hazards / Safety regulations

Main Disabling Method



- Press the switch.



- ≥ 5m or more



- Disconnect the 12V battery.


Alternative Disabling Method



- Pull the switch to open the hood.



- Unplug fuse F20 and F33 (marked with the flag).

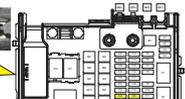

Access To 12V Battery



- Pull the switch to open the hood.



- Push the switch to the left.



- Disconnect the 12V battery.



DO NOT TOUCH, CUT, OR OPEN HIGH-VOLTAGE COMPONENTS AND THE HIGH-VOLTAGE BATTERY! WEAR APPROPRIATE PROTECTIVE EQUIPMENT!

DONGFENG BOX
From 2025

ID NO.
DONGFENG-B1

Version NO.
01

Page NO.
2/4



DONGFENG

DONGFENG BOX
5 door, 5 seater,
hatchback
From 2025




4. Access to the Occupants

Door Opening

If the door handle doesn't pop open :



Seat Adjustment

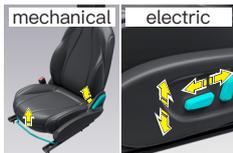

Steering Column Adjustment



High strength body areas



Internal opening of doors



Glass types

Laminated glass Tempered glass



5. Stored Energy / Liquids / Gases / Solids

		12V
		309 V
		R1234yf 480g

! When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



6. In Case of Fire


USE LARGE AMOUNTS OF WATER.



BATTERY RE-IGNITION!

Gas strut /
 Preloaded spring

Risk of missile effect of tailgate.

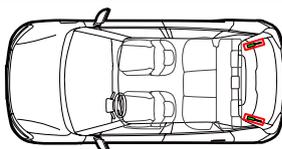

DONGFENG BOX
From 2025

ID NO.
DONGFENG-B1

Version NO.
01

Page NO.
3/4



DONGFENG

DONGFENG BOX

5 door, 5 seater,
hatchback
From 2025



7. In Case of Submersion

Wear appropriate PPE. Remove the vehicle from the water and continue with normal high voltage disable(see chapter 3). Vehicles submerged in salt water should be handled with a greater potential risk of a HV battery fire.

Tilt the vehicle to one side to allow water to drain out of the vehicle and the HV battery.

8. Towing / Transportation / Storage

Store at safe distance from other vehicles!



The towing hook is located in the trunk.

Open the cover and use the towing hook.



9. Important additional information

Name of manufacturer: Dongfeng Motor Corporation Limited.

For more information, please refer to Emergency Response Guide:

<https://www.chinadfm.com/en/col74/list>

10. Explanation Pictograms Used

	Flammable		Electric Vehicle		Use water to extinguish the fire
	Explosive		Environmental hazard		Warning, Electricity
	Corrosives		Acute toxicity		General warning sign
	Hazardous to the human health		Air-conditioning component		Warning; low temperature
	Remove smart key		Bonnet		Use thermal infrared camera
	Seat height adjustment		Seat adjustment, longitudinal		Steering wheel, tilt control