


5-door SUV, From 2025







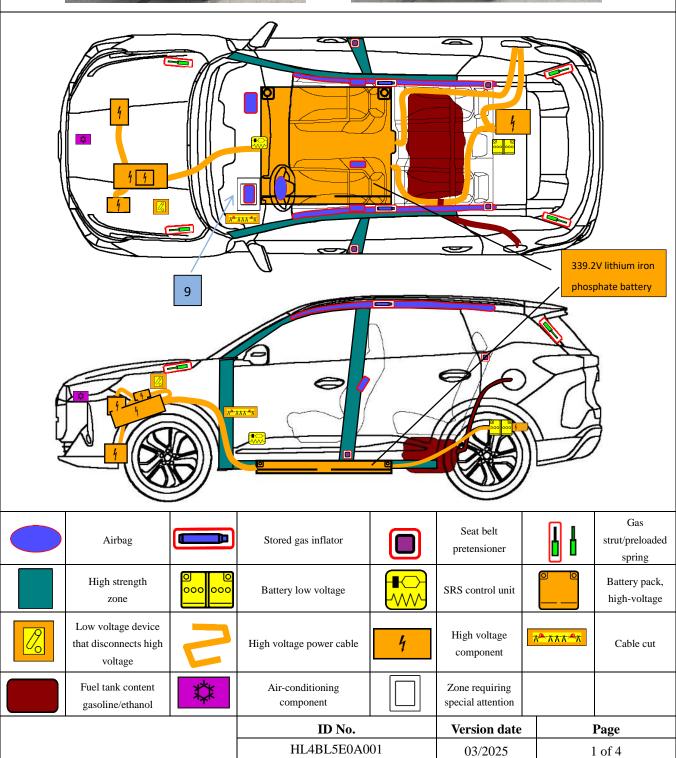



5-door SUV, From 2025



1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.







Model name




2. Immobilisation/stabilization/lifting

Immobilise vehicle



Depress brake pedal and press button "P", the car will automatically apply the parking brake.

Stabilisation-lifting point



- Appropriate lifting points
- Suitable stabilisation points on the side
- High-voltage battery

3. Disable direct hazards / safety regulations




In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected.

In all other cases, the high voltage system can be deactivated as follows:


Main method: For deactivation in the motor compartment, disconnect the high voltage battery.














①Push the button; ②Pull out the button



7~~ X.X.X.~~X

Alternative method: Cut the wire harness in the vehicle cab, disconnect the high voltage battery.





1. Remove the carpet as above showed area.



2. Cut the wire harness; follow the instructions on the label.

ID No.	Version date	Page
HL4BL5E0A001	03/2025	2 of 4




5-door SUV, From 2025



ACCESS TO 12V BATTERY







1. Open the boot.




2. Remove the trunk floor.



3. Disconnect the negative terminal.

Access to the occupants


Window Glass

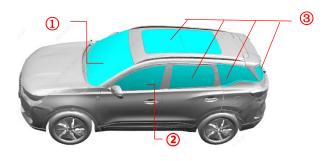


Glass types: ①- Laminated ②Laminated, Tempered(OPT)

③ - Tempered

High strength body areas

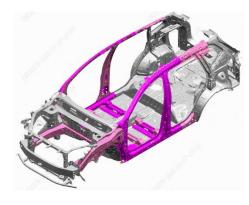

Seat adjustment




POWER

Door latches/command



MANUAL

Steering column adjustment



Steering column has manual tilt and telescopic adjustment.

☐ IR ∭

Stored energy / liquids / gases / solids













12 V













339.2 V lithium iron phosphate battery










60L







R1234yf: 0.575kg



ID No.	Version date	Page	
HL4BL5E0A001	03/2025	3 of 4	



5-door SUV, From 2025



6. In case of fire



USE LARGE AMOUNTS OF WATER













POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED




7. In case of submersion

After recovering the vehicle from the water, deactivate the high voltage system (see chapter 3) and drain the water. Wear appropriate personal protective equipment!


8. Towing / transportation / storage

Towing





Rear towing eyelet




STORE AT SAFE DISTANCE FROM OTHER VEHICLES!



BATTERY RE-IGNITION!




■ Transportation





Please use ① flatbed rescue vehicle to load the vehicle.

9. Important additional information



Knee airbag



10. Explanation of pictograms used

	I was a larger a same								
The state of the s	Hybrid Electric Vehicle on fuel of liquid group 2		Boot	<u>^</u>	General warning sign	4	Warning, Electricity		
	Seat adjustment, longitudinal		Seat height adjustment		Seat adjustment, seat back recline	(Z)	Steering wheel, tilt control		
☐ IR SS	Use thermal Infrared camera		Use water to extinguish the fire		Flammable		Acute toxicity		
	Hazardous to the human health	*	Environmental hazard		Corrosives		Bonnet		
			ID No.	Version date			Page		
			HL4BL5E0A001	03/2025			4 of 4		