


Volkswagen **Passat** Estate, from 2024


5 doors, 5 seats








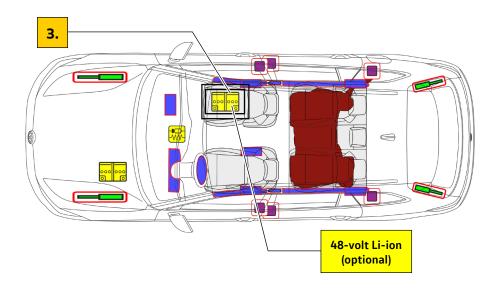

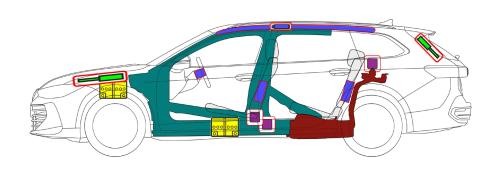

Airbag	Stored gas inflator		Seat belt pretensioner	SRS control unit	Fuel tank content gasoline
Gas strut/preloaded spring	High strength zone	000	Battery low voltage	Zone requiring special attention	



5 doors, 5 seats

1. Identification / recognition

Lettering



2. Immobilisation / stabilisation / lifting

Immobilising the vehicle



- 1. Apply the electric parking brake.
- 2. Secure the vehicle so it cannot roll away.

Lifting points



Suitable lifting points

3. Disable direct hazards / safety regulations

Switching off the ignition



Press the "Engine Start/Stop" button in the centre console without engaging the brake pedal.



Keep the vehicle key, key card and/or smartphone with the app at least five metres away from the vehicle wherever possible.



Disconnecting the 12-volt battery



In the engine compartment
Disconnect the negative battery terminal

 Additional information
 Document number
 Version
 Page

 rds_vwv_492_021_en
 02 (05/2024)
 2 of 4



Volkswagen Passat

Estate, from 2024


5 doors, 5 seats



Disconnecting the 48-volt battery


In the event of accidents where the airbag is deployed, the 48-volt vehicle electrical system will be deactivated automatically as soon as airbag deployment has been detected. After "Ignition off", the 48-volt vehicle electrical system will also be deactivated.

For all other cases, the 48-volt vehicle electrical system can be deactivated as follows:

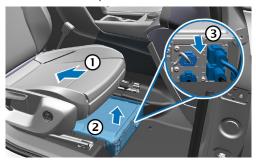

- Move the right seat all the way back.
- Remove the battery cover in the footwell on the right-hand side of the vehicle.
- Unplug all connectors.

4. Access to the occupants

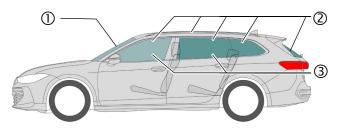

Glass types:

- ① Composite safety glass
- ② Single-pane safety glass
- ③ Composite safety glass, optional

5. Stored energy / liquids / gases / solids











Gasoline or diesel, max. 66 l











12 V











48 V Lithium-ion

6. In case of fire











Lithium-ion batteries can self-ignite or reignite after firefighting measures have been


Use appropriate personal protective equipment!

IR M

7. In case of submersion

Once the vehicle has been recovered, let the water drain out and disconnect the battery or batteries (see chapter 3). Use appropriate personal protective equipment!

Additional information Document number Version Page rds_vwv_492_021_en



5 doors, 5 seats

8. Towing / transportation / storage



Lithium-ion batteries can self-ignite or reignite after firefighting measures have been



Use appropriate personal protective equipment!





If a vehicle has been involved in an accident, do not tow it on its drive axles.

9. Important additional information

Volkswagen Emergency Services Rescue Sheets: www.volkswagen.de

10. Explanation of pictograms used

















Flammable

Corrosives

Hazardous to the human health

Environmental hazard

Vehicle on fuel of liquid group 2

Vehicle on fuel of liquid group 1

Use water to ex-





Use thermal Infrared camera

Release the bonnet

tinguish the fire

Remove smart key

Additional information