




# WEY COFFEE 01

SUV  
From 09/2022

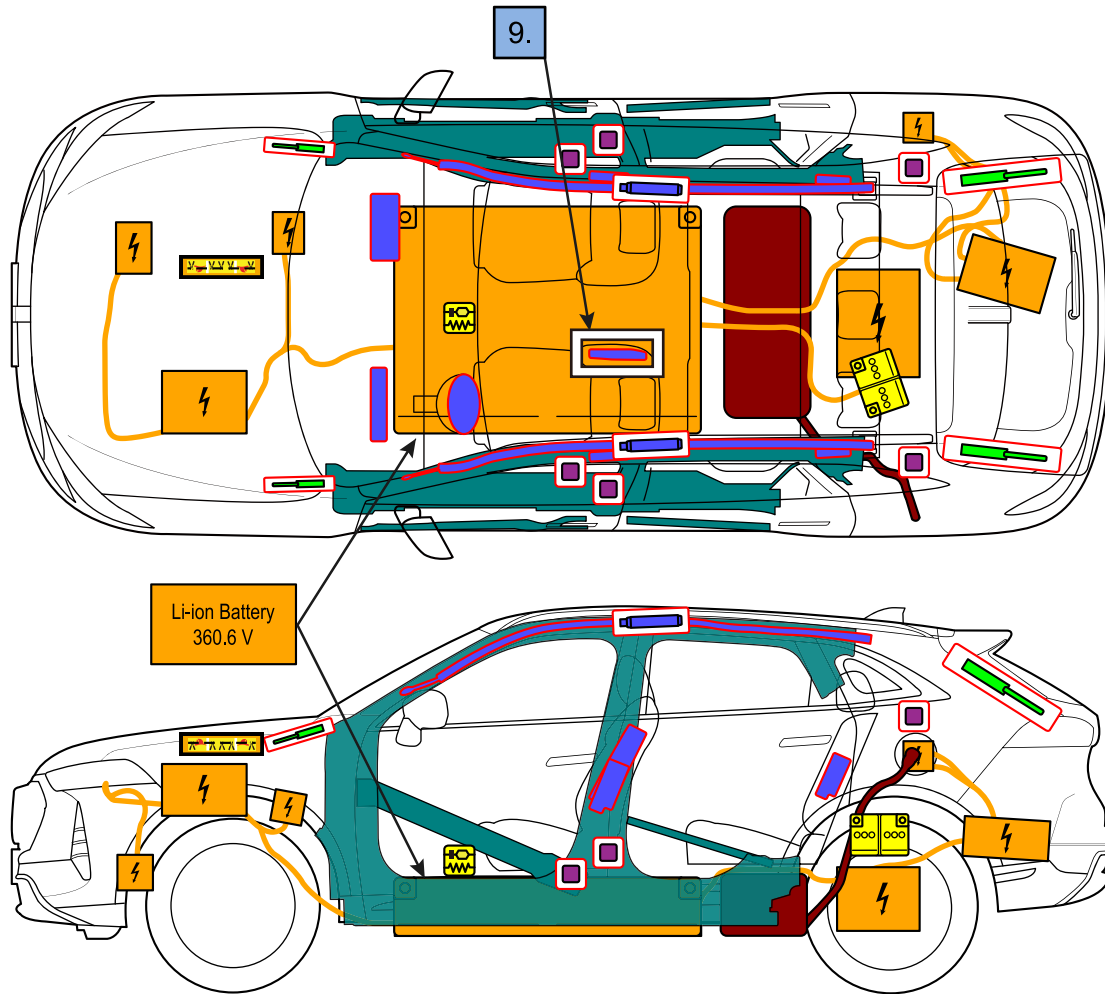

## Legend

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Battery low voltage
	Gas strut/Preload-ed spring		High strength zone		Zone requiring special attention		Battery pack, high voltage		High voltage power cable
	Cable cut		Fuel tank content gasoline/ethanol		High voltage component				

This overview shows the maximum range of equipment of the vehicle.

ID No.

Version No.

Page No.

LGW-WEY-V71PHEVG

V1


1/4

	<b>WEY COFFEE 01</b> SUV From 09/2022		
--	---	--	--

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

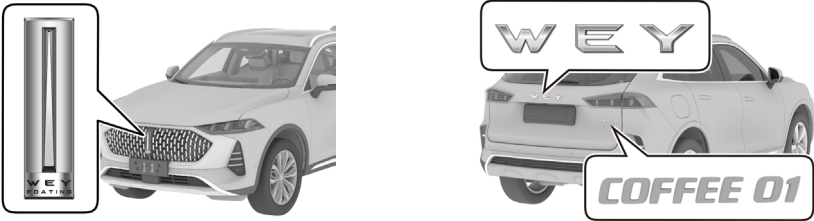


2. Immobilisation / stabilisation / lifting

Immobilise and stabilise the vehicle




- Apply parking brake;
- Press “P” button;
- Shut power off.

Lifting points

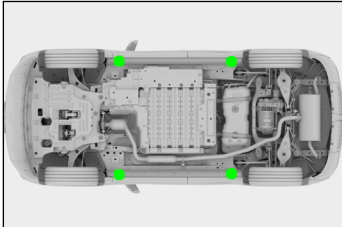


3. Disable direct hazards / safety regulations


MAIN DISABLING METHOD

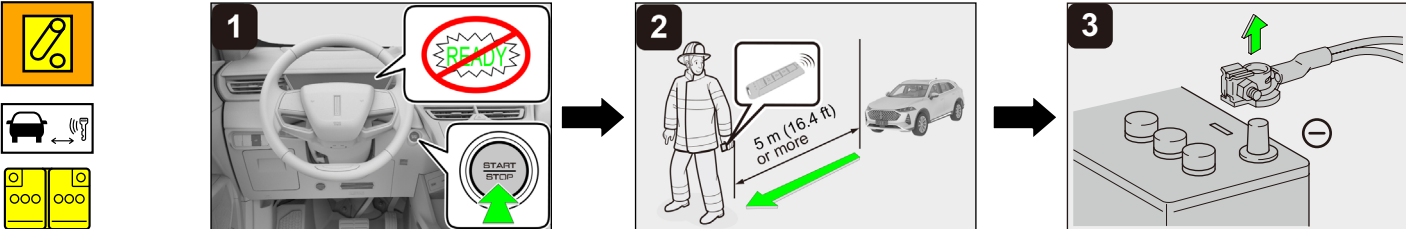

ALTERNATIVE DISABLING METHOD

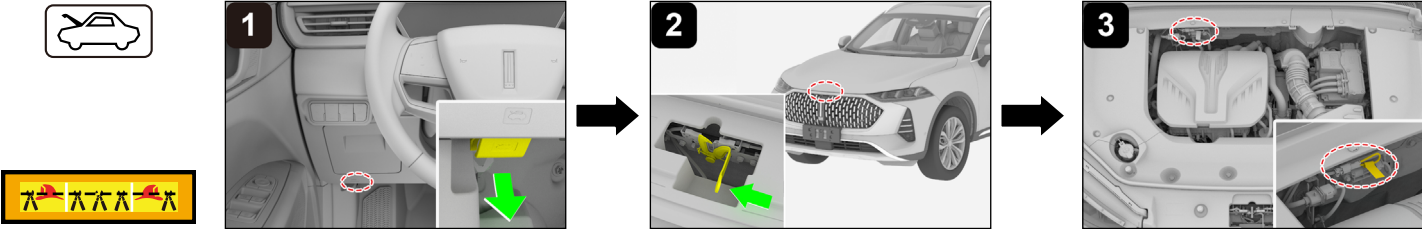

ACCESS TO 12V BATTERY

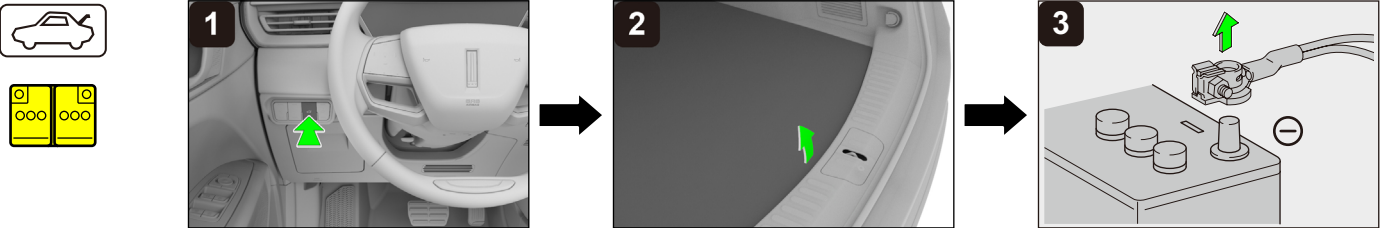


This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-WEY-V71PHEVG	V1	2/4



	<b>WEY COFFEE 01</b> SUV From 09/2022		
--	---	--	--

## 4. Access to the occupants

### High strength zone

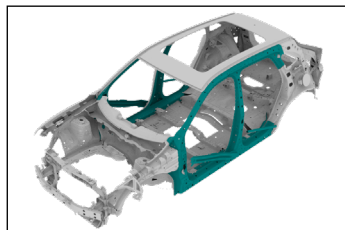

### Seat adjustment

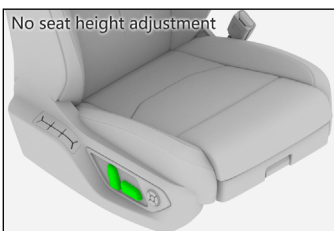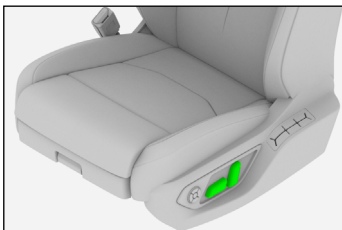


### Steering column adjustment




**WHEN THE 12 V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.**

### Glass types

Tempered glass  
Laminated glass

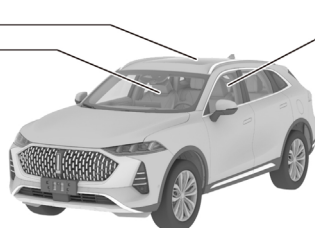




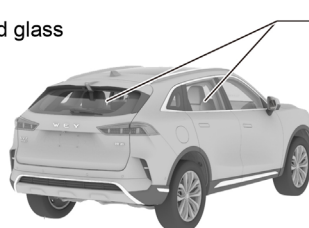




Laminated glass



Tempered glass

## 5. Stored energy / liquids / gases / solids


		12 V Battery
		360.6 V
		55 L
		680±10 g

## 6. In case of fire



**USE LARGE AMOUNTS OF WATER.**

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



**BATTERY RE-IGNITION !**



**DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY.**

## 7. In case of submersion

Proper personal protective equipment should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilise the vehicle and disable the vehicle before starting any operation ( see chapter 3 ).


This overview shows the maximum range of equipment of the vehicle.	<b>ID No.</b>	<b>Version No.</b>	<b>Page No.</b>
	LGW-WEY-V71PHEVG	V1	3/4

	<b>WEY COFFEE 01</b> <b>SUV</b> <b>From 09/2022</b>		
--	---	--	--


Tilt the vehicle to one side to allow water to drain out of the vehicle.

## 8. Towing / transportation / storage


### Location front hook

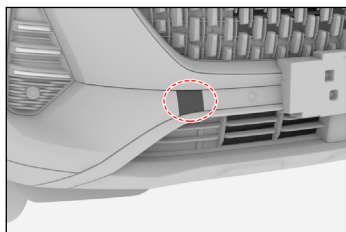

### Location rear hook




**STORE AT SAFE DISTANCE FROM OTHER VEHICLES!**



**BATTERY RE-IGNITION!**

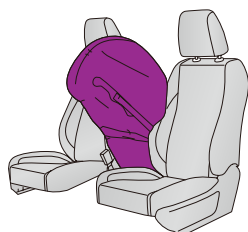












## 9. Important additional information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark

**9.** on page 1.

## 10. Explanation of pictograms used

Pictogram	Designation	Pictogram	Designation	Pictogram	Designation
	Low voltage device that disconnects high voltage		Flammable		Hazardous to the human health
	Remove smart key		Explosive		Use water to extinguish the fire
	Boot		Corrosives		Warning, Electricity
	Bonnet		Use thermal Infrared camera		General warning sign
	Air-conditioning component				

This overview shows the maximum range of equipment of the vehicle.

**ID No.**

**Version No.**

**Page No.**

LGW-WEY-V71PHEVG

V1

4/4