Genesis GV70

SUV, 5 doors
From March 2021

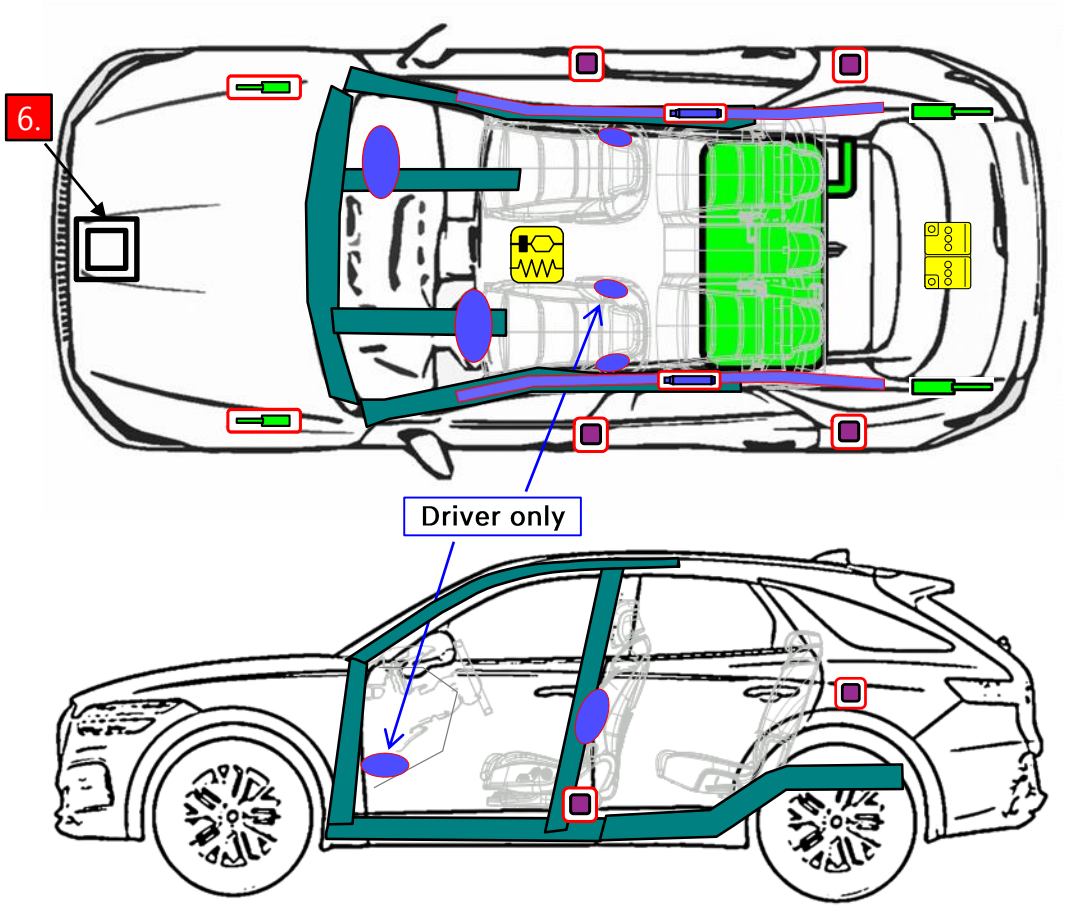

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/ component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage

ID No.	Version No.	Version date	Page
KMT-JK1-RSI-01-202102	01	02/2021	1 of 4

1. Identification / recognition

2. Immobilisation / stabilisation / lifting

■ Immobilization

1

1. Chock the wheels and pull the switch to set the parking brake.

2

2.For automatic vehicles the shift lever to the park(P) position.

■ Lifting points under the vehicle :■

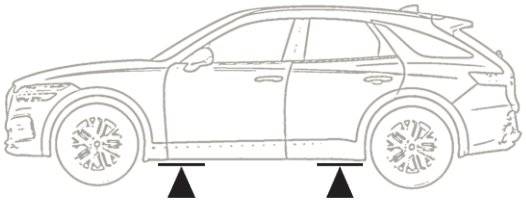

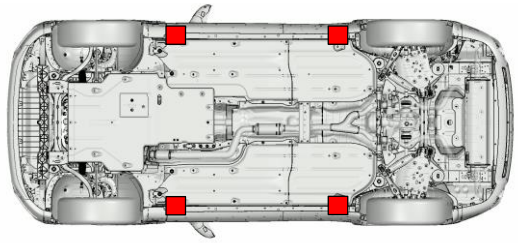

3. Disable direct hazards / safety regulations

■ Access to the battery

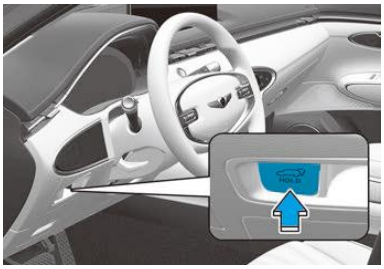

or

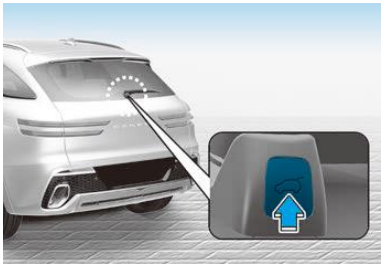

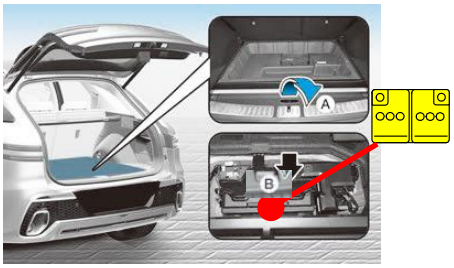

1. Press and hold the tailgate open button located on the instrument panel to open the power tailgate.

1. Press the tailgate open button located outside the tailgate while carrying the smart key to open the power tailgate.

2. To access the battery, remove the clip (A) and release the cover (B).

■ Disabling procedure

① Turn the ignition switch off → ② Disconnect the negative(-) terminal → ③ Disconnect the positive(+) terminal

4. Access to the occupants

■ Glass

1-2 : Laminated

3 : Tempered, Laminated(OPT)

4-5 : Tempered

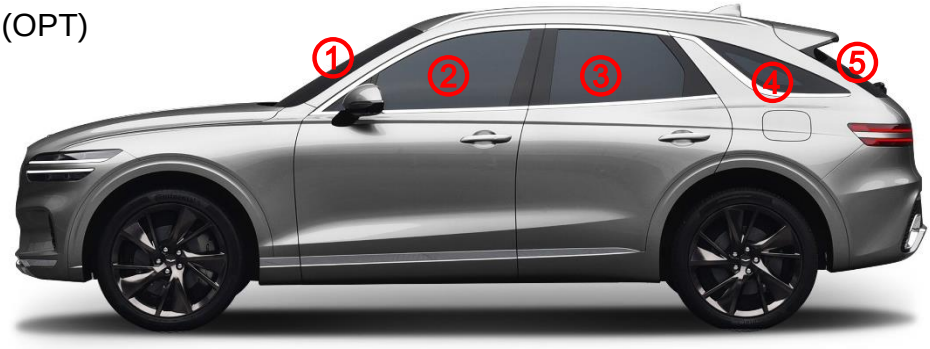

■ Vehicle body

Hardened Steel

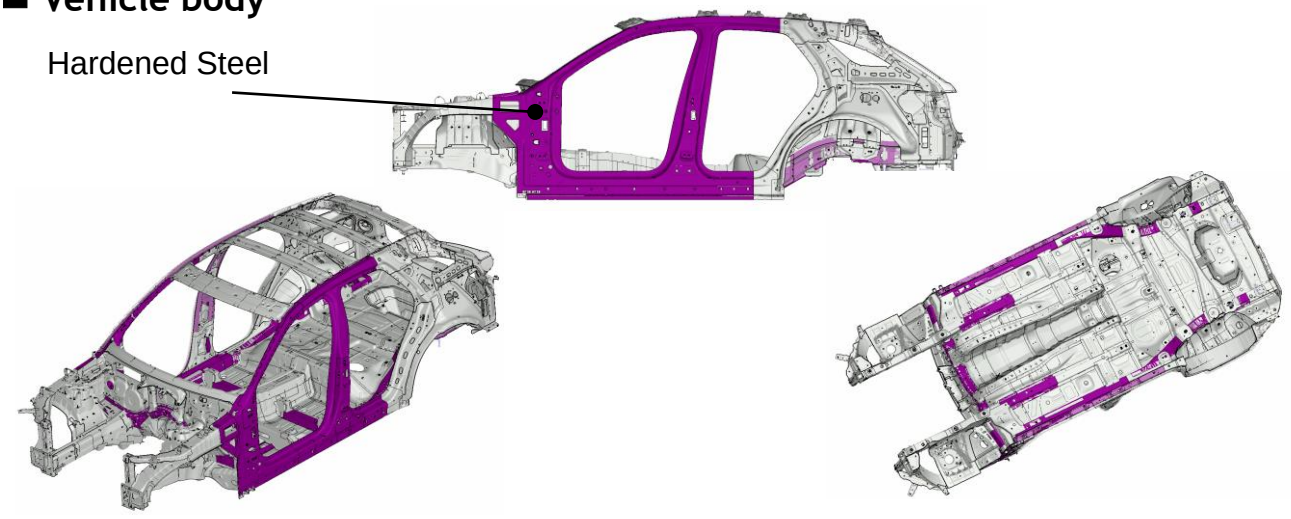

5. Stored energy / liquids / gases / solids

■ **Fuel Tank** 66ℓ 66ℓ

■ **Battery** 12 V

6. In case of fire

■Gas Strut

➔ Risk of missile effect

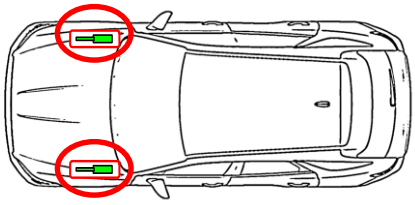

■Pedestrian protection active system

➔ Pyrotechnical actuator

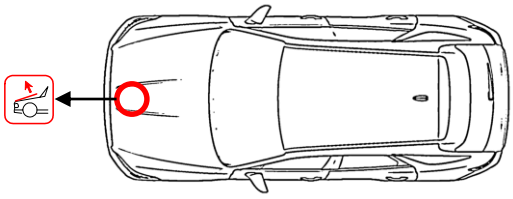

8. Towing / transportation / storage

OK :

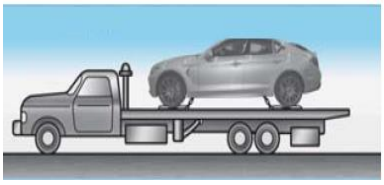

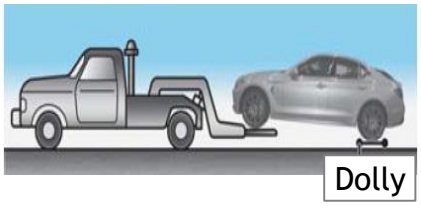

Notice :

A towed AWD (All Wheel Drive) vehicle must have all its wheels off the ground. Keep it on a flatbed tow truck or use dollies

Not OK :

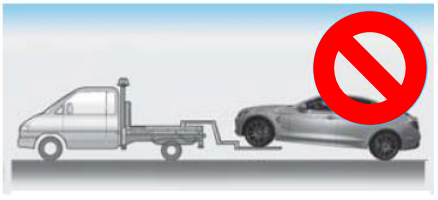

Notice :

Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment. Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.