




RENAULT

ZOE

All types
(2013 -)

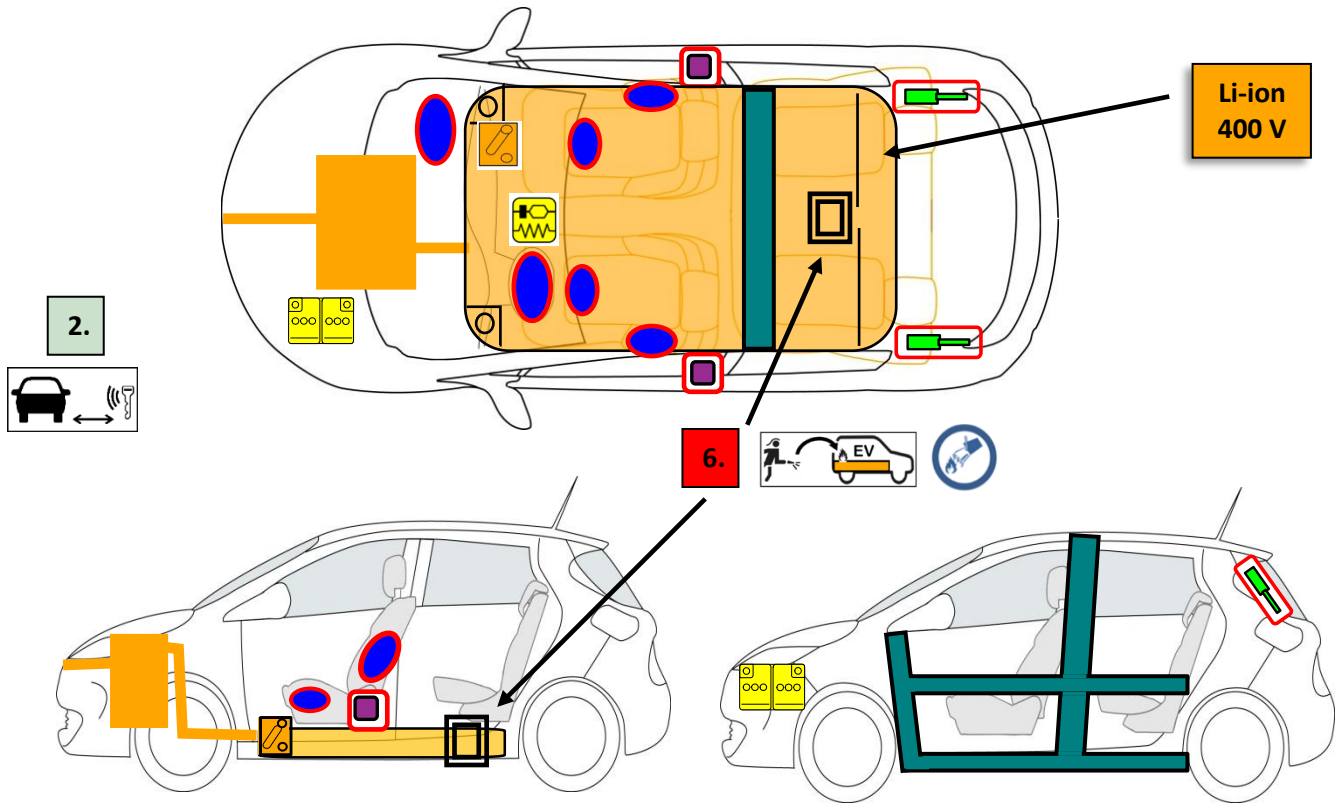

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra-capacitor, low-voltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra-capacitor

In consultation with



MINISTÈRE DE L'INTÉRIEUR

Internal reference

Version date

Version

Page

RS-B10-2013-3

17/05/2021


3

1 / 4

1. Identification / recognition





2. Immobilisation / stabilisation / lifting

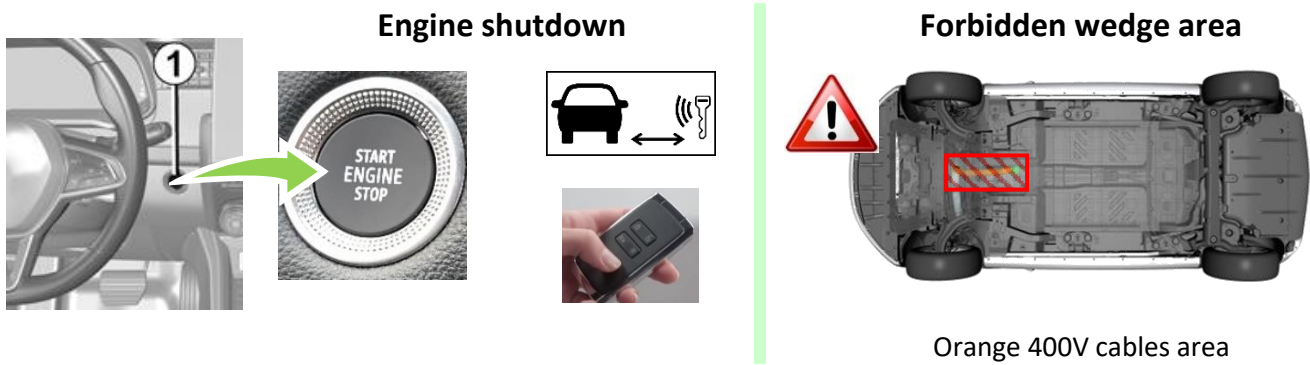

3. Disable direct hazards / safety regulations

12 Volts Battery

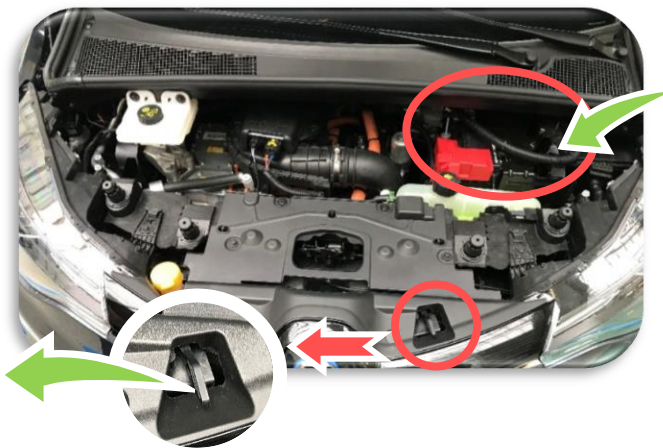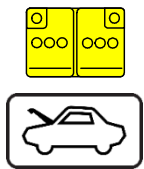

1 - Engine shutdown

2 - Disconnect the negative terminal (-)

In consultation with



MINISTÈRE DE L'INTÉRIEUR

Internal reference

Version date

Version

Page


RS-B10-2013-3

17/05/2021

3


2 / 4

400 Volts battery

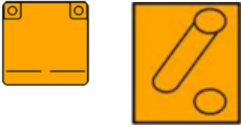

Only if cutting operation is necessary :

Disconnection of the 400 Volts battery by removing the service plug.

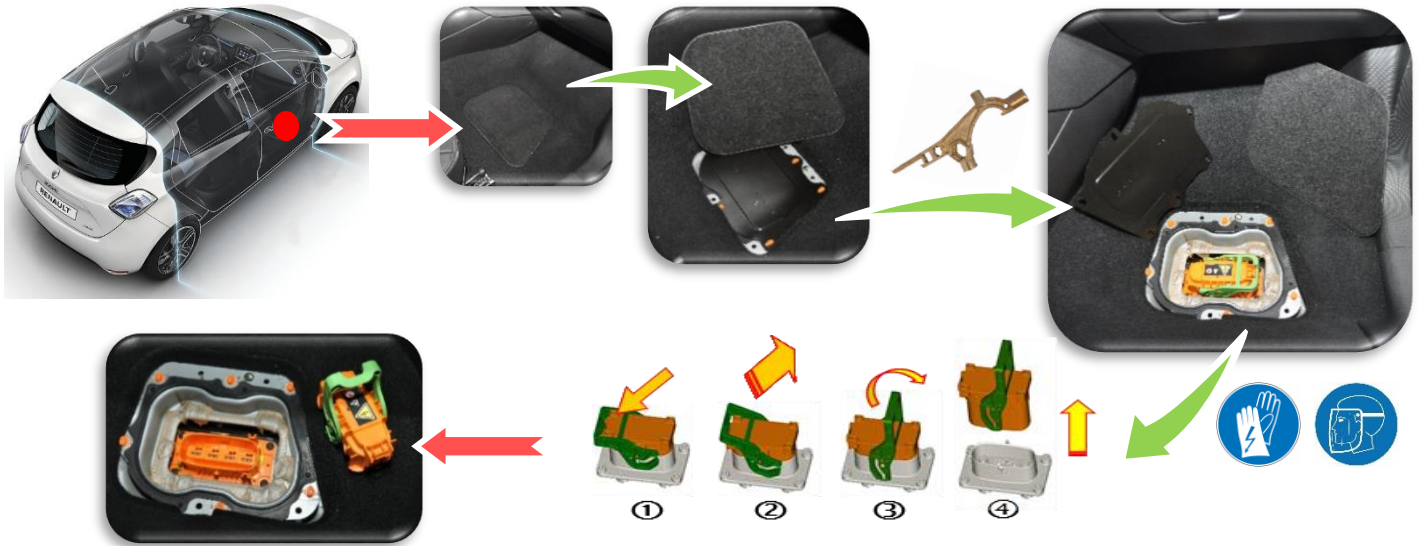


5. Stored energy / liquids / gases / solids

	Lithium-ion	400 V	<i>ZE 50 Electric</i>	52 kW.h
			<i>ZE 40 Electric</i>	41 kW.h
			<i>ZE</i>	22 kW.h

6. In case of fire

Extinguishing a traction battery fire propagation

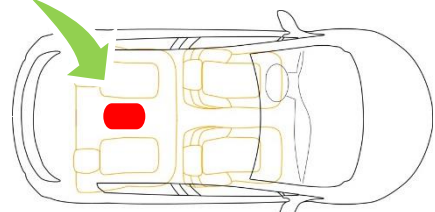

Fireman access under the back seat

If traction battery on fire : → Water extinguishing by filling

Tailgate gas struts



Risk of missile effect of tailgate gas struts

7. In case of submersion



No electrical hazard

8. Towing / transportation / storage



10. Explanation of pictograms used

		Electric Vehicle			Remove smart key
		Use thermal Infrared camera			Bonnet
		Special battery access			Dangerous voltage
Electrical protection gloves 	Face shield 	Breathing apparatus (BA) 	Use water to extinguish the fire 	Don't brake, nor open 	