




Note: The illustration shows the maximum possible equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Battery low voltage
	Gas strut / Preloaded spring		High strength zone		High voltage component		Low voltage device that disconnects high voltage		Fuse box disabling high voltage
	Battery pack, high-voltage		High voltage power cable						
	Cable cut								

1. Identification / recognition

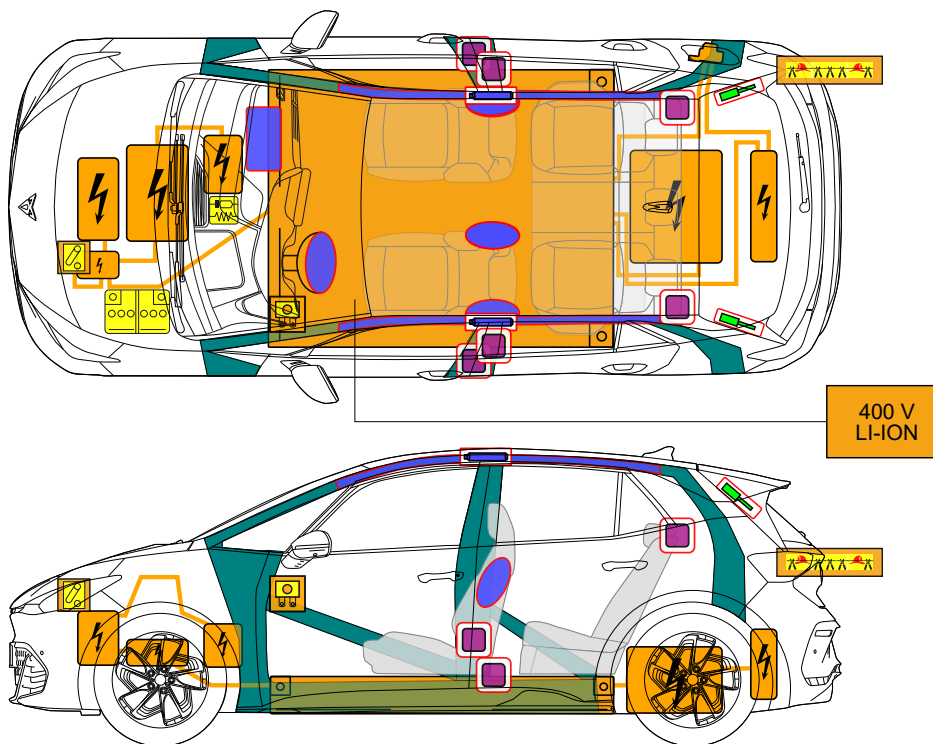

The electric motor does not emit noise. The powermeter on the instrument panel indicates whether the electric motor is disconnected "OFF" or connected and ready for operation "READY". Wear appropriate protective equipment!

Front logo



Charging port




Rear logo



2. Immobilisation / stabilisation / lifting

Immobilise the vehicle

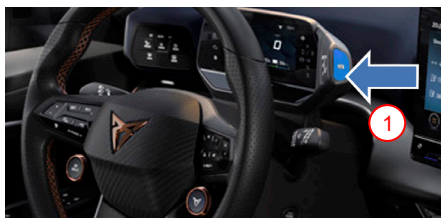

1. Engage the electric parking brake.
2. Switch off the ignition (see Chapter 3).
3. Secure the vehicle to prevent it from moving.


Suitable lifting points




 Suitable lifting points
 Battery pack, high voltage

3. Disable direct hazards / safety regulations

Switch off ignition (powermeter "OFF")

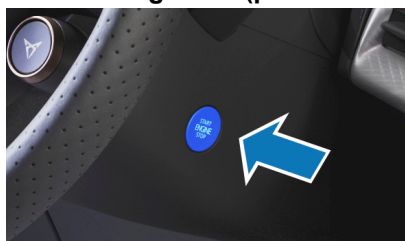

Press the START-ENGINE-STOP button located on the steering column without pressing the brake pedal.



Keep the vehicle key and/or smartphone app further than 5 m away from the vehicle.

High-voltage system deactivation

In case of accidents with airbag deployment, the high-voltage system is automatically and immediately deactivated upon detecting the airbag deployment. The high-voltage is de-energized approximately 20 seconds after deactivation.




Do not touch, cut, or open damaged high-voltage components, cables, or batteries!
Wear appropriate protective equipment!

Option 1: From the engine compartment




1. Locate the service connector
2. Remove the cover
3. Open the connector according to indications "a" and "b"

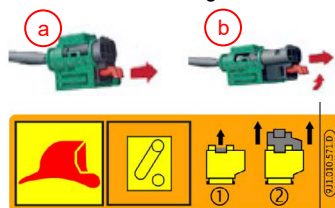

Brand	Model	Year of launch	Internal reference	Creation date	Update date	Version	Page
CUPRA	BORN	2024	VSS-K110E54	22/07/2025	22/07/2025	1	2 / 4

Option 2: From the passenger compartment




Left-hand drive vehicle:



Release the cover next to the steering column with a screwdriver.

Right-hand drive vehicle:

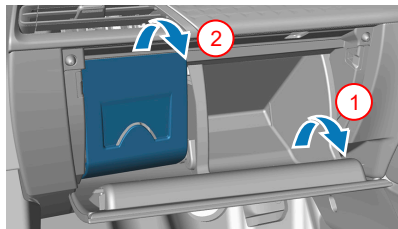


1. Open the glove box.
2. Unclip the fuse access cover.



Pull the tag to disconnect the fuse.




Option 3: From the rear of the vehicle

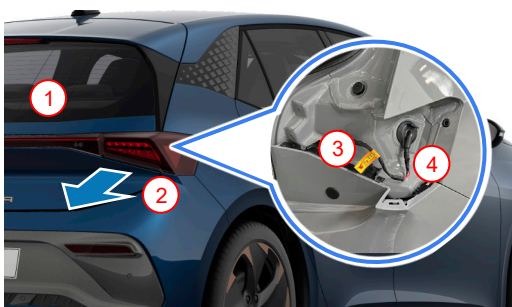


1. Open the boot.
2. Remove the right rear light.
3. Locate the cable with the cut label.
4. Cut the cable.

Disconnecting the 12-volt battery




1. Locate the 12 V battery located on the left side of the engine compartment.
2. Disconnect the negative terminal of the battery from the on-board network.


Disconnecting the charging station (emergency unlock)

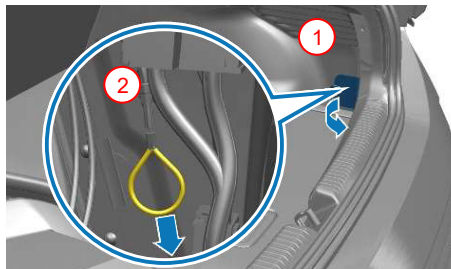

1. Remove the cover located on the right side of the boot.
2. Locate and pull the yellow ring.
3. Disconnect the charger.

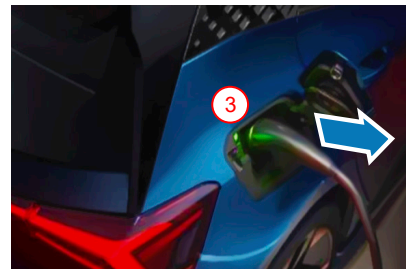

4. Access to the occupants

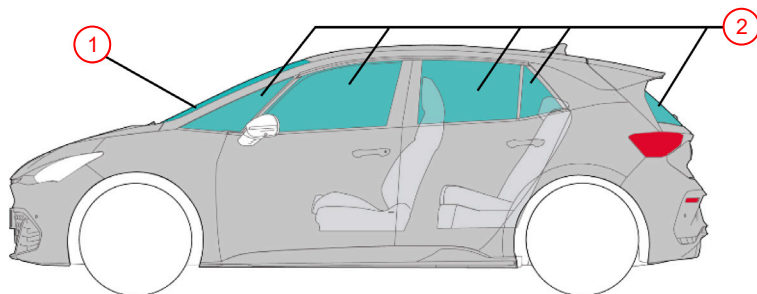

Glass types:

- ① Laminated safety glass
- ② Tempered glass

Brand	Model	Year of launch	Internal reference	Creation date	Update date	Version	Page
CUPRA	BORN	2024	VSS-K110E54	22/07/2025	22/07/2025	1	3 / 4



5. Stored energy / liquids / gases / solids

						12 V
						400 V Lithium-ion
If the battery system is mechanically deformed, there is a risk of a thermal reaction in the high-voltage battery. Monitor the temperature of the high-voltage battery!						

6. In case of fire

Lithium-ion batteries can self-ignite or reignite after extinguishing the fire! Wear appropriate protective equipment!						

7. In case of submersion

After rescuing the vehicle from the water, deactivate the high-voltage system, the 12-volt electric system (see Chapter 3) and drain the water. If a vehicle is submerged in salt water there is a higher risk of fire in the high-voltage battery. Wear appropriate protective equipment!						
---	--	--	--	--	--	--

8. Towing / transportation / storage

Lithium-ion batteries can self-ignite or reignite after extinguishing the fire! Wear appropriate protective equipment!						
If the vehicle has been involved in an accident or if the HV battery is damaged or unstable: Deactivate the high-voltage system (see Chapter 3). Park the vehicle at a safe distance, at least 5 m, from buildings and other vehicles (quarantine area).						
✓						Do not tow a vehicle that has been involved in an accident on its drive axles.
✗						There is no towing eye on the rear of the vehicle.

9. Important additional information

Rescue manual for CUPRA: <https://www.cupraofficial.com>

10. Explanation of pictograms used

Flammable	Corrosives	Hazardous to the human health	Environmental hazard	Acute toxicity	Warning, electricity	General warning sign	Use water to extinguish the fire
Use thermal Infrared camera	Remove smart key	Boot	Bonnet	Electric vehicle			

Brand	Model	Year of launch	Internal reference	Creation date	Update date	Version	Page
CUPRA	BORN	2024	VSS-K110E54	22/07/2025	22/07/2025	1	4 / 4