



1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

Brand logo



Model name

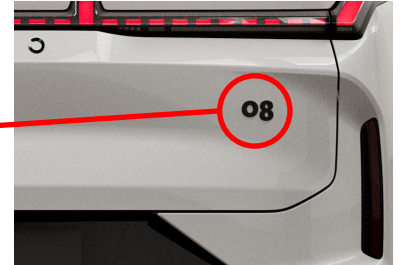

2. Immobilisation / stabilisation / lifting

Immobilise vehicle:



1. Block wheels
2. Push the P (park) button to select the P (park) position

Lifting points:



Appropriate lifting points




High voltage battery

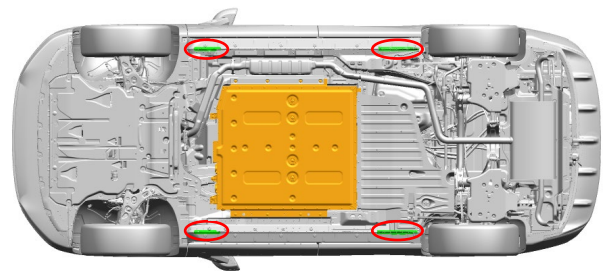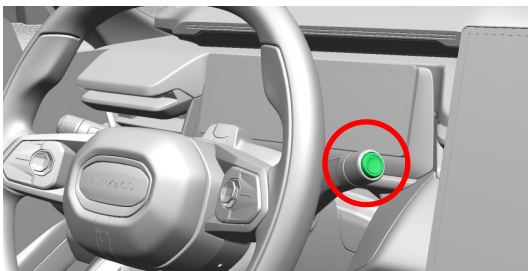





3. Disable direct hazards / safety regulations

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.

Main method:

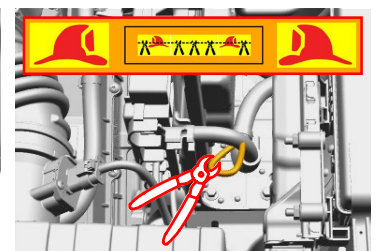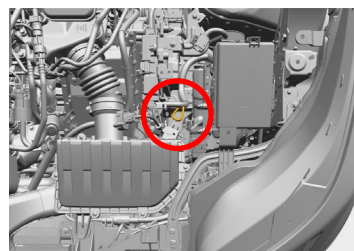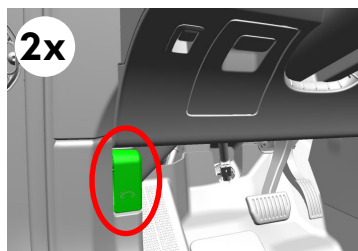


Alternative method 1:

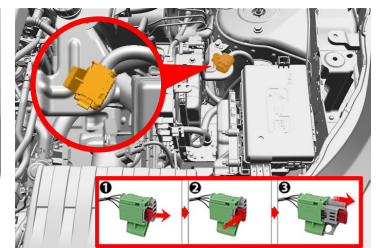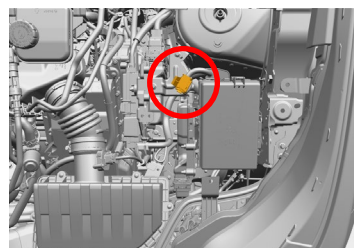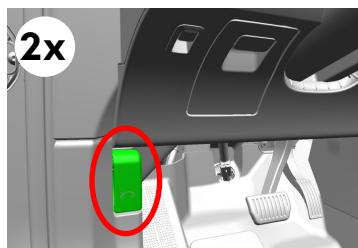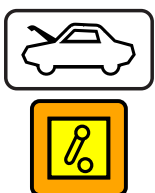




Alternative method 2:

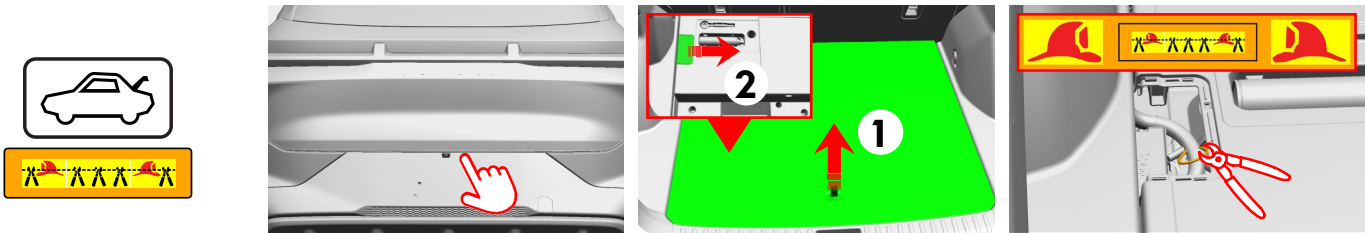

Disconnect 12 Volt battery:

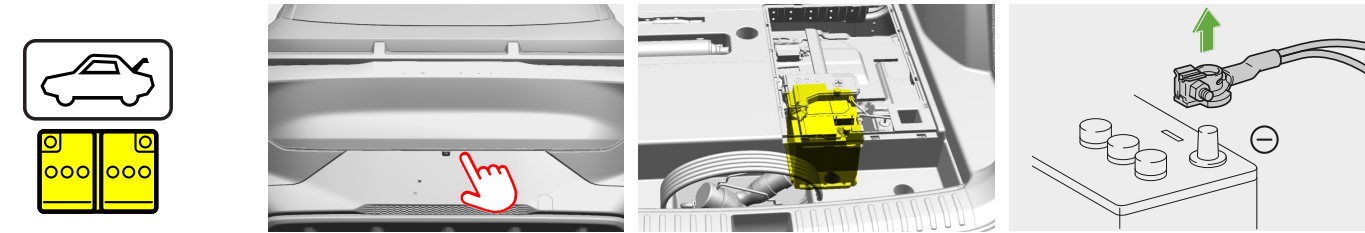


Safety instructions


Always assume the vehicle is powered, even if it is silent!
Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.

4. Access to the occupants


Opening side doors from outside with power

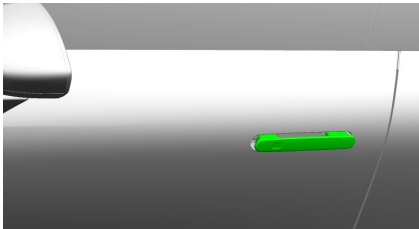


Opening side doors from inside without power

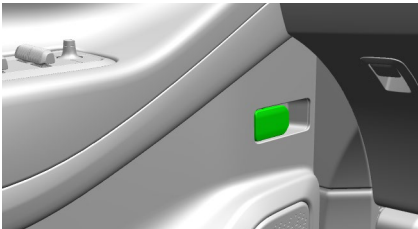


High strength zone

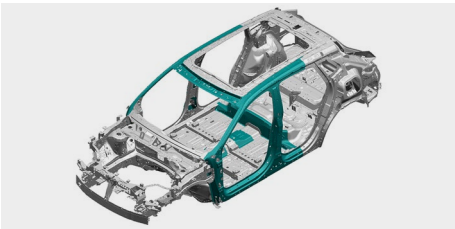

Seat adjustment

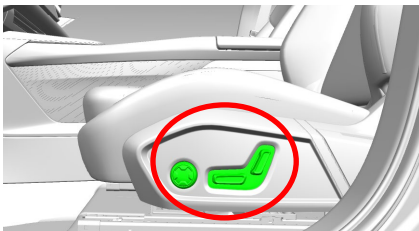


Steering wheel, tilt control

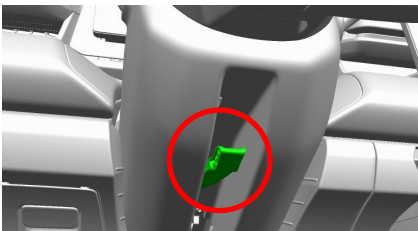

Glass types

A. Laminated glass
B. Tempered glass

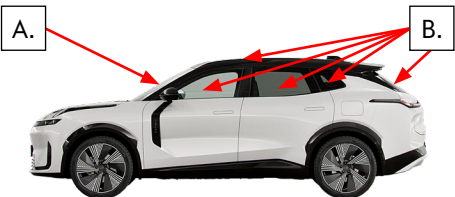

5. Stored energy / liquids / gases / solids

	400V						
	12V						
	R-1234yf 750g +/-20g						
	60 L						



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway. Wear appropriate PPE.



6. In case of fire

Extinguishing method for the high voltage (HV) battery:



LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.




7. In case of submersion


- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

8. Towing / transportation / storage


Recovery hook storage

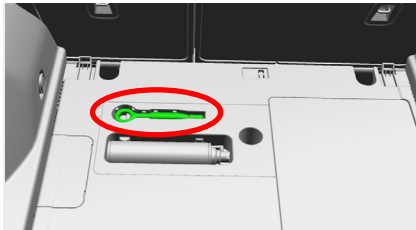

Location front hook

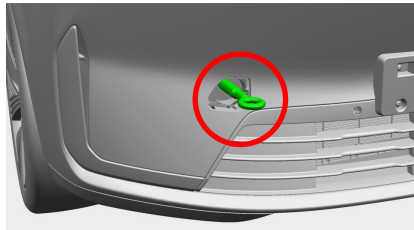

Location rear hook

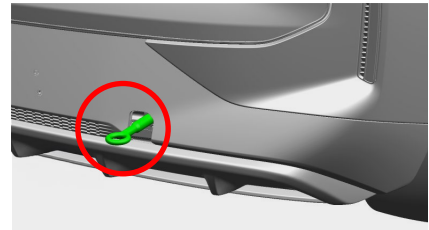

Towing



STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE ≥ 5 M FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.



10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group 2		Flammable		Air-conditioning component
	Remove smart key		Hazardous to the human health		Use water to extinguish the fire
	Warning, Electricity		Acute toxicity		Use thermal Infrared camera
	General warning sign		Corrosives		Bonnet
	Warning; low temperature		Explosive		Boot